


SECTION 3 POWER TRAIN SYSTEM

Group 1	Structure and Function	3-1
Group 2	Operational Checks and Troubleshooting	3-66
Group 3	Tests and Adjustments	3-77
Group 4	Disassembly and Assembly	3-80

SECTION 3 POWER TRAIN SYSTEM

GROUP 1 STRUCTURE AND FUNCTION

1. POWER TRAIN COMPONENT OVERVIEW

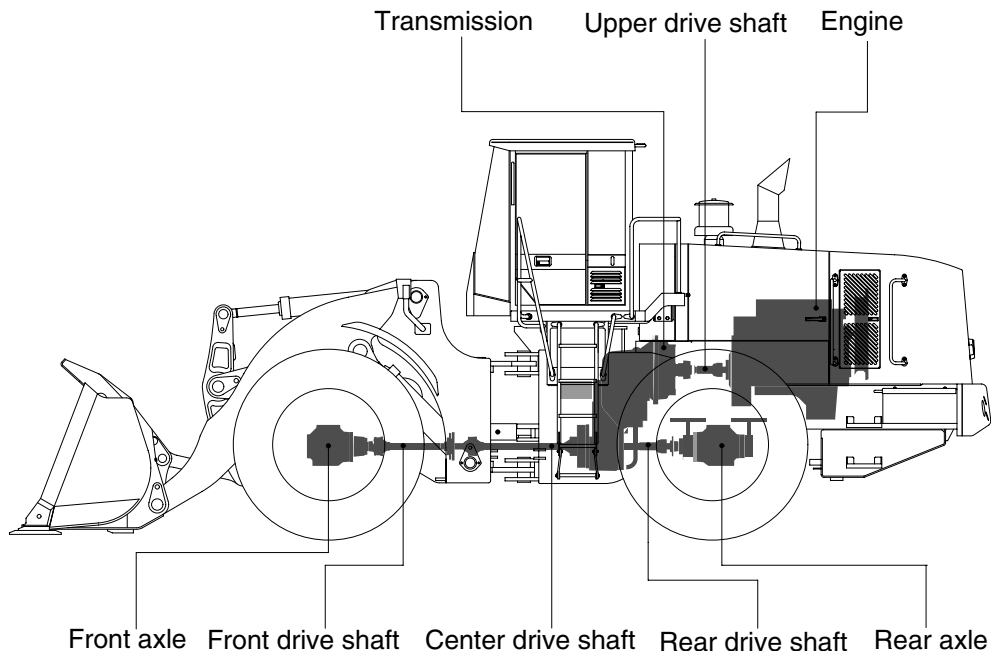

7807APT01

The power train consists of the following components:

- Transmission
- Front, center, rear and upper drive shafts
- Front and rear axles

Engine power is transmitted to the transmission through the torque converter.

The transmission is a hydraulically engaged four speed forward, three speed reverse countershaft type power shift transmission. A calliper-disc type parking brake is located on the front axle.


The transmission outputs through universal joints to three drive shaft assemblies. The front drive shaft is a telescoping shaft which drives the front axle. The front axle is mounted directly to the loader frame. The front axle is equipped with limited slip differential.

The rear axle is mounted on an oscillating pivot. The rear axle is equipped with limited slip differential.

The power transmitted to front axle and rear axle is reduced by the pinion gear and ring gear of differential. It then passes from the differential to the sun gear shaft(Axle shaft) of final drive.

The power of the sun gear is reduced by a planetary mechanism and is transmitted through the planetary hub to the wheel.

HYDRAULIC CIRCUIT

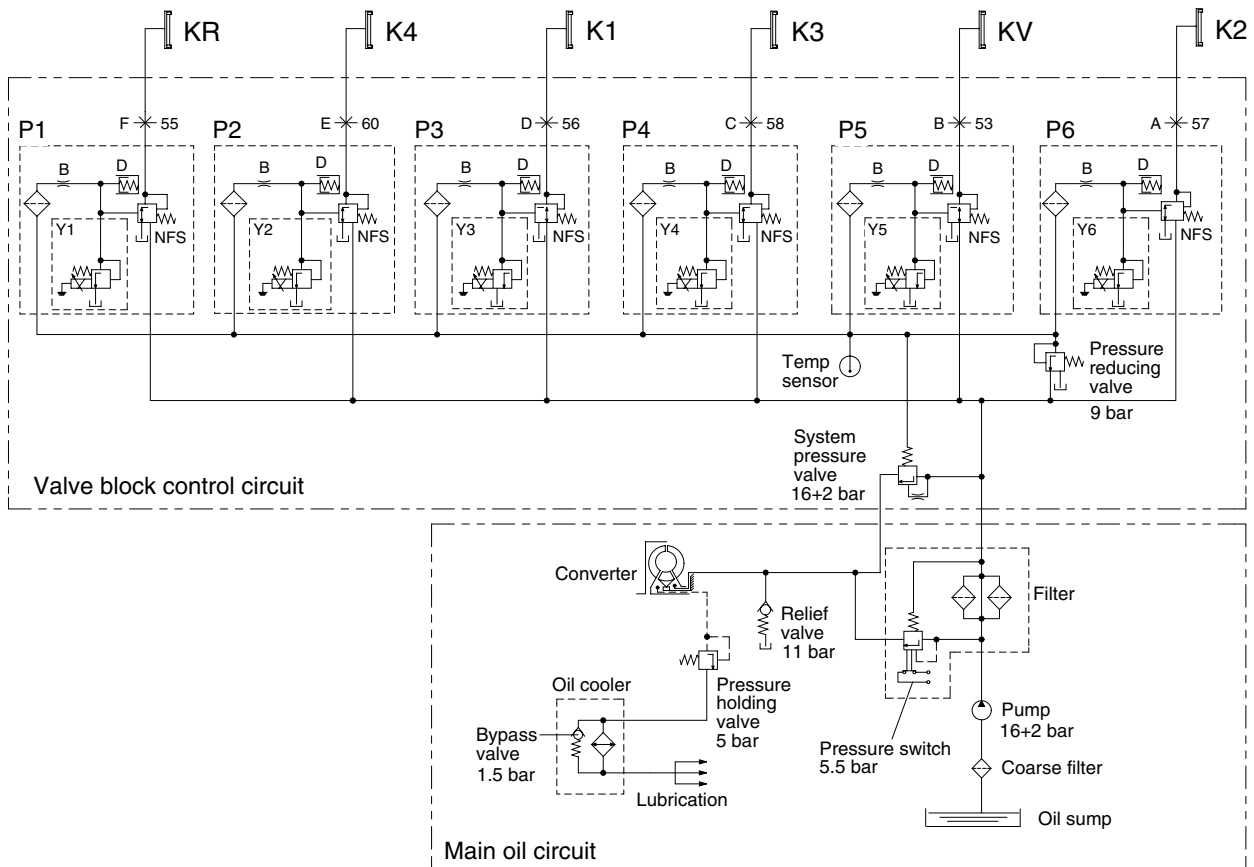


7803APT02

- | | | | |
|-----|------------------------------|-------|------------------------------|
| NFS | Follow-on slide | P3 | Proportional valve-clutch K1 |
| D | Vibration damper | P4 | Proportional valve-clutch K3 |
| B | Orifice | P5 | Proportional valve-clutch KV |
| P1 | Proportional valve-clutch KR | P6 | Proportional valve-clutch K2 |
| P2 | Proportional valve-clutch K4 | Y1~Y6 | Pressure regulator |

Pressure regulator active	Speed							Neutral	Engaged clutch	Positions on the valve block	No. of the measuring points
	Forward				Reverse						
	1	2	3	4	1	2	3				
Y1					X	X	X		KR	F	60
Y2				X					K4	E	55
Y3	X				X				K1	D	56
Y4			X	X			X		K3	C	58
Y5	X	X	X						KV	B	53
Y6		X				X			K2	A	57
Engaged clutch	K1,KV	KV,K2	K3,KV	K4,K3	KR,K1	KR,K2	KR, K3		-	-	-

X : Pressure regulator under voltage

2. TORQUE CONVERTER

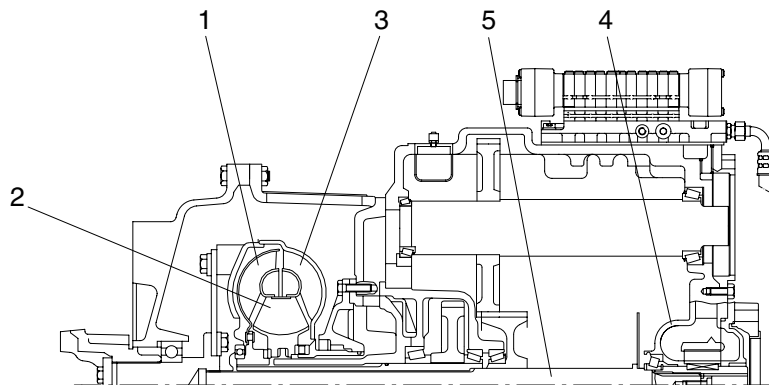

7803APT03

- | | | | | | |
|---|--------|---|-------------------|---|-------------|
| 1 | Pump | 3 | Turbine | 5 | Input shaft |
| 2 | Stator | 4 | Transmission pump | | |

The converter is working according to the Trilok-system, i.e. it assumes at high turbine speed the characteristics, and with it the favorable efficiency of a fluid clutch.

The converter will be defined according to the engine power so that the most favorable operating conditions for each installation case are given.

The Torque converter is composed of 3 main components :
Pump wheel - turbine wheel - stator(Reaction member)

These 3 impeller wheels are arranged in such a ring-shape system that the fluid is streaming through the circuit components in the indicated order.

Pressure oil is constantly streaming out of the transmission pump through the converter. In this way, the converter can fulfill its task to multiply the torque of the engine, and at the same time, the heat created in the converter is dissipated through the escaping oil.

The oil, escaping out of the pump wheel, enters the turbine wheel and is there inverted in the direction of flow.

According to the rate of inversion, the turbine wheel and with it also the output shaft, receive a more or less high reaction moment. The stator(Reaction member), following the turbine, has the task to invert again the oil which is escaping out of the turbine and to deliver it under the suitable discharge direction to the pump wheel.

Due to the inversion, the stator receives a reaction moment.

The relation turbine moment/pump moment is called torque conversion. This is the higher the greater the speed difference of pump wheel and turbine wheel will be.

Therefore, the maximum conversion is created at standing turbine wheel.

With increasing output speed, the torque conversion is decreasing. The adoption of the output speed to a certain required output moment is infinitely variable and automatically achieved by the torque converter.


If the turbine speed is reaching about 80% of the pump speed, the conversion becomes 1.0 i.e. the turbine moment becomes equal to that of the pump moment.

From this point on, the converter is working similar to a fluid clutch.

A stator freewheel serves to improve the efficiency in the upper driving range, it is backing up in the conversion range the moment upon the housing, and is released in the coupling range.


In this way, the stator can rotate freely.

Function of a hydrodynamic torque converter (Schematic view)

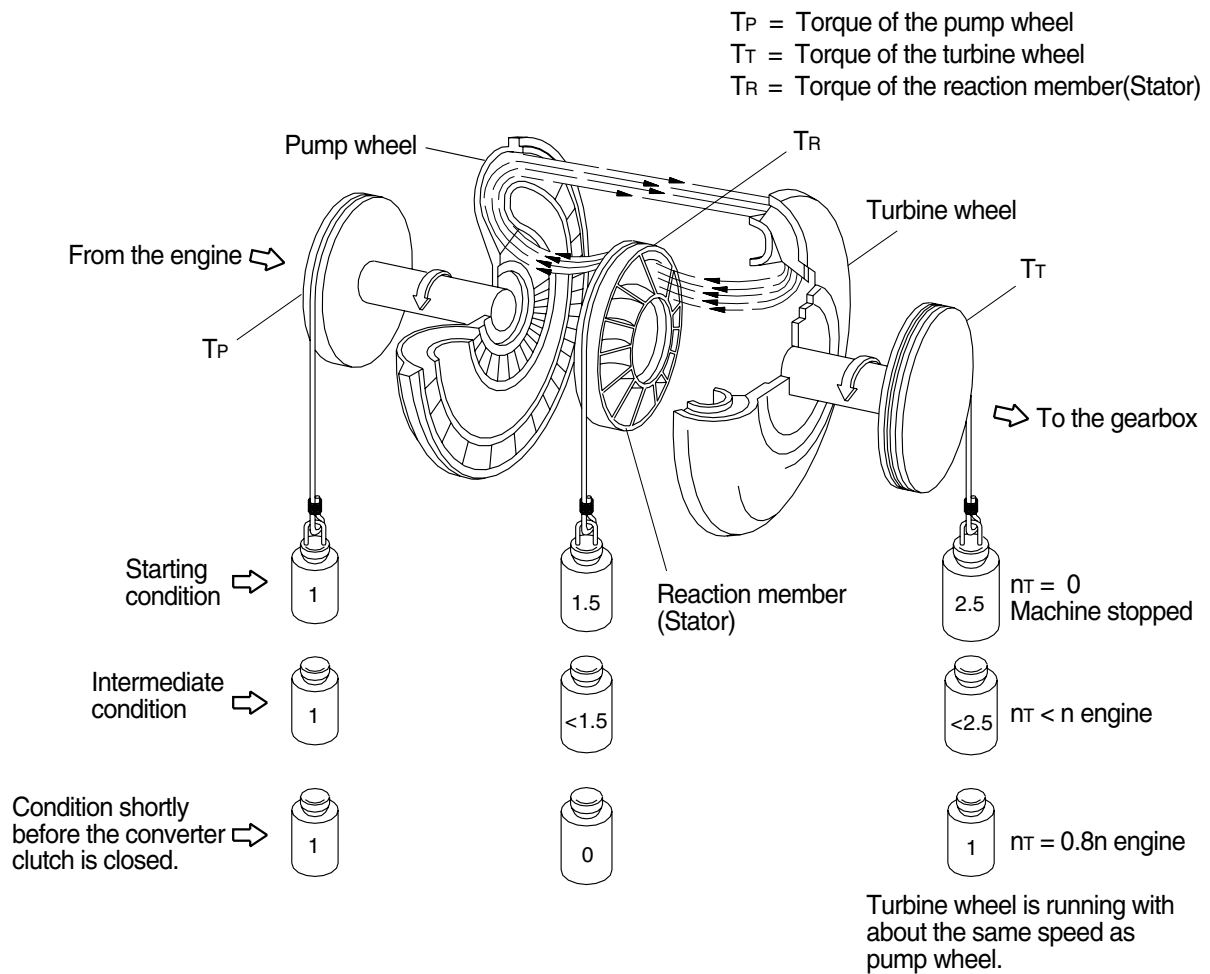

3. TRANSMISSION


1) LAYOUT

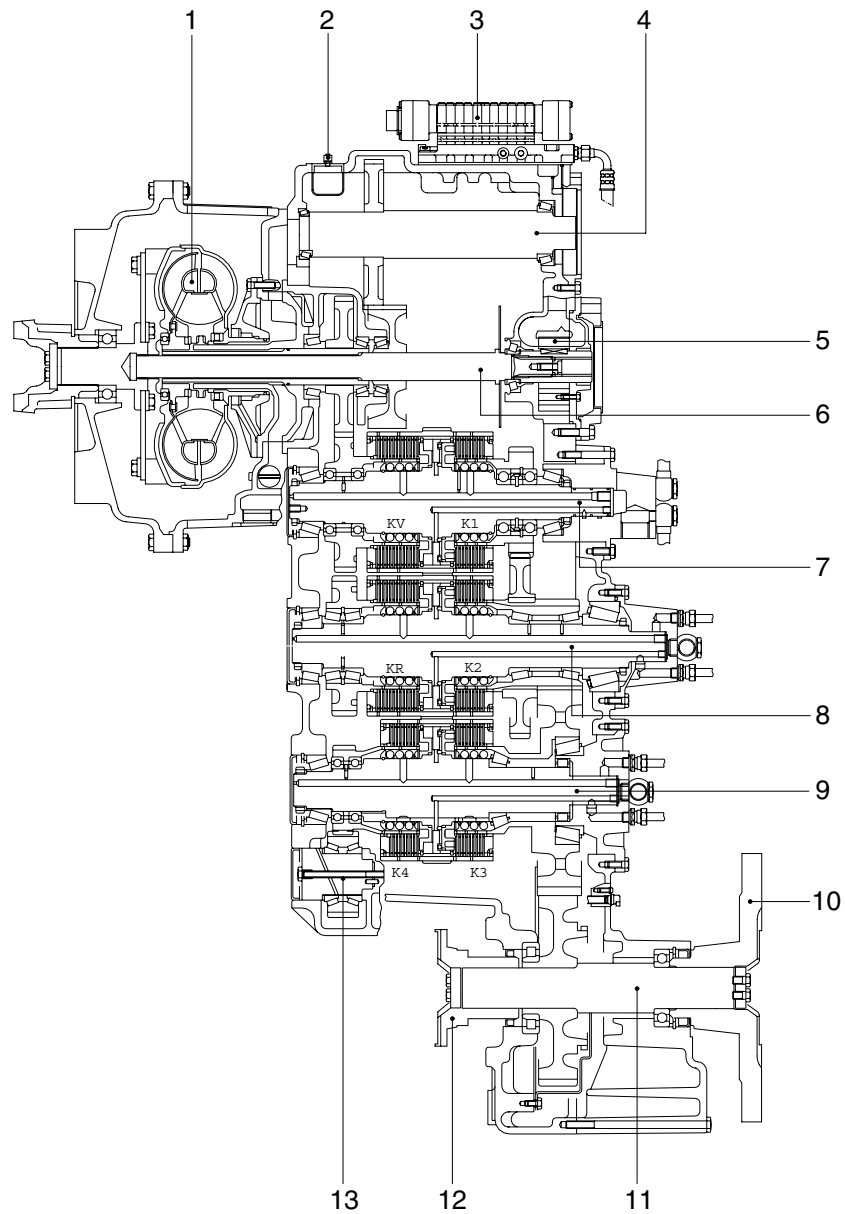

- | | | | |
|---|---------------------------------|----|--------------------------------|
| 1 | Torque converter | 8 | Clutch axle-KR/K2 |
| 2 | Breather | 9 | Clutch axle-K4/K3 |
| 3 | Electro-hydraulic shift control | 10 | Output flange (Rear side) |
| 4 | 2nd power take off | 11 | Output shaft |
| 5 | Transmission pump | 12 | Output flange (Converter side) |
| 6 | 1st power take off | 13 | Countershaft |
| 7 | Clutch axle-KV/K1 | | |

7807APT03

2) INSTALLATION VIEW

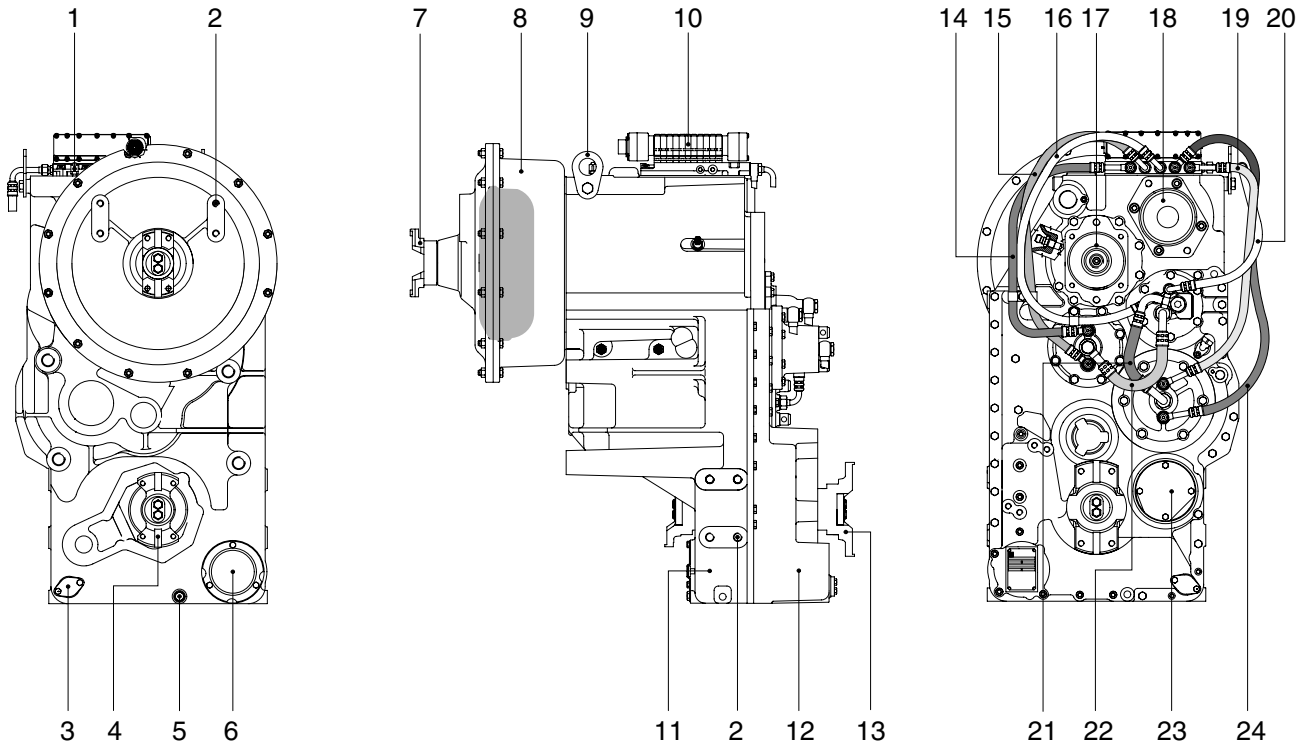

7807APT05

- | | |
|--|---|
| 1 Breather | 12 Cover |
| 2 Transmission suspension M16 | 13 Output flange |
| 2' Transmission suspension M20 | 14 Pressure oil line clutch K2 |
| 3 Attachment possibility for an oil filler tube with oil dipstick. | 15 Pressure oil line clutch KR |
| 4 Output flange | 16 Pressure oil line clutch KV |
| 5 Oil drain plug | 17 1st power take off |
| 6 Coarse filter | 18 2nd power take off |
| 7 Input flange | 19 Pressure oil line clutch K3 |
| 8 Converter bell | 20 Pressure oil line clutch K1 |
| 9 Lifting lug | 21 Lubricating oil line S2 clutch K4/K3 |
| 10 Electrohydraulic shift controller | 22 Lubricating oil line S1 clutch KR/K2 |
| 11 Gearbox housing | 23 Emergency steering pump connection(Optional) |
| | 24 Pressure oil line clutch K4 |


3) OPERATION OF TRANSMISSION

(1) Forward

① Forward 1st

In 1st forward, forward clutch and 1st clutch are engaged.

Forward clutch and 1st clutch are actuated by the hydraulic pressure applied to the clutch piston.

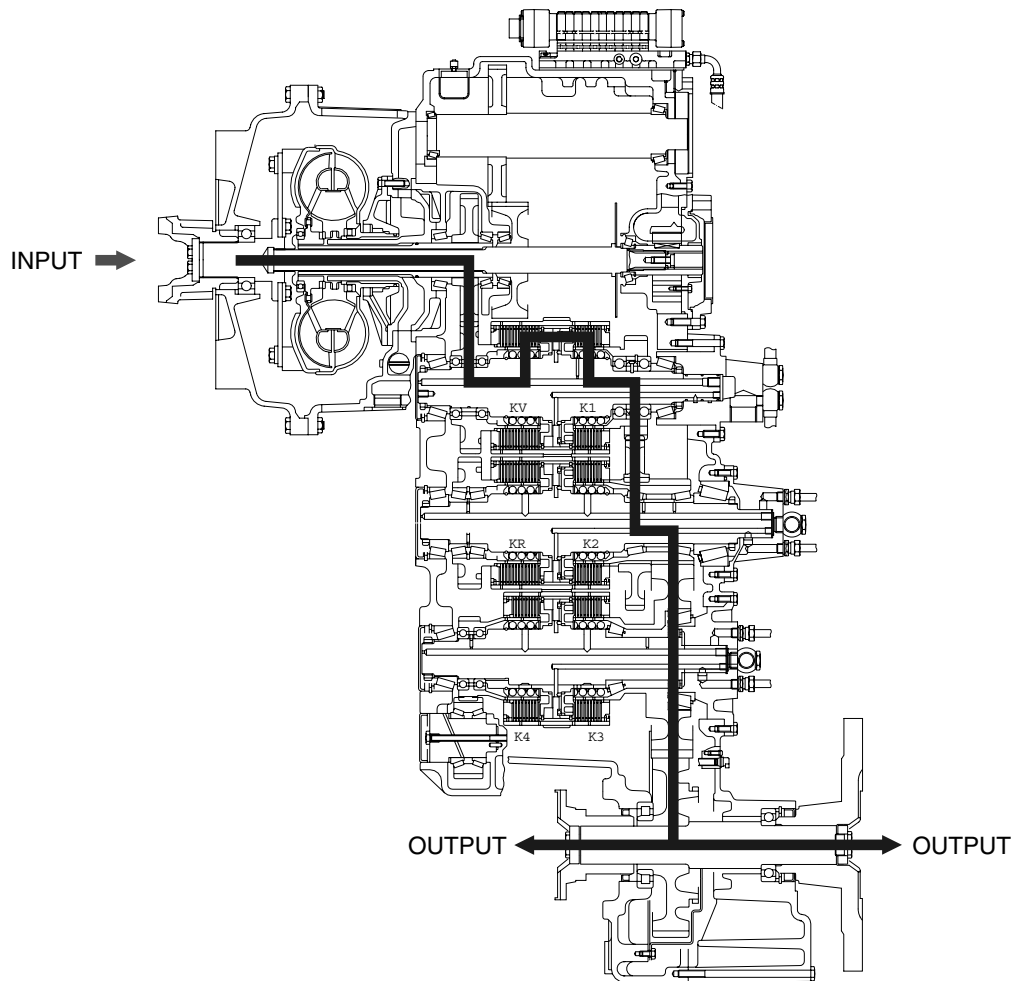


7807APT07

② **Forward 2nd**

In 2nd forward, forward clutch and 2nd clutch are engaged.

Forward clutch and 2nd clutch are actuated by the hydraulic pressure applied to the clutch piston.

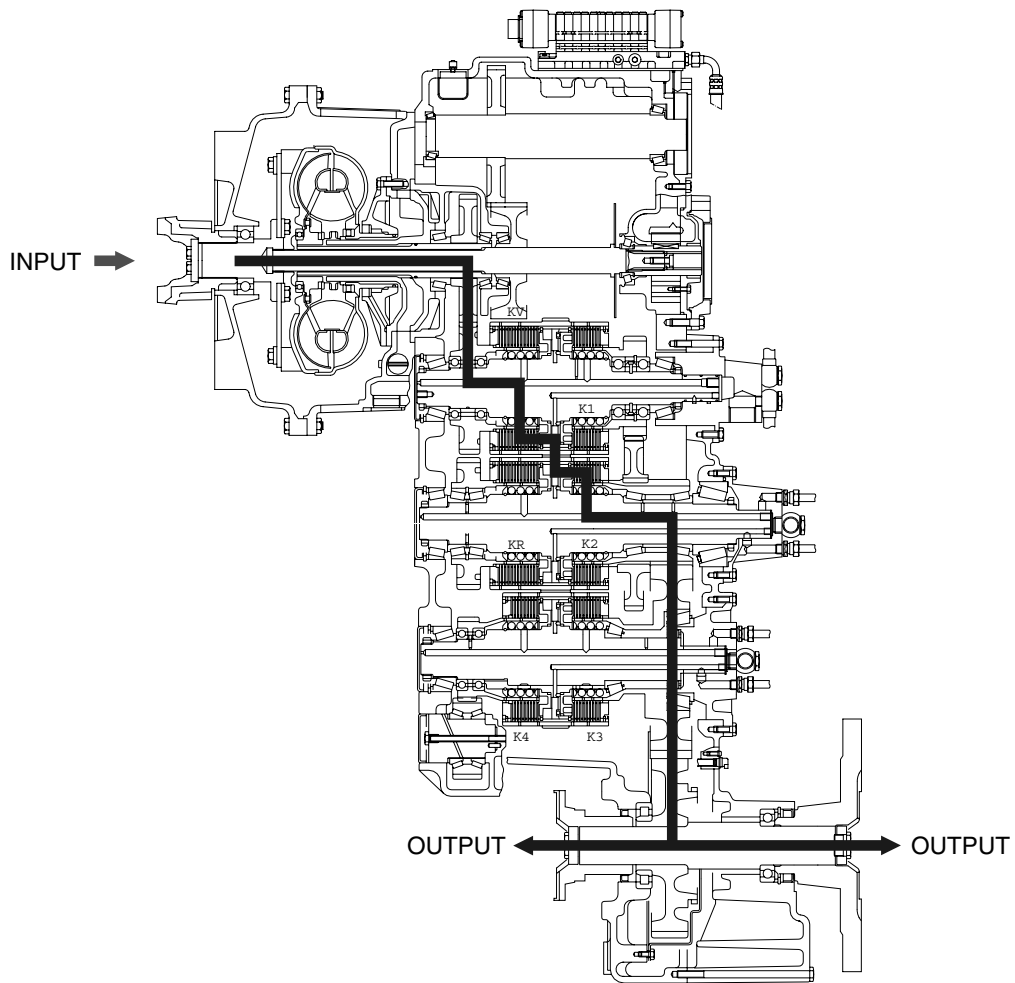


7807APT08

③ **Forward 3rd**

In 3rd forward, forward clutch and K3(3rd) clutch are engage.

Forward clutch and 3rd clutch are actuated by the hydraulic pressure applied to the clutch piston.

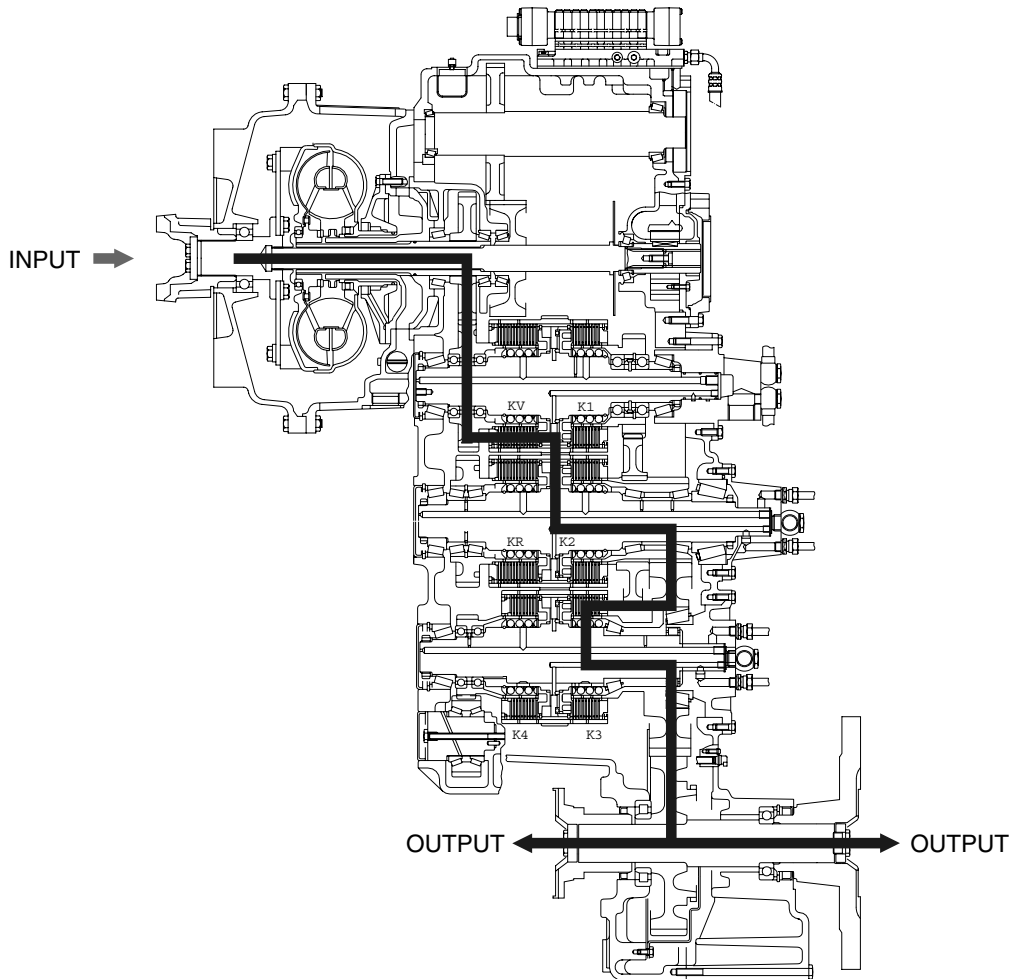


7807APT09

④ Forward 4th

In 4th forward, 4th clutch and 3rd clutch are engaged.

4th clutch and 3rd clutch are actuated by the hydraulic pressure applied to the clutch piston.

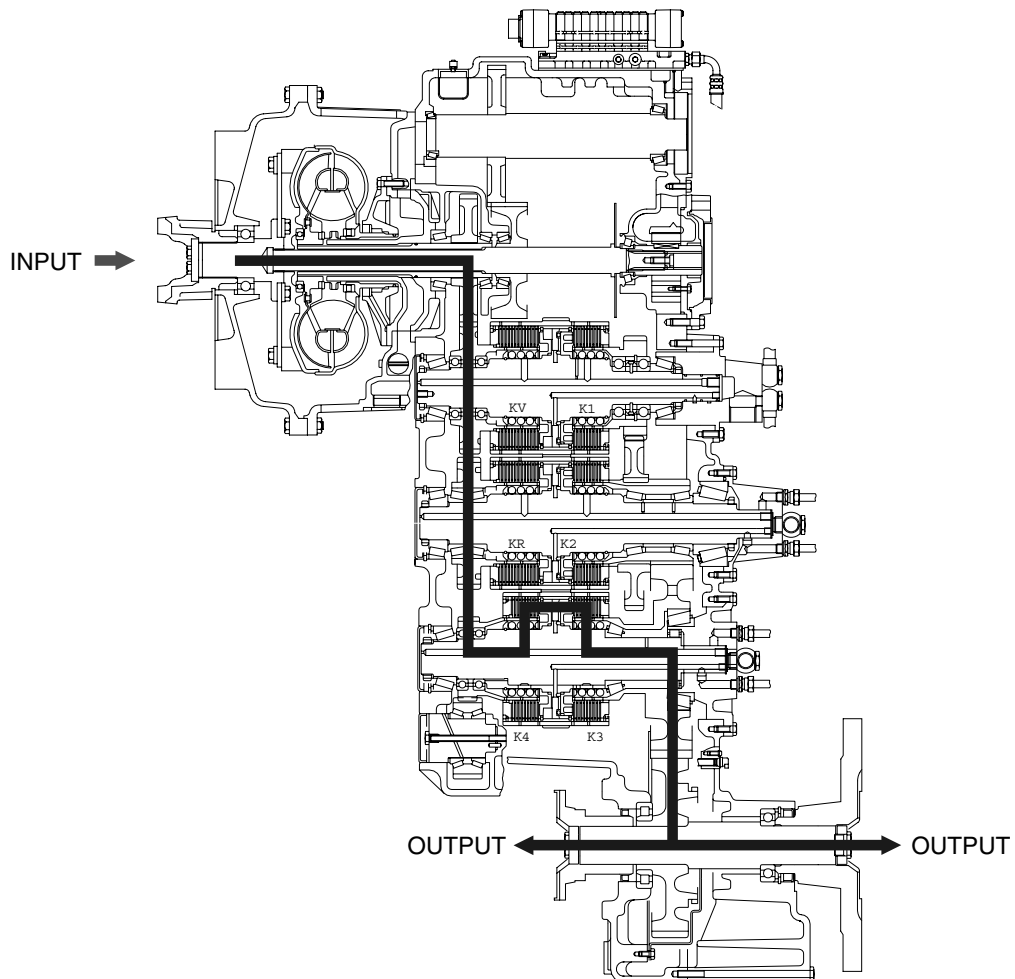


7807APT10

(2) Reverse

① Reverse 1st

In 1st reverse, reverse clutch and 1st clutch are engaged.

Reverse clutch and 1st clutch are actuated by the hydraulic pressure applied to the clutch piston.

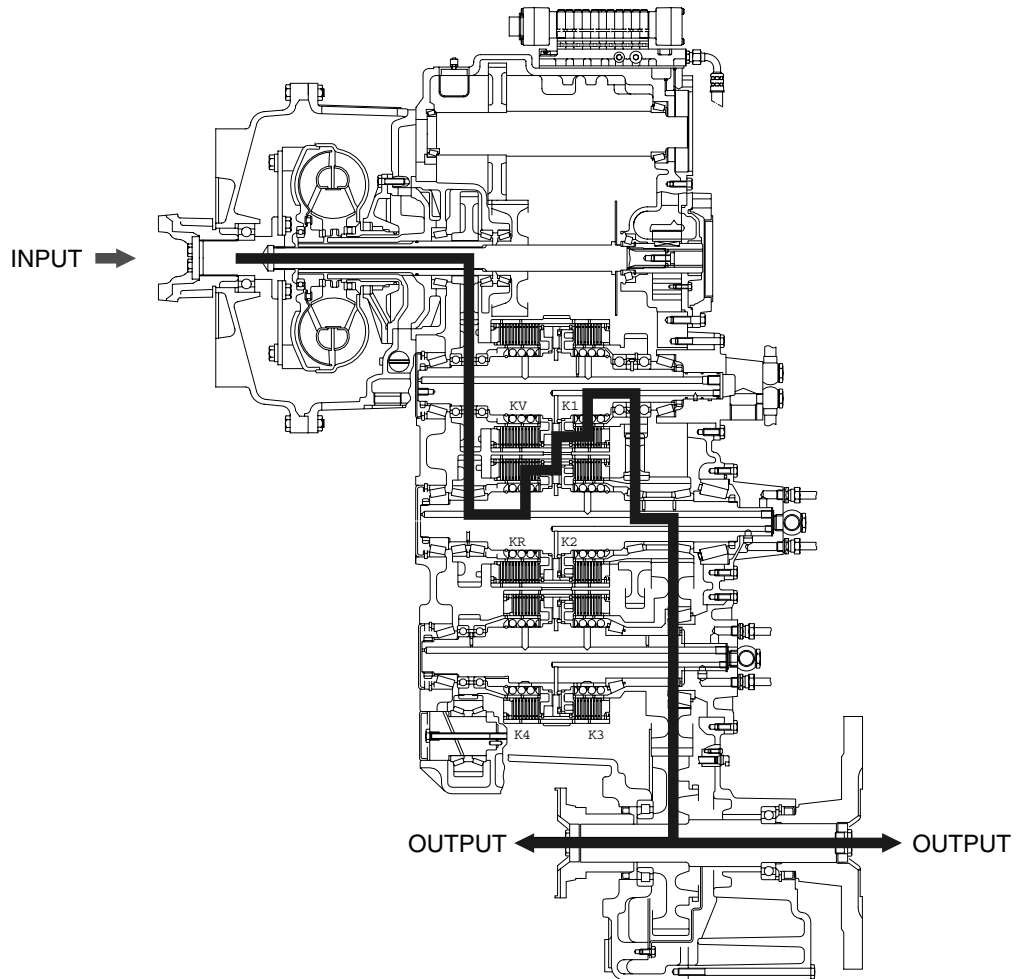


7807APT11

② Reverse 2nd

In 2nd reverse, reverse clutch and 2nd clutch are engaged.

Reverse clutch and 2nd clutch are actuated by the hydraulic pressure applied to the clutch piston.

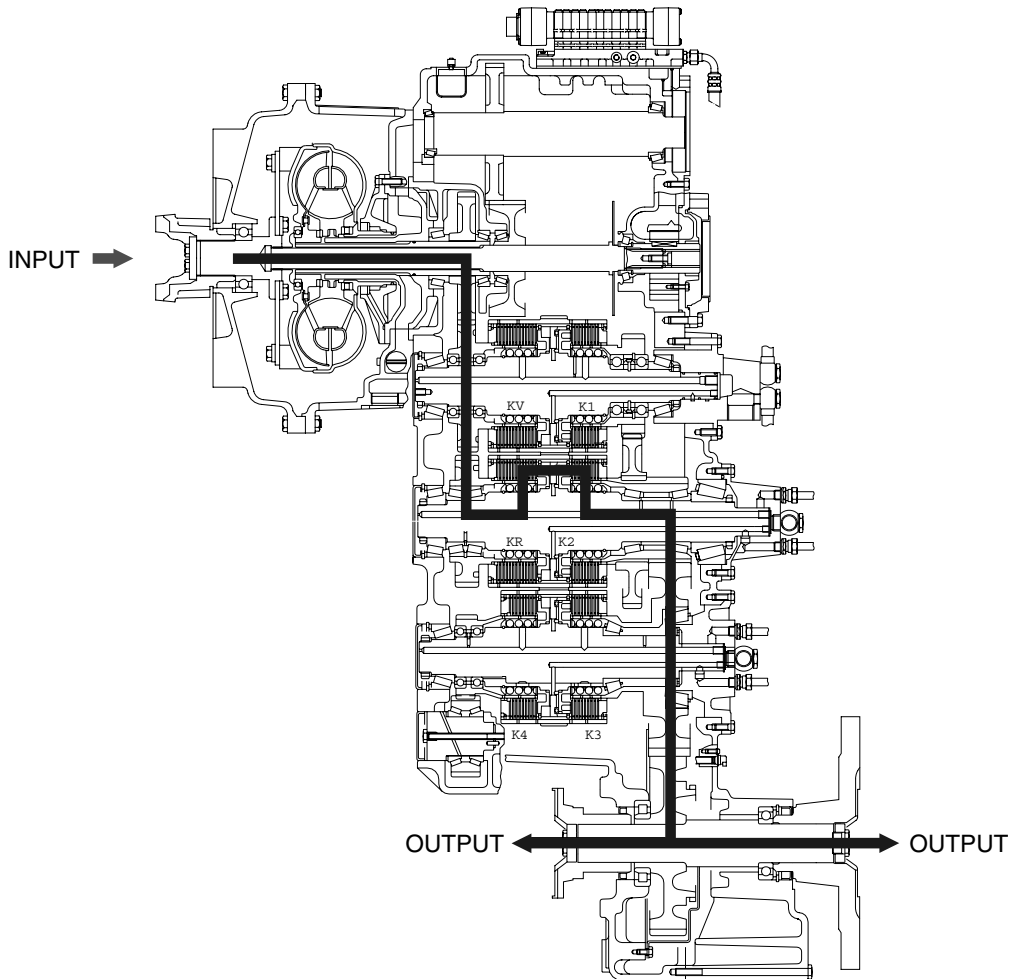


7807APT12

③ Reverse 3rd


In 3rd reverse, reverse clutch and 3rd clutch are engaged.

Reverse clutch and 3rd clutch are actuated by the hydraulic pressure applied to the clutch piston.

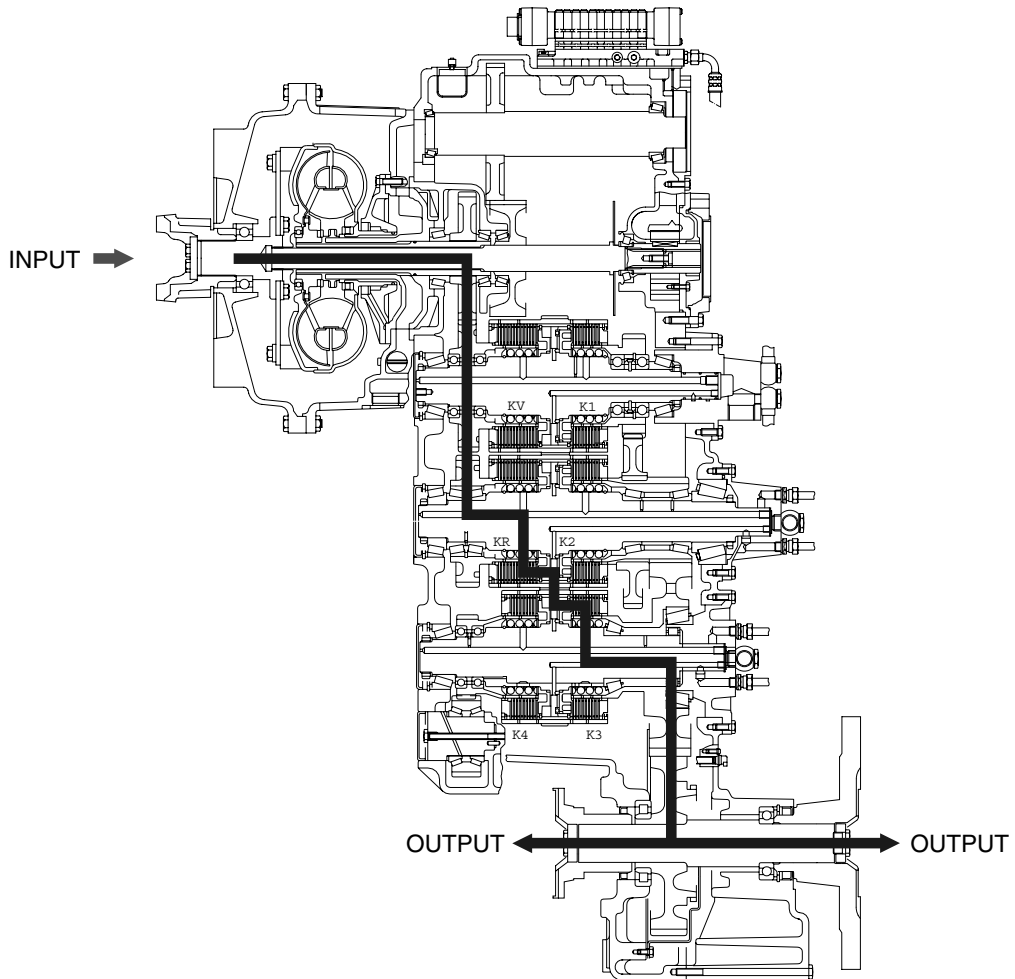

7807APT13

4) ELECTRO-HYDRAULIC SHIFT CONTROL WITH PROPORTIONAL VALVE

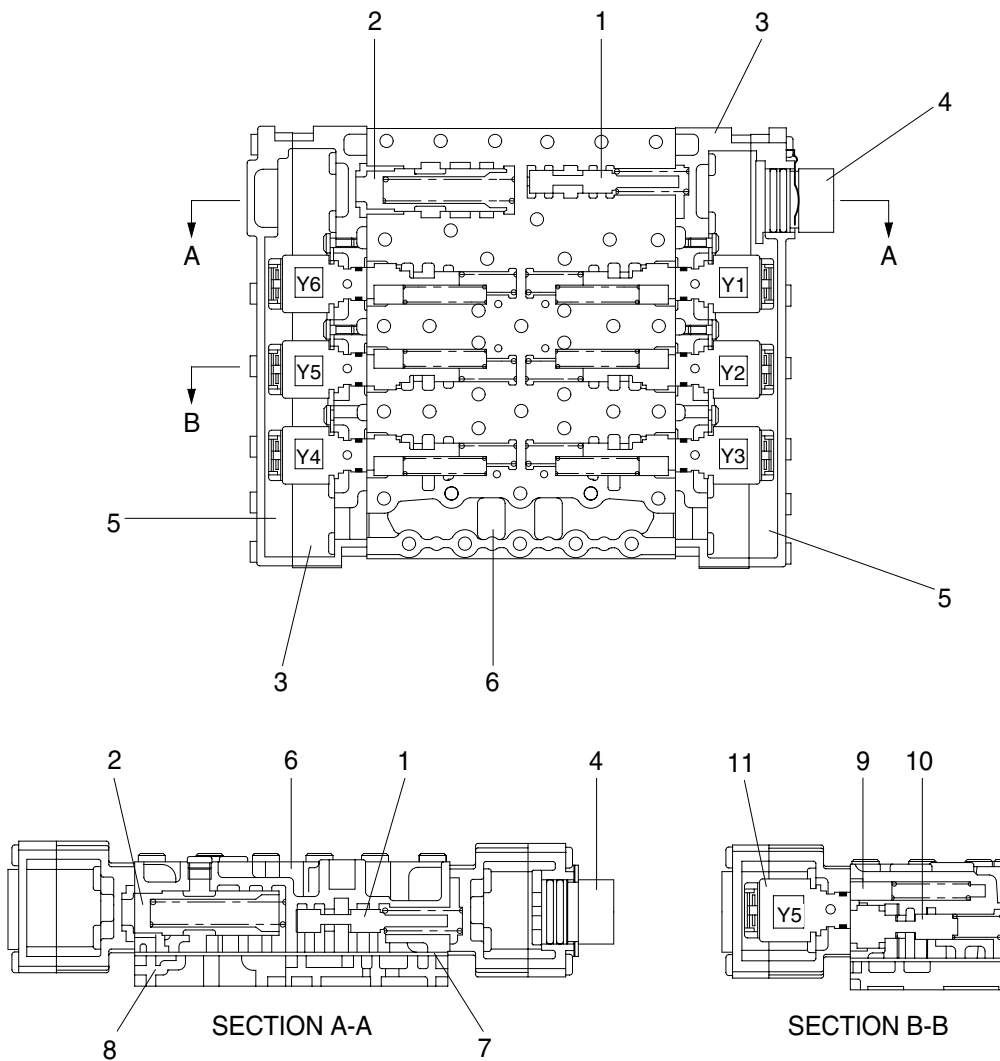

73033CV01

- | | | | |
|---|-------------------------------|----|--------------------|
| 1 | Pressure reducing valve(9bar) | 7 | Intermediate plate |
| 2 | Main pressure valve(16+2bar) | 8 | Duct plate |
| 3 | Housing | 9 | Vibration damper |
| 4 | Cable harness | 10 | Follow-on slide |
| 5 | Cover | 11 | Pressure regulator |
| 6 | Valve block | | |

Transmission control, see schedule of measuring points, hydraulic schematic and electro-hydraulic control unit at page 3-2, 3-14 and 3-78.

The six clutches of the transmission are selected via the 6 proportional valves P1 to P6. The proportional valve(Pressure regulator unit) consists of pressure regulator(e.g. Y6), follow-on slide and vibration damper.

The control pressure of 9 bar for the actuation of the follow-on slides is created by the pressure reducing valve. The pressure oil (16+2bar) is directed via the follow-on slide to the respective clutch.

Due to the direct proportional selection with separated pressure modulation for each clutch, the pressures to the clutches, which are engaged in the gear change, will be controlled. In this way, a hydraulic intersection of the clutches to be engaged and disengaged becomes possible.

This is creating spontaneous shiftings without traction force interruption.

At the shifting, the following criteria will be considered:

- Speed of engine, turbine, central gear train and output.
- Transmission temperature.
- Shifting mode(Up-, down-, reverse shifting and speed engagement out of neutral).
- Load condition(Full and part load, traction, overrun inclusive consideration of load cycles during the shifting).

The main pressure valve is limiting the maximum control pressure to 16+2 bar and releases the main stream to the converter and lubricating circuit.

In the inlet to the converter, a convert safety valve is installed which protects the converter from high internal pressures(Opening pressure 11bar).

Within the converter, the oil serves to transmit the power according to the well-known hydrodynamic principle(See torque converter, page 3-3).

To avoid cavitation, the converter must be always completely filled with oil.

This is achieved by a converter pressure holding valve, rear-mounted to the converter, with an opening pressure of at least 5bar.

The oil, escaping out of the converter, is directed to a oil cooler.

The oil is directed from the oil cooler to the transmission and there to the lubricating oil circuit so that all lubricating points are supplied with cooled oil.

In the electro-hydraulic control unit there are 6 pressure regulators installed.

5) GEAR SELECTOR(DW-3)


The gear selector is designed for the mounting on the left side of the steering column. By a rotative motion, the positions (Speeds) 1 to 4 are selected by tilting the lever, the driving direction Forward(F)-Neutral(N)-Reverse(R).

The gear selector is also available with integrated kickdown push button.

For the protection from unintended start off, a neutral interlock is installed :


Position **N** - Gear selector lever blocked in this position.

Position **D** - Driving.

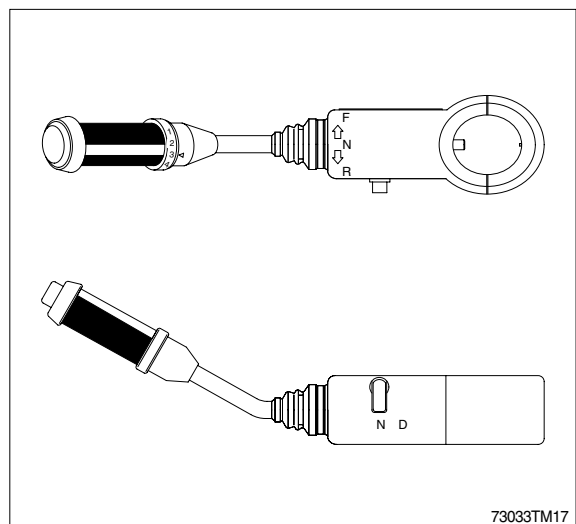


73033TM17

6) LCD

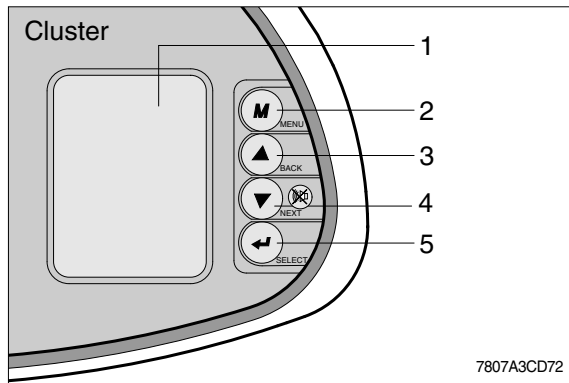

- 1 () LCD
- 2 () MENU
 - Display main menu
 - Return to the normal display
- 3 () BACK
 - Return to the previous menu
- 4 () NEXT, BUZZER STOP
 - Move to the next selection
- 5 () SELECT
 - Activate the currently chosen item

(1) Normal display

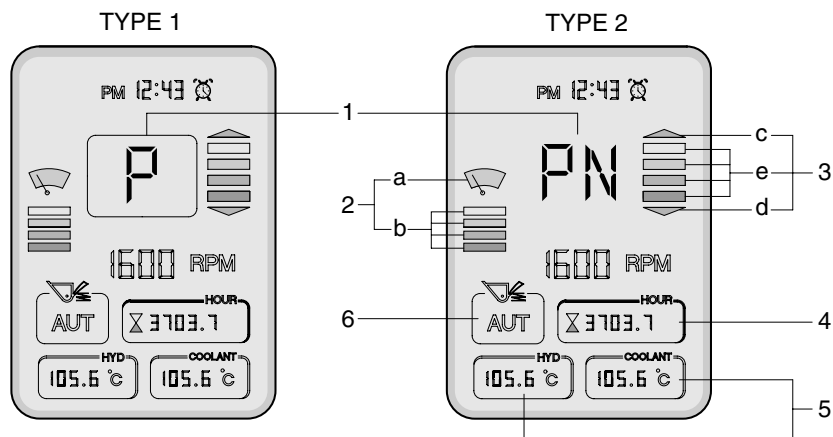


7807A3CD93

No	Symbol	Meaning	Remark
1		Forward, reverse, neutral	LCD type 1 Display symbol during AEB mode
	F, R, N	Forward, reverse, neutral	LCD type 2 Display symbol during AEB mode
	1, 2, 3, 4	Actual gear	-
	P	Parking brake mode active	-
2	a	Wiper motor intermittently operating	-
	b	When operating intermittently, it shows an operating time interval.	-
3	c, d	Up and down shifting	c : Forward, d : Reverse Automatic mode
	e	Pre-selected gear	-
4		Hour meter	Display the total operation hours of the machine
5		Engine coolant temperature	Display in accordance with selected items
6 (Option)		AUT	Ride control mode active Ride control switch AUTO position, see page 7-36
		ON	Ride control mode active Ride control switch ON position, see page 7-36
		OFF	Ride control mode turn off Ride control switch MIDDLE position, see page 7-36
		Reversible fan active	-
		Buzzer stop	-
		Mirror defrost active	-

※ Both type1 and type2 are LCD modes and they can be changed each other by operator's selection.

(2) Display map

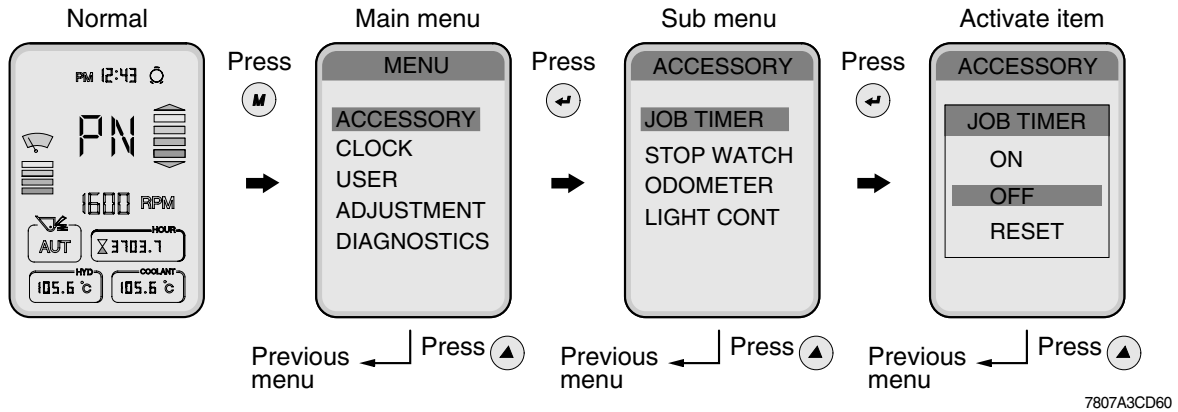


Main group	Sub group	Meaning	Display on LCD	
Accessory	Job timer	<ul style="list-style-type: none"> Measure the various job time. Press : Display ON, OFF or RESET 		
	Stop watch	<ul style="list-style-type: none"> Measures time in seconds. Press : Start. Press again : Stop. 	-	
	Odometer	Latest	Distance until recent times.	
		Total	Total distance.	
	Light control	<ul style="list-style-type: none"> Control of LCD display luminosity. Brightness control : , . 	-	
Clock	Time set	<ul style="list-style-type: none"> When 12H or 24H is selected, the current hour appears. , : input, : setting. 	PM 12:43	
	Clock ON/OFF	<ul style="list-style-type: none"> : Clock display ON or OFF. 		
	Alarm	1	<ul style="list-style-type: none"> Alarm setting. It is possible to set 3 alarms. Stop alarming : 	
		2		
3				
User	Alternate idle	<ul style="list-style-type: none"> Raise the idle rpm to 1200rpm automatically to warm up the engine. 	-	
	Auto 1/2	Mode 1 (1st-4th)	Automatic travelling speed is applied from 1st to 4th gear.	-
		Mode 2 (2nd-4th)	Automatic travelling speed is applied from 2nd to 4th gear.	-
	Quick shift	Mode 1 (Down/Up)	Press button once : Shift down, press button again ; shift up.	-
		Mode 2 (Down)	Press button every time : Shift to lower gear respectively.	-
	Aux-sw	Auto Select	<ul style="list-style-type: none"> ON : Transmission auto condition. OFF : Transmission semi-auto condition. 	
		Clutch Cut-off	<ul style="list-style-type: none"> ON : Clutch cut-off is activated. OFF : Clutch cut-off is cancelled. 	-
	Cooling fan Control	Forward	Forward active	-
Reverse		Reverse active*		

★Reverse mode cleans out quickly dirt and dust on radiator and cooler by reverse rotation of cooling fan.

Main group	Sub group	Meaning	Display on LCD display	
Adjustment	Unit	· Choose between metric and inch unit display.		
	Wiper Intermittence	· When using the intermittent function of wiper motor, it regulates operation time.		
	Alternate RPM	· Regulate idle rpm. · Press , : Adjust idle rpm increments (or decrement) by 25rpm.	-	
	Pulse	· Press : Modification.	-	
	AEB	· It controls the disk interval of the transmission, automatically.	-	
	ENG/KOR	· English : Display in English. · Korean : Display in Korean.	-	
	Display 1/2	· Type 1 : Indicate with the symbol. · Type 2 : Indicate with a letter.		
Diagnostics	Machine	Fault Code	· Error code display. · Refer to page 3-19.	-
		Monitor	· Hydraulic temperature and battery voltage display. · Press : Display ON or OFF.	
	Engine	Fault Code	· Error code display. · Consult a Hyundai dealer to error code.	-
		Monitor	· Engine coolant temperature display. · Press : Display ON or OFF.	
	Transmission	Fault Code	· Error code display. · Consult a Hyundai dealer to error code.	-
		Monitor	Transmission oil temperature display. · Press : Display ON or OFF.	
	Version		· Display the controller(MCU) and cluster version.	-

(3) Machine fault code

When selecting the fault code menu, it shows all of the fault codes which mean abnormal conditions of present time.

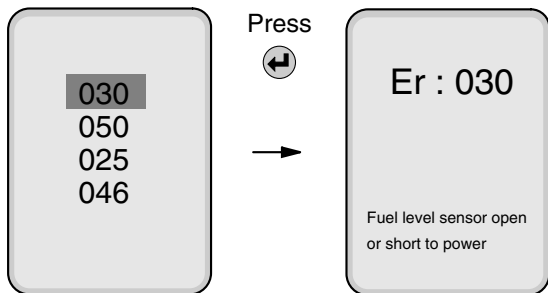

77073CD60

- ※ To go out from fault explanation window, press button.
(Press , to go out to first menu.)
- ※ **No error** will be indicated in case that there's no fault.

Description	Code	Meaning	Remark
Electrical system	010	Power input voltage low	Below 18V
	011	Power input voltage high	Above 38V
	012	Alternator voltage low	Below 5V
	013	Alternator voltage high	Above 36V
	014	Buzzer circuit open or short to ground	
	015	Buzzer circuit short to power	
Hydraulic system	020	Hydraulic oil temperature sensor open or short to power	
	021	Hydraulic oil temperature sensor short to ground	
Engine system	030	Fuel level sensor open or short to power	
	031	Fuel level sensor short to ground	
	034	Cooling fan driving valve open or short to ground	
	035	Cooling fan driving valve short to power	
T/M system	050	Auto select switch supply power open or short to power	
	051	Auto select switch supply power short to ground	
	052	Clutch cutoff supply power open or short to power	
	053	Clutch cutoff supply power short to ground	
Steering system	060	Emergency steering relay open or short to ground	Option
	061	Emergency steering relay short to power	Option
Communication	070	MCU communication error	
	071	TCU communication error	
	072	ECM communication error	

MCU : Machine control unit TCU : Transmission control unit ECM : Engine control module

(4) Display during AEB mode

Symbol	Meaning	Remarks
K1~K4, KV, KR	Calibrating clutch K1~K4, KV or KR respectively	
- And Kx	Wait for start, initialization of clutch Kx, x : 1, 2, 3, 4, V, R	
And Kx	Fast fill time determination of clutch Kx	
= And Kx	Compensating pressure determination of clutch Kx	
OK	Calibration for all clutches finished	Transmission stays in neutral, you have to restart the TCU(Ignition off/on) after removing AEB-Starter
STOP	AEB canceled(Activation stopped)	Transmission stays in neutral, you have to restart the TCU(Ignition off/on)
STOP and Kx	AEB stopped, clutch Kx can't be calibrated	Transmission stays in neutral, you have to restart the TCU(Ignition off/on)
Spanner and Kx	Kx couldn't be calibrated, AEB finished	Transmission stays in neutral, you have to restart the TCU(Ignition off/on)
△E	Engine speed too low, - Raise engine speed	
▽E	Engine speed too high, - Lower engine speed	
△T	Transmission oil temperature too low, - Heat up transmission	
▽T	Transmission oil temperature too high, - Cool down transmission	
FT	Transmission temperature not in defined range during calibration	Transmission stays in neutral, you have to restart the TCU(Ignition off/on)
FB	Operating mode not NORMAL or transmission temperature sensor defective or storing of calibrated values to EEPROM has failed	Transmission stays in neutral, you have to restart the TCU(Ignition off/on)
FO	Output speed not zero	Transmission stays in neutral, you have to restart the TCU(Ignition off/on)
FN	Shift lever not in neutral position	Transmission stays in neutral, you have to restart the TCU(Ignition off/on)
FP	Park brake not applied	Transmission stays in neutral, you have to restart the TCU(Ignition off/on)

※ **AEB mode** : It controls the disk internal of the transmission, automatically.

(5) Engine fault code(For QSM11)

Fault code No.	Reason	Effect(only when fault code is active)
111	Error internal to the ECM related to memory hardware failures or internal ECM voltage supply circuits.	Engine will not start.
115	No engine speed signal detected at both engine position sensor circuits.	Engine will die and will not start.
121	No engine speed signal detected from one of the engine position sensor circuits.	None on performance.
122	High voltage detected on the intake manifold pressure circuit.	Derate in power output of the engine.
123	Low voltage detected on the intake manifold pressure circuit.	Derate in power output of the engine.
131	High voltage detected at the throttle position signal circuit.	Severe derate(power and speed). Limp home power only.
132	Low voltage detected at the throttle position signal circuit.	Severe derate(power and speed). Limp home power only.
133	High voltage detected at the remote throttle position signal circuit.	None on performance if remote throttle is not used.
134	Low voltage detected at the remote throttle position signal circuit.	None on performance if remote throttle is not used.
135	High voltage detected at the oil pressure circuit.	No engine protection for oil pressure.
141	Low voltage detected at the oil pressure circuit.	No engine protection for oil pressure.
143	Oil pressure signal indicates oil pressure below the low oil pressure engine protection limit.	Progressive power and speed derate with increasing time after alert. If engine protection shutdown feature is enable, engine will shut down 30 seconds after red lamp starts flashing.
144	High voltage detected at the coolant temperature circuit.	Possible white smoke. Fan will stay on if controlled by the electronic control module (ECM). No engine protection for coolant temperature.
145	Low voltage detected at the coolant temperature circuit.	Possible white smoke. Fan will stay on if controlled by electronic control module (ECM). No engine protection for coolant temperature.
147	A frequency of less then 100Hz was detected at the frequency throttle signal pin of the actuator harness connector at the ECM.	Calibration dependent power and speed derate.
148	A frequency of more than 100Hz was detected at the frequency throttle signal pin of the actuator harness connector at the ECM.	Calibration dependent power and speed derate.
151	Coolant temperature signal indicates coolant temperature above 104° C(220°F).	Progressive power derate with increasing time after alert. If engine protection shutdown feature is enabled, engine will shut down 30 seconds after red lamp starts flashing.
153	High voltage detected at the intake manifold temperature circuit.	Possible white smoke. Fan will stay on if controlled by electronic control module (ECM). No engine protection for coolant temperature.
154	Low voltage detected at the intake manifold temperature circuit.	Possible white smoke. Fan will stay on if controlled by electronic control module (ECM). No engine protection for coolant temperature.
155	Intake manifold temperature signal indicates temperature above 87.8° C(190°F).	Progressive power derate with increasing time after alert. If engine protection shutdown feature is enabled, engine will shut down 30 seconds after red lamp starts flashing.
187	Low voltage detected on the ECM voltage supply line to some sensors(VSEN2 supply).	Engine will run derated. No engine protection for oil pressure and coolant level.

Fault code No.	Reason	Effect(only when fault code is active)
211	Additional machine diagnostic codes have been logged. Check other ECM's for diagnostic codes.	None on engine performance.
212	High voltage detected at the oil temperature circuit.	No engine protection for oil temperature.
213	Low voltage detected at the oil temperature circuit.	No engine protection for oil temperature.
214	Oil temperature signal indicates oil temperature above 123.9° C(225° F).	Progressive power derate with increasing time after alert. If engine protection shutdown feature is enabled, engine will shut down 30sec after the red lamp starts flashing.
219	Low oil level was detected in the Centinel™ makeup oil tank.	None on performance. Centinel™ deactivated.
221	High voltage detected at the ambient air pressure circuit.	Derate in power output of the engine.
222	Low voltage detected at the ambient air pressure circuit.	Derate in power output of the engine.
223	Incorrect voltage detected at the Centinal™ actuator circuit by the ECM.	None on performance. Centinel™ deactivated.
227	High voltage detected on the ECM voltage supply line to some sensors(VSEN2 supply).	Engine will run derated. No engine protection for oil pressure and coolant level.
234	Engine speed signal indicates engine speed is greater than 2730 rpm.	Fuel shutoff valve closes until engine speed falls to 2184 rpm.
235	Coolant level signal indicates coolant level is below the normal range.	Progressive power derate with increasing time after alert. If engine protection shutdown feature is enabled, engine will shut down 30 seconds after red lamp starts flashing.
237	Duty cycle of the throttle input signal to the primary or secondary engine for multiple unit synchronization is less than 3 percent or more than 97 percent.	All engines(primary and secondary) are shut down with increasing time after alert if hard-coupled. Only secondary engines are shut down with increasing time after alert if soft-coupled.
241	The ECM lost the vehicle speed signal.	Engine speed limited to maximum engine speed without vehicle speed sensor parameter value Cruise Control. Gear-Down Protection and Road Speed Governor will not work (automotive only).
242	Invalid or inappropriate vehicle speed signal detected. Signal indicates an intermittent connection or VSS tampering.	Engine speed limited to maximum engine speed without vehicle speed sensor parameter value Cruise Control. Gear-Down Protection and Road Speed Governor will not work (automotive only).
245	Less than 6 VDC detected at fan clutch circuit when on. Indicates an excessive current draw from the ECM or faulty ECM output circuit.	The fan may stay on at all times.
254	Less than 6 VDC detected at FSO circuit when on. Indicates an excessive current draw from the ECM or a faulty ECM output circuit.	The ECM turns off the FSO supply voltage. The engine will shut down.
255	Externally supplied voltage detected going to the fuel shutoff solenoid supply circuit.	None on performance. Fuel shutoff valve stays open.
285	The ECM expected information from a multiplexed device but did not receive it soon enough or did not receive it at all.	At least one multiplexed device will not operate properly.
286	The ECM expected info from a multiplexed device but only received a portion of the necessary information.	At least on multiplexed device will not operate properly.
287	The machine vehicle electronic control unit (VECU) detected a fault with its throttle pedal.	The engine will only idle.

Fault code No.	Reason	Effect(only when fault code is active)
288	The machine vehicle electronic control unit (VECU) detected a fault with its remote throttle.	The engine will not respond to the remote throttle.
293	High voltage detected at the machine temperature sensor signal pin of the 31-pin machine connector.	No engine protection for machine temperature.
294	Low voltage detected at the machine temperature sensor signal pin of the 31-pin machine connector.	No engine protection for machine temperature.
295	An error in the ambient air pressure sensor signal was detected by the ECM.	Engine is derated to no air setting.
297	High voltage detected at the machine pressure sensor signal pin of the 31-pin machine connector.	No engine protection for machine pressure.
298	Low voltage detected at the machine pressure sensor signal pin of the 31-pin machine connector.	No engine protection for machine pressure.
299	Engine shutdown by device other than key switch before proper engine cool down resulting in filtered load factor above maximum shutdown threshold.	No action taken by the ECM.
311	Current detected at No.1 injector when voltage is turned off.	Current to injector is shut off.
312	Current detected at No.5 injector when voltage is turned off.	Current to injector is shut off.
313	Current detected at No.3 injector when the voltage is turned off	Current to injector is shut off.
314	Current detected at No 6 injector when the voltage is turned off.	Current to injector is shut off.
315	Current detected at No.2 injector when the voltage is turned off.	Current to injector is shut off.
319	Real time clock lost power.	None on performance. Data in the ECM will not have accurate time and date information.
321	Current detected at No.4 injector when the voltage is turned on.	Current to injector is shut off.
322	No current detected at No.1 injector when the voltage is turned on.	Current to injector is shut off.
323	No current detected at No.5 injector when the voltage is turned on.	Current to injector is shut off.
324	No current detected at No.3 injector when the voltage is turned on.	Current to injector is shut off.
325	No current detected at No.6 injector when the voltage is turned on.	Current to injector is shut off.
331	No current detected at No.2 injector when the voltage is turned on.	Current to injector is shut off.
332	No current detected at No.4 injector when the voltage is turned on.	Current to injector is shut off.
341	Severe loss of data from the ECM.	Possible no noticeable performance effects OR engine dying OR hard starting. Fault information, trip information and maintenance monitor data may be inaccurate.
343	Internal ECM error.	Possible none on performance or severe derate.
349	A frequency greater than calibrated threshold was detected at the tail shaft governor signal pin of the 31-pin machine connector.	Calibration dependent power and speed derate.
352	Low voltage detected on the ECM voltage supply line to some sensors (VSEN 1 supply).	Engine is derated to no air setting.

Fault code No.	Reason	Effect(only when fault code is active)
386	High voltage detected on the ECM voltage supply line to some sensors (VSEN 1 supply).	Engine is derated to no air setting.
387	High voltage detected on the ECM voltage supply line to the throttle(VTP supply).	Engine will only idle.
415	Oil pressure signal indicates oil pressure below the very low oil pressure engine protection limit.	Progressive power derate with increasing time from alert. If engine protection shutdown feature is enabled, engine will shut down 30 seconds after red lamp starts flashing.
418	Water has been detected in the fuel filter.	Possible white smoke, loss of power, or hard starting.
419	An error in the intake manifold pressure sensor signal was detected by the ECM.	Engine is derated to no air setting.
422	Voltage detected simultaneously on both the coolant level high and low signal circuits OR no voltage detected on both circuits.	No engine protection for coolant level.
426	Communication between the ECM and the J1939 data link has been lost.	None on performance. J1939 devices may not operate.
428	High voltage detected at water-in-fuel sensor.	None on performance.
429	Low voltage detected at water-in-fuel sensor.	None on performance.
431	Voltage detected simultaneously on both the idle validation off-idle and on-idle circuits.	None on performance.
432	Voltage detected at idle validation on-idle circuit when voltage at throttle position circuit indicates the pedal is not at idle OR voltage detected at idle validation off-idle circuit when voltage at throttle position circuit indicates the pedal is at idle.	Engine will only idle.
433	Voltage signal at intake manifold pressure circuit indicates high intake manifold pressure but other engine characteristics indicate intake manifold pressure must be low.	Derate to no air setting.
434	Supply voltage to the ECM fell below 6.2 VDC for a fraction of a second OR the ECM was not allowed to power down correctly (retain battery voltage for 30 seconds after key off).	Possible no noticeable performance effects OR possibility of engine dying OR hard starting. Fault information, trip information and maintenance monitor data may be inaccurate.
435	An error in the oil pressure sensor signal was detected by the ECM.	None on performance. No engine protection for oil pressure.
441	Battery voltage below normal operating level.	Possible no noticeable performance effects OR possibility of rough idle.
442	Battery voltage below normal operating level.	None on performance.
443	Low voltage detected on the ECM voltage supply line to the throttle(s) (VTP supply).	Engine will only idle.
489	Auxiliary speed frequency on input pin indicated that the frequency is below a calibration dependent threshold.	Engine will only idle.
527	Less than 17.0 VDC detected at the dual output A signal pin of the 31-pin machine connector.	No action taken by the ECM.
528	Less than 17.0 VDC detected at the dual output B signal pin of the 31-pin machine connector.	No action taken by the ECM.
529	Less than 17.0 VDC detected at the dual output B signal pin at the ECM.	No action taken by the ECM.
551	No voltage detected simultaneously on both the idle validation off-idle and on-idle circuits.	Engine will only idle.
581	High voltage detected at the fuel inlet restriction sensor signal pin.	Fuel inlet restriction monitor deactivated.

Fault code No.	Reason	Effect(only when fault code is active)
582	Low voltage detected at the fuel inlet restriction sensor signal pin	Fuel inlet restriction monitor deactivated.
583	Restriction has been detected at the fuel pump inlet.	Fuel inlet restriction monitor warning is set.
596	High battery voltage detected by the battery voltage monitor feature.	Yellow lamp will be lit until high battery voltage condition is corrected.
597	ICON™ has restarted the engine three times within three hours due to low battery voltage (automotive only) OR low battery voltage detected by the battery voltage monitor feature.	Yellow lamp will be lit until low battery voltage condition is corrected. The ECM may increase idle speed and deactivate idle decrement switch if idle speedup is enabled. The engine will run continuously if ICON™ is active (automotive only).
598	Very low battery voltage detected by the battery voltage monitor feature.	Red lamp lit until very low battery voltage condition is corrected.
611	Engine shutdown by operator before proper engine cool down resulting in filtered load factor above maximum shutdown threshold.	No action taken by the ECM.
951	A power imbalance between cylinders was detected by the ECM.	Engine may have rough idle or misfire.

(6) DEFINITION OF OPERATING MODES

① Normal

There's no failure detected in the transmission system or the failure has no or slight effects on transmission control. TCU will work without or in special cases with little limitations.(See following table)

② Substitute clutch control

TCU can't change the gears or the direction under the control of the normal clutch modulation. TCU uses the substitute strategy for clutch control. All modulations are only time controlled. (Comparable with EST 25)

③ Limp-home

The detected failure in the system has strong limitations to transmission control. TCU can engage only one gear in each direction. In some cases only one direction will be possible. TCU will shift the transmission into neutral at the first occurrence of the failure. First, the operator must shift the gear selector into neutral position.

If output speed is less than a threshold for neutral to gear and the operator shifts the gear selector into forward or reverse, the TCU will select the limp-home gear.

If output speed is less than a threshold for reversal speed and TCU has changed into the limp-home gear and the operator selects a shuttle shift, TCU will shift immediately into the limp-home gear of the selected direction.

If output speed is greater than the threshold, TCU will shift the transmission into neutral. The operator has to slow down the vehicle and must shift the gear selector into neutral position.

④ Transmission-shutdown

TCU has detected a severe failure that disables control of the transmission.

TCU will shut off the solenoid valves for the clutches and also the common power supply(VPS1).

Transmission shifts to neutral. The park brake will operate normally, also the other functions which use ADM1 to ADM8.

The operator has to slow down the vehicle. The transmission will stay in neutral.

⑤ TCU-shutdown

TCU has detected a severe failure that disables control of system.

TCU will shut off all solenoid valves and also both common power supplies(VPS1, VPS2). The park brake will engage, also functions are disabled which use ADM 1 to ADM 8.

The transmission will stay in neutral.

※ Abbreviations

OC : Open circuit

SC : Short circuit

OP mode : Operating mode

TCU : Transmission control unit

EEC : Electronic engine controller

PTO : Power take off

(7) Transmission fault codes

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
11	<p>Logical error at gear range signal TCU detected a wrong signal combination for the gear range Cable from shift lever to TCU is broken Cable is defective and is contacted to battery voltage or vehicle ground Shift lever is defective</p>	<p>TCU shifts transmission to neutral OP-mode : Transmission shutdown</p>	<p>Check the cables from TCU to shift lever Check signal combinations of shift lever positions for gear range</p>	<p>Failure cannot be detected in systems with DW2/DW3 shift lever Fault is taken back if TCU detects a valid signal for the position</p>
12	<p>Logical error at direction select signal TCU detected a wrong signal combination for the direction Cable from shift lever to TCU is broken Cable is defective and is contacted to battery voltage or vehicle ground Shift lever is defective</p>	<p>TCU shifts transmission to neutral OP-Mode : Transmission shutdown</p>	<p>Check the cables from TCU to shift lever Check signal combinations of shift lever positions F-N-R</p>	<p>Fault is taken back if TCU detects a valid signal for the direction at the shift lever</p>
13	<p>Logical error at engine derating device TCU detected no reaction of engine while derating device active</p>	<p>After selecting neutral, TCU change to OP mode limp home</p>	<p>Check engine derating device</p>	<p>This fault is reset after power up of TCU</p>
15	<p>Logical error at direction select signal 2 shift lever TCU detected a wrong signal combination for the direction Cable from shift lever 2 to TCU is broken Cable is defective and is contacted to battery voltage or vehicle ground Shift lever is defective</p>	<p>TCU shifts transmission to neutral if selector active OP mode : Transmission shutdown if selector active</p>	<p>Check the cables from TCU to shift lever 2 Check signal combinations of shift lever positions F-N-R</p>	<p>Fault is taken back if TCU detects a valid neutral signal for the direction at the shift lever</p>
16	<p>Logical error at axle connection Feedback axle connection measured by TCU and output signal axle connection don't fit Axle can't be connected or disconnected due to mechanical problem One of the cables from feedback axle connection switch to TCU is broken</p>	<p>OP mode : Normal</p>	<p>Check the cables from TCU to feedback axle connection switch Check signals of the feedback axle connection switch</p>	

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
21	S.C. to battery voltage at clutch cut off input The measured voltage is too high: Cable is defective and is contacted to battery voltage Clutch cut off sensor has an internal defect Connector pin is contacted to battery voltage	Clutch cut off function is disabled OP mode : Normal	Check the cable from TCU to the sensor Check the connectors Check the clutch cut off sensor	
22	S.C. to ground or O.C. at clutch cut off input The measured voltage is too low: Cable is defective and is contacted to vehicle ground Cable has no connection to TCU Clutch cut off sensor has an internal defect Connector pin is contacted to vehicle ground or is broken	Clutch cut off function is disabled OP mode : Normal	Check the cable from TCU to the sensor Check the connectors Check the clutch cut off sensor	
23	S.C. to battery voltage at load sensor input The measured voltage is too high: Cable is defective and is contacted to battery voltage Load sensor has an internal defect Connector pin is contacted to battery voltage	Retarder function is affected TCU uses default load OP mode : Normal	Check the cable from TCU to the sensor Check the connectors Check the load sensor Check the assembly tolerances of load sensor	Availability of retarder depends on default load
24	S.C. to ground or O.C. at load sensor input The measured voltage is too low: Cable is defective and is contacted to vehicle ground Cable has no connection to TCU Load sensor has as internal defect Connector pin is contacted to vehicle ground or is broken	Retarder function is affected TCU use default load OP mode : Normal	Check the cable from TCU to the sensor Check the connectors Check the load sensor Check the assembly tolerances of load sensor	Availability of retarder depends on default load

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
25	<p>S.C. to battery voltage or O.C. at transmission sump temperature sensor input</p> <p>The measured voltage is too high:</p> <ul style="list-style-type: none"> Cable is defective and is contacted to battery voltage Cable has no connection to TCU Temperature sensor has an internal defect Connector pin is contacted to battery voltage or is broken 	<p>No reaction, TCU use default temperature</p> <p>OP mode : Normal</p>	<p>Check the cable from TCU to the sensor</p> <p>Check the connectors</p> <p>Check the temperature sensor</p>	
26	<p>S.C. to battery voltage or O.C. at transmission sump temperature sensor input</p> <p>The measured voltage is too low:</p> <ul style="list-style-type: none"> Cable is defective and is contacted to vehicle ground Temperature sensor has an internal defect Connector pin is contacted to vehicle ground 	<p>No reaction, TCU uses default temperature</p> <p>OP mode : Normal</p>	<p>Check the cable from TCU to the sensor</p> <p>Check the connectors</p> <p>Check the temperature sensor</p>	
27	<p>S.C. to battery voltage or O.C. at retarder temperature sensor input</p> <p>The measured voltage is too high:</p> <ul style="list-style-type: none"> Cable is defective and is contacted to battery voltage Cable has no connection to TCU Temperature sensor has an internal defect Connector pin is contacted to battery voltage or is broken 	<p>No reaction, TCU uses default temperature</p> <p>OP mode : Normal</p>	<p>Check the cable from TCU to the sensor</p> <p>Check the connectors</p> <p>Check the temperature sensor</p>	
28	<p>S.C. to ground at retarder temperature sensor input</p> <p>The measured voltage is too low:</p> <ul style="list-style-type: none"> Cable is defective and is contacted to vehicle ground Temperature sensor has an internal defect Connector pin is contacted to vehicle ground 	<p>No reaction, TCU uses default temperature</p> <p>OP mode : Normal</p>	<p>Check the cable from TCU to the sensor</p> <p>Check the connectors</p> <p>Check the temperature sensor</p>	

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
27	<p>S.C. to battery voltage or O.C. at converter output temperature sensor input</p> <p>The measured voltage is too high:</p> <ul style="list-style-type: none"> Cable is defective and is contacted to battery voltage Cable has no connection to TCU Temperature sensor has an internal defect Connector pin is contacted to battery voltage or is broken 	<p>No reaction, TCU uses default temperature</p> <p>OP mode : Normal</p>	<ul style="list-style-type: none"> Check the cable from TCU to the sensor Check the connectors Check the temperature sensor 	
28	<p>S.C. to ground at converter output temperature sensor input</p> <p>The measured voltage is too low:</p> <ul style="list-style-type: none"> Cable is defective and is contacted to vehicle ground Temperature sensor has an internal defect Connector pin is contacted to vehicle ground 	<p>No reaction, TCU uses default temperature</p> <p>OP mode : Normal</p>	<ul style="list-style-type: none"> Check the cable from TCU to the sensor Check the connectors Check the temperature sensor 	
31	<p>S.C. to battery voltage or O.C. at engine speed input</p> <p>TCU measures a voltage higher than 7.00V at speed input pin</p> <ul style="list-style-type: none"> Cable is defective and is contacted to battery voltage Cable has no connection to TCU Speed sensor has an internal defect Connector pin is contacted to battery voltage or has no contact 	<p>OP mode : Substitute clutch control</p>	<ul style="list-style-type: none"> Check the cable from TCU to the sensor Check the connectors Check the speed sensor 	
32	<p>S.C. to ground at engine speed input</p> <p>TCU measures a voltage less than 0.45V at speed input pin</p> <ul style="list-style-type: none"> Cable/connector is defective and is contacted to vehicle ground Speed sensor has an internal defect 	<p>OP mode : Substitute clutch control</p>	<ul style="list-style-type: none"> Check the cable from TCU to the sensor Check the connectors Check the speed sensor 	

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
33	<p>Logical error at engine speed input TCU measures a engine speed over a threshold and the next moment the measured speed is zero</p> <p>Cable/connector is defective and has bad contact Speed sensor has an internal defect Sensor gap has the wrong size</p>	OP mode : Substitute clutch control	<p>Check the cable from TCU to the sensor Check the connectors Check the speed sensor Check the sensor gap</p>	This fault is reset after power up of TCU
34	<p>S.C. to battery voltage or O.C. at turbine speed input TCU measures a voltage higher than 7.00V at speed input pin</p> <p>Cable is defective and is contacted to vehicle battery voltage Cable has no connection to TCU Speed sensor has an internal defect Connector pin is contacted to battery voltage or has no contact</p>	<p>OP mode : Substitute clutch control If a failure is existing at output speed, TCU shifts to neutral OP mode : Limp home</p>	<p>Check the cable from TCU to the sensor Check the connectors Check the speed sensor</p>	
35	<p>S.C. to ground at turbine speed input TCU measures a voltage less than 0.45V at speed input pin</p> <p>Cable/connector is defective and is contacted to vehicle ground Speed sensor has an internal defect</p>	<p>OP mode : Substitute clutch control If a failure is existing at output speed, TCU shifts to neutral OP mode : Limp home</p>	<p>Check the cable from TCU to the sensor Check the connectors Check the speed sensor</p>	This fault is reset after power up of TCU
36	<p>Logical error at turbine speed input TCU measures a turbine speed over a threshold and at the next moment the measured speed is zero</p> <p>Cable/connector is defective and has bad contact Speed sensor has an internal defect Sensor gap has the wrong size</p>	<p>OP mode : Substitute clutch control If a failure is existing at output speed, TCU shifts to neutral OP mode : Limp home</p>	<p>Check the cable from TCU to the sensor Check the connectors Check the speed sensor Check the sensor gap</p>	

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
37	<p>S.C. to battery voltage or O.C. at internal speed input TCU measures a voltage higher than 7.00V at speed input pin Cable is defective and is contacted to vehicle battery voltage Cable has no connection to TCU Speed sensor has an internal defect Connector pin is contacted to battery voltage or has no contact</p>	OP mode : Substitute clutch control	<p>Check the cable from TCU to the sensor Check the connectors Check the speed sensor</p>	
38	<p>S.C. to ground at turbine speed input TCU measures a voltage less than 0.45V at speed input pin Cable/connector is defective and is contacted to vehicle ground Speed sensor has an internal defect</p>	OP mode : Substitute clutch control	<p>Check the cable from TCU to the sensor Check the connectors Check the speed sensor</p>	
39	<p>Logical error at internal speed input TCU measures a internal speed over a threshold and at the next moment the measured speed is zero Cable/connector is defective and has bad contact Speed sensor has an internal defect Sensor gap has the wrong size</p>	OP mode : Substitute clutch control	<p>Check the cable from TCU to the sensor Check the connectors Check the speed sensor Check the sensor gap</p>	This fault is reset after power up of TCU
3A	<p>S.C. to battery voltage or O.C. at output speed input TCU measures a voltage higher than 12.5V at speed input pin Cable is defective and is contacted to battery voltage Cable has no connection to TCU Speed sensor has an internal defect Connector pin is contacted to battery voltage or has no contact</p>	<p>Special mode for gear selection OP mode : Substitute clutch control If a failure is existing at turbine speed, TCU shifts to neutral OP mode : lamp home</p>	<p>Check the cable from TCU to the sensor Check the connectors Check the speed sensor</p>	

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
3B	S.C. to ground at output speed input TCU measures a voltage less than 1.00V at speed input pin Cable/connector is defective and is contacted to vehicle ground Speed sensor has an internal defect	Special mode for gear selection OP mode : Substitute clutch control If a failure is existing at turbine speed, TCU shifts to neutral OP mode : lamp home	Check the cable from TCU to the sensor Check the connectors Check the speed sensor	
3C	Logical error at output speed input TCU measures a turbine speed over a threshold and at the next moment the measured speed is zero Cable/connector is defective and has bad contact Speed sensor has an internal defect Sensor gap has the wrong size	Special mode for gear selection OP mode : Substitute clutch control If a failure is existing at turbine speed, TCU shifts to neutral OP mode : lamp home	Check the cable from TCU to the sensor Check the connectors Check the speed sensor Check the sensor gap	This fault is reset after power up of TCU
3D	Turbine speed zero doesn't fit to other speed signals	-	-	Not used
3E	Output speed zero doesn't fit to other speed signals If transmission is not neutral and the shifting has finished, TCU measures output speed zero and turbine speed or internal speed not equal to zero. Speed sensor has an internal defect Sensor gap has the wrong size	Special mode for gear selection OP mode : Substitute clutch control If a failure is existing at turbine speed, TCU shifts to neutral OP mode : lamp home	Check the sensor signal of output speed sensor Check the sensor gap of output speed sensor Check the cable from TCU to the sensor	This fault is reset after power up of TCU

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
71	<p>S.C. to battery voltage at clutch K1 The measured resistance value of the valve is out of limit, the voltage at K1 valve is too high Cable/connector is defective and has contact to battery voltage Cable/connector is defective and has contact to another regulator output of the TCU Regulator has an internal defect</p>	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check the cable from TCU to the gearbox Check the connectors from TCU to the gearbox Check the regulator resistance* Check internal wire harness of the gearbox</p>	* See Chapter (8)
72	<p>S.C. to ground at clutch K1 The measured resistance value of the valve is out of limit, the voltage at K1 valve is too low Cable/connector is defective and has contact to vehicle ground Regulator has an internal defect</p>	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox</p>	* See Chapter (8)
73	<p>O.C. at clutch K1 The measured resistance value of the valve is out of limit Cable/connector is defective and has no contact to TCU Regulator has an internal defect</p>	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox</p>	* See Chapter (8)
74	<p>S.C. to battery voltage at clutch K2 The measured resistance value of the valve is out of limit, the voltage at K2 valve is too high Cable/connector is defective and has contact to battery voltage Cable/connector is defective and has contact to another regulator output of the TCU Regulator has an internal defect</p>	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox</p>	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
75	S.C. to ground at clutch K2 The measured resistance value of the valve is out of limit, the voltage at K2 valve is too low Cable/connector is defective and has contact to vehicle ground Regulator has an internal defect	TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown	Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox	* See Chapter (8)
76	O.C. at clutch K2 The measured resistance value of the valve is out of limit Cable/connector is defective and has no contact to TCU Regulator has an internal defect	TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown	Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox	* See Chapter (8)
77	S.C. to battery voltage at clutch K3 The measured resistance value of the valve is out of limit, the voltage at K3 valve is too high Cable/connector is defective and has contact to battery voltage Cable/connector is defective and has contact to another regulator output of the TCU Regulator has an internal defect	TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown	Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox	* See Chapter (8)
78	S.C. to ground at clutch K3 The measured resistance value of the valve is out of limit, the voltage at K3 valve is too low Cable/connector is defective and has contact to vehicle ground Regulator has an internal defect	TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown	Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
79	O.C. at clutch K2 The measured resistance value of the valve is out of limit Cable/connector is defective and has no contact to TCU Regulator has an internal defect	TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown	Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox	* See Chapter (8)
7A	S.C. to battery voltage at converter clutch	-	-	
7B	S.C. to ground at converter clutch	-	-	
7C	O.C. at converter clutch	-	-	Not used
7D	S.C. ground at engine derating device Cable is defective and is contacted to vehicle ground Engine derating device has an internal defect Connector pin is contacted to vehicle ground	Engine derating will be on until TCU power down even if fault vanishes(Loose connection) OP mode : Normal	Check the cable from TCU to the engine derating device Check the connectors from engine derating device to TCU Check the resistance* of engine derating device	Not used Not used * See Chapter (8)
7E	S.C. battery voltage at engine derating device Cable/connector is defective and is contacted to battery voltage Engine derating device has an internal defect	No reaction OP mode : Normal	Check the cable from TCU to the engine derating device Check the connectors from backup alarm device to TCU Check the resistance* of backup alarm device	* See Chapter (8)
7F	O.C. at engine derating device TCU detected a wrong voltage at the output pin, that looks like a O.C. for this output pin Cable is defective and has no connection to TCU Engine derating device has an internal defect Connector has no connection to TCU	No reaction OP mode : Normal	Check the cable from TCU to the engine derating device Check the connectors from engine derating device to TCU Check the resistance* of engine derating device	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
81	<p>S.C. to battery voltage at clutch K4 The measured resistance value of the valve is out of limit, the voltage at K4 valve is too high Cable/connector is defective and has contact to battery voltage Cable/connector is defective and has contact to another regulator output of the TCU Regulator has an internal defect</p>	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox</p>	* See Chapter (8)
82	<p>S.C. to ground at clutch K4 The measured resistance value of the valve is out of limit, the voltage at K4 valve is too low Cable/connector is defective and has contact to vehicle ground Regulator has an internal defect</p>	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check the cable from TCU to the engine derating device Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox</p>	* See Chapter (8)
83	<p>O.C. at clutch K4 The measured resistance value of the valve is out of limit Cable/connector is defective and has contact to TCU Regulator has an internal defect</p>	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox</p>	* See Chapter (8)
84	<p>S.C. to battery voltage at clutch K4 The measured resistance value of the valve is out of limit, the voltage at K4 valve is too high Cable/connector is defective and has contact to battery voltage Cable/connector is defective and has contact to another regulator output of the TCU Regulator has an internal defect</p>	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox</p>	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
85	S.C. to ground at clutch KV The measured resistance value of the valve is out of limit, the voltage at K4 valve is too low Cable/connector is defective and has contact to vehicle ground Regulator has an internal defect	TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown	Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox	* See Chapter (8)
86	O.C. at clutch KV The measured resistance value of the valve is out of limit Cable/connector is defective and has contact to TCU Regulator has an internal defect	TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown	Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox	* See Chapter (8)
87	S.C. to battery voltage at clutch KR The measured resistance value of the valve is out of limit, the voltage at KR valve is too high Cable/connector is defective and has contact to battery voltage Cable/connector is defective and has contact to another regulator output of the TCU Regulator has an internal defect	TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown	Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox	* See Chapter (8)
88	S.C. to ground at clutch KR The measured resistance value of the valve is out of limit, the voltage at KR valve is too low Cable/connector is defective and has contact to vehicle ground Regulator has an internal defect	TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown	Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox	* See Chapter (8)
89	O.C. at clutch KR The measured resistance value of the valve is out of limit Cable/connector is defective and has no contact to TCU Regulator has an internal defect	TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown	Check the cable from TCU to the gearbox Check the connectors from gearbox to TCU Check the regulator resistance* Check internal wire harness of the gearbox	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
91	<p>S.C. to ground at relay reverse warning alarm TCU detected a wrong voltage at the output pin, that looks like a S.C. to vehicle ground Cable is defective and is contact to vehicle ground Backup alarm device has an internal defect Connector pin is contacted to vehicle ground</p>	<p>Backup alarm will be on until TCU power down even if fault vanishes(Loose connection) OP mode : Normal</p>	<p>Check the cable from TCU to the backup alarm device Check the connectors from backup alarm device to TCU Check the resistance* of backup alarm device</p>	* See Chapter (8)
92	<p>S.C. to battery voltage at relay reverse warning alarm TCU detected a wrong voltage at the output pin, that looks like a S.C. to battery voltage Cable is defective and is contacted to battery voltage Backup alarm device has an internal defect Connector pin is contacted to battery voltage</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to the backup alarm device Check the connectors from backup alarm device to TCU Check the resistance* of backup alarm device</p>	* See Chapter (8)
93	<p>O.C. at relay reverse warning alarm TCU detected a wrong voltage at the output pin, that looks like a O.C. for this output pin Cable is defective and has no connection to TCU Backup alarm device has an internal defect Connector has no connection to TCU</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to the backup alarm device Check the connectors from backup alarm device to TCU Check the resistance* of backup alarm device</p>	* See Chapter (8)
94	<p>S.C. to ground at relay starter interlock TCU detected a wrong voltage at the output pin, that looks like a S.C. to vehicle ground Cable is defective and is connection to vehicle ground Starter interlock relay has an internal defect Connector pin is contacted to vehicle ground</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to the stater interlock relay Check the connectors from starter interlock relay to TCU Check the resistance* of starter interlock relay</p>	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
95	<p>S.C. to battery voltage at relay starter interlock TCU detected a wrong voltage at the output pin, that looks like a S.C. to battery voltage Cable is defective and has no connection to battery voltage Starter interlock relay has an internal defect Connector pin is contacted to battery voltage</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to the starter interlock relay Check the connectors from starter interlock relay to TCU Check the resistance* of starter interlock relay</p>	* See Chapter (8)
96	<p>O.C. at relay starter interlock TCU detected a wrong voltage at the output pin, that looks like a O.C. for this output pin Cable is defective and has no connection to TCU Starter interlock relay has an internal defect Connector has no connection to TCU</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to the starter interlock relay Check the connectors from starter interlock relay to TCU Check the resistance* of starter interlock relay</p>	* See Chapter (8)
97	<p>S.C. to ground at park brake solenoid TCU detected a wrong voltage at the output pin, that looks like a S.C. to vehicle ground Cable is defective and is connection to vehicle ground Park brake solenoid has an internal defect Connector pin is contacted to vehicle ground</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to the park brake solenoid Check the connectors from park brake solenoid to TCU Check the resistance* of park brake solenoid</p>	* See Chapter (8)
98	<p>S.C. to battery voltage at park brake solenoid TCU detected a wrong voltage at the output pin, that looks like a S.C. to battery voltage Cable is defective and is connection to battery voltage Park brake solenoid has an internal defect Connector pin is contacted to battery voltage</p>	<p>No reaction Optional : (Some customers) TCU shifts to neutral caused by park brake feed back OP mode : Normal</p>	<p>Check the cable from TCU to the park brake solenoid Check the connectors from park brake solenoid to TCU Check the resistance* of park brake solenoid</p>	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
99	O.C. at park brake solenoid TCU detected a wrong voltage at the output pin, that looks like a O.C. for this output pin Cable is defective and has no connection to TCU Park brake solenoid has an internal defect Connector has no connection to TCU	No reaction Optional : Some customers TCU shifts to neutral caused by park brake feed back OP mode : Normal	Check the cable from TCU to the park brake solenoid Check the connectors from park brake solenoid to TCU Check the resistance* of park brake solenoid	* See Chapter (8)
9A	S.C. to ground at converter lock up clutch solenoid TCU detected a wrong voltage at the output pin, that looks like a S.C. to vehicle ground Cable is defective and is contacted to vehicle ground Converter clutch solenoid has an internal defect Connector pin is contacted to vehicle ground	No reaction OP mode : Normal	Check the cable from TCU to the converter clutch solenoid Check the connectors from converter clutch solenoid to TCU Check the resistance* of park brake solenoid	* See Chapter (8)
9B	O.C. at converter lock up clutch solenoid TCU detected a wrong voltage at the output pin, that looks like a O.C. for this output pin Cable is defective and has no connection to TCU Converter clutch solenoid has an internal defect Connector has no connection to TCU	Converter clutch always open, retarder not available OP mode : Normal	Check the cable from TCU to the converter clutch solenoid Check the connectors from converter clutch solenoid to TCU Check the resistance* of park brake solenoid	* See Chapter (8)
9C	S.C. to battery voltage at converter lock up clutch solenoid TCU detected a wrong voltage at the output pin, that looks like a S.C. to battery voltage Cable is defective and has no contacted to battery voltage Converter clutch solenoid has an internal defect Connector pin is contacted to battery voltage	No reaction OP mode : Normal	Check the cable from TCU to the converter clutch solenoid Check the connectors from converter clutch solenoid to TCU Check the resistance* of converter clutch solenoid	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
9D	S.C. to ground at retarder solenoid TCU detected a wrong voltage at the output pin, that looks like a S.C. to vehicle ground Cable is defective and is contacted to vehicle ground Retarder solenoid has an internal defect Connector pin is contacted to vehicle ground	No reaction OP mode : Normal	Check the cable from TCU to the retarder solenoid Check the connectors from retarder solenoid to TCU Check the resistance* of retarder solenoid	* See Chapter (8)
9E	O.C. at retarder solenoid TCU detected a wrong voltage at the output pin, that looks like a O.C. for this output pin Cable is defective and has no connection to TCU Retarder solenoid has an internal defect Connector has no connection to TCU	No reaction OP mode : Normal	Check the cable from TCU to the retarder solenoid Check the connectors from retarder solenoid to TCU Check the resistance* of retarder solenoid	* See Chapter (8)
9F	S.C. to battery voltage at retarder solenoid TCU detected a wrong voltage at the output pin, that looks like a S.C. to battery voltage Cable is defective and has no connection to battery voltage Retarder solenoid has an internal defect Connector pin is contacted to battery voltage	No reaction OP mode : Normal	Check the cable from TCU to the retarder solenoid Check the connectors from retarder solenoid to TCU Check the resistance* of retarder solenoid	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
A1	S.C. to ground at difflock or axle connection solenoid TCU detected a wrong voltage at the output pin, that looks like a S.C. to vehicle ground Cable is defective and is contacted to vehicle ground Difflock solenoid has an internal defect Connector pin is contacted to vehicle ground	No reaction OP mode : Normal	Check the cable from TCU to the difflock solenoid Check the connectors from difflock solenoid to TCU Check the resistance* of difflock solenoid	* See Chapter (8)
A2	S.C. to battery voltage at difflock or axle connection solenoid TCU detected a wrong voltage at the output pin, that looks like a S.C. to battery voltage Cable is defective and has no connection to battery voltage Difflock solenoid has an internal defect Connector pin is contacted to battery voltage	No reaction OP mode : Normal	Check the cable from TCU to the difflock solenoid Check the connectors from difflock solenoid to TCU Check the resistance* of difflock solenoid	* See Chapter (8)
A3	O.C. at difflock or axle connection solenoid TCU detected a wrong voltage at the output pin, that looks like a O.C. for this output pin Cable is defective and has no connection to TCU Difflock solenoid has an internal defect Connector has no connection to TCU	No reaction OP mode : Normal	Check the cable from TCU to the difflock solenoid Check the connectors from difflock solenoid to TCU Check the resistance* of difflock solenoid	* See Chapter (8)
A4	S.C. to ground at warning signal output TCU detected a wrong voltage at the output pin, that looks like a S.C. to vehicle ground Cable is defective and is contacted to vehicle ground Warning device has an internal defect Connector pin is contacted to vehicle ground	No reaction OP mode : Normal	Check the cable from TCU to the warning device Check the connectors from warning device to TCU Check the resistance* of warning device	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
A5	<p>O.C. voltage at warning signal output TCU detected a wrong voltage at the output pin, that looks like a O.C. for this output pin Cable is defective and has no connection to TCU Warning device has an internal defect Connector has no connection to TCU</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to the warning device Check the connectors from warning device to TCU Check the resistance* of warning device</p>	* See Chapter (8)
A6	<p>S.C. to battery voltage at warning signal output TCU detected a wrong voltage at the output pin, that looks like a S.C. to battery voltage Cable is defective and has is contacted to battery voltage Warning device has an internal defect Connector pin is contacted to battery voltage</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to the warning device Check the connectors from warning device to TCU Check the resistance* of warning device</p>	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
B1	<p>Slippage at clutch K1 TCU calculates a differential speed at closed clutch K1. If this calculated value is out of range, TCU interprets this as slipping clutch</p> <ul style="list-style-type: none"> Low pressure at clutch K1 Low main pressure Wrong signal at internal speed sensor Wrong signal at output speed sensor Wrong size of the sensor gap Clutch is defective 	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check pressure at clutch K1 Check main pressure in the system Check sensor gap at internal speed sensor Check sensor gap at output speed sensor Check signal at internal speed sensor Check signal at output speed sensor Replace clutch</p>	
B2	<p>Slippage at clutch K2 TCU calculates a differential speed at closed clutch K2. If this calculated value is out of range, TCU interprets this as slipping clutch</p> <ul style="list-style-type: none"> Low pressure at clutch K2 Low main pressure Wrong signal at internal speed sensor Wrong signal at output speed sensor Wrong size of the sensor gap Clutch is defective 	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check pressure at clutch K2 Check main pressure in the system Check sensor gap at internal speed sensor Check sensor gap at output speed sensor Check signal at internal speed sensor Check signal at output speed sensor Replace clutch</p>	
B3	<p>Slippage at clutch K3 TCU calculates a differential speed at closed clutch K3. If this calculated value is out of range, TCU interprets this as slipping clutch</p> <ul style="list-style-type: none"> Low pressure at clutch K3 Low main pressure Wrong signal at internal speed sensor Wrong signal at output speed sensor Wrong size of the sensor gap Clutch is defective 	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<p>Check pressure at clutch K3 Check main pressure in the system Check sensor gap at internal speed sensor Check sensor gap at output speed sensor Check signal at internal speed sensor Check signal at output speed sensor Replace clutch</p>	

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
B4	<p>Slippage at clutch K4 TCU calculates a differential speed at closed clutch K4. If this calculated value is out of range, TCU interprets this as slipping clutch</p> <ul style="list-style-type: none"> Low pressure at clutch K4 Low main pressure Wrong signal at internal speed sensor Wrong signal at turbine speed sensor Wrong size of the sensor gap Clutch is defective 	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<ul style="list-style-type: none"> Check pressure at clutch K4 Check main pressure in the system Check sensor gap at internal speed sensor Check sensor gap at turbine speed sensor Check signal at internal speed sensor Check signal at turbine speed sensor Replace clutch 	
B5	<p>Slippage at clutch KV TCU calculates a differential speed at closed clutch KV. If this calculated value is out of range, TCU interprets this as slipping clutch</p> <ul style="list-style-type: none"> Low pressure at clutch KV Low main pressure Wrong signal at internal speed sensor Wrong signal at turbine speed sensor Wrong size of the sensor gap Clutch is defective 	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<ul style="list-style-type: none"> Check pressure at clutch KV Check main pressure in the system Check sensor gap at internal speed sensor Check sensor gap at turbine speed sensor Check signal at internal speed sensor Check signal at turbine speed sensor Replace clutch 	
B6	<p>Slippage at clutch KR TCU calculates a differential speed at closed clutch KR. If this calculated value is out of range, TCU interprets this as slipping clutch</p> <ul style="list-style-type: none"> Low pressure at clutch KR Low main pressure Wrong signal at internal speed sensor Wrong signal at turbine speed sensor Wrong size of the sensor gap Clutch is defective 	<p>TCU shifts to neutral OP mode : Limp home If failure at another clutch is pending TCU shifts to neutral OP mode : TCU shutdown</p>	<ul style="list-style-type: none"> Check pressure at clutch KR Check main pressure in the system Check sensor gap at internal speed sensor Check sensor gap at turbine speed sensor Check signal at internal speed sensor Check signal at turbine speed sensor Replace clutch 	

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
B7	Overtemp sump TCU measured a temperature in the oil sump that is over the allowed threshold.	No reaction OP mode : Normal	Cool down machine Check oil level Check temperature sensor	
B8	Overtemp retarder TCU measured a temperature in the retarder oil that is over the allowed threshold	TCU disables retarder OP mode : Normal	Cool down machine Check oil level Check temperature sensor	
B9	Overspend engine	Retarder applies OP mode : Normal	-	
BA	Differential pressure oil filter TCU measured a voltage at differential pressure switch out of the allowed range Oil filter is polluted Cable/connector is broken or cable/connector is contacted to battery voltage or vehicle ground Differential pressure switch is defective	No reaction OP mode : Normal	Check oil filter Check wiring from TCU to differential pressure switch Check differential pressure switch(Measure resistance)	
BB	Slippage at converter lockup clutch TCU calculates a differential speed at closed converter lockup clutch. If this calculated value is out of range, TCU interprets this as slipping clutch Low pressure at converter lockup clutch Low main pressure Wrong signal at engine speed sensor Wrong signal at turbine speed sensor Wrong size of the sensor gap Clutch is defective		Check pressure at converter lockup clutch Check main pressure in the system Check sensor gap at engine speed sensor Check sensor gap at turbine speed sensor Check signal at engine speed sensor Check signal at turbine speed sensor Replace clutch	

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
BD	<p>S.C. to ground at engine brake solenoid TCU detected a wrong voltage at the output pin, that looks like a S.C. to vehicle ground Cable is defective and is contacted to vehicle ground Engine brake solenoid has an internal defect Connector pin is contacted to vehicle ground</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to engine brake solenoid Check the connectors from engine brake solenoid to TCU Check the resistance* of engine brake solenoid</p>	* See Chapter (8)
BE	<p>S.C. to battery voltage at engine brake TCU detected a wrong voltage at the output pin, that looks like a S.C. to battery voltage Cable is defective and is contacted to battery voltage Engine brake solenoid has an internal defect Connector pin is contacted to battery voltage</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to the engine brake solenoid Check the connectors from engine brake solenoid to TCU Check the resistance* of engine brake solenoid</p>	* See Chapter (8)
BF	<p>O.C. at engine brake TCU detected a wrong voltage at the output pin, that looks like a O.C. for this output pin Cable is defective and has no connection to TCU Engine brake solenoid has an internal defect Connector has no connection to TCU</p>	<p>No reaction OP mode : Normal</p>	<p>Check the cable from TCU to the engine brake solenoid Check the connectors from engine brake solenoid to TCU Check the resistance* of engine brake solenoid</p>	* See Chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
C3	Overtemp converter output TCU measured a oil temperature at the converter output that is the allowed threshold	No reaction OP mode : Normal	Cool down machine Check oil level Check temperature sensor	
C4	S.C. to ground at joystick status indicator TCU detected a wrong voltage at the output pin, that looks like a S.C. to vehicle ground Cable is defective and is contacted to vehicle ground Joystick status indicator has an internal defect Connector pin is contacted to vehicle ground	No reaction OP mode : Normal	Check the cable from TCU to joystick status indicator Check the connectors from joystick status indicator to TCU Check the resistance* of joystick status indicator	*See chapter (8)
C5	S.C. to battery voltage at joystick status indicator TCU detected a wrong voltage at the output pin, that looks like a S.C. to battery voltage Cable is defective and is contacted to battery voltage Joystick status indicator has an internal defect Connector pin is contacted to battery voltage	No reaction OP mode : Normal	Check the cable from TCU to joystick status indicator Check the connectors from joystick status indicator to TCU Check the resistance* of joystick status indicator	*See chapter (8)
C6	O.C. at joystick status indicator TCU detected a wrong voltage at the output pin, that looks like a O.C. for this output pin Cable is defective and has no connection to TCU Joystick status indicator has an internal defect Connector pin has no connection to TCU	No reaction OP mode : Normal	Check the cable from TCU to joystick status indicator Check the connectors from joystick status indicator to TCU Check the resistance* of joystick status indicator	*See chapter (8)

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
D1	S.C. to battery voltage at power supply for sensors TCU measures more than 6V at the pin AU1 (5V sensor supply)	See fault codes No.21 to 2C	Check cables and connectors to sensors, which are supplied from AU1 Check the power supply at the pin AU1(Should be appx. 5V)	Fault codes No.21 to No.2C may be reaction of this fault
D2	S.C. to ground at power supply for sensors TCU measures less than 4V at the pin AU1 (5V sensor supply)	See fault codes No.21 to 2C	Check cables and connectors to sensors, which are supplied from AU1 Check the power supply at the pin AU1(Should be appx. 5V)	Fault codes No.21 to No.2C may be reaction of this fault
D3	Low voltage at battery Measured voltage at power supply is lower than 18V(24V device)	Shift to neutral OP mode : TCU shutdown	Check power supply battery Check cables from batteries to TCU Check connectors from batteries to TCU	
D4	High voltage at battery Measured voltage at power supply is higher than 32.5V(24V device)	Shift to neutral OP mode : TCU shutdown	Check power supply battery Check cables from batteries to TCU Check connectors from batteries to TCU	
D5	Error at valve power supply VPS1 TCU switched on VPS1 and measured VPS1 is off or TCU switched off VPS1 and measured VPS1 is still on Cable or connectors are defect and are contacted to battery voltage Cable or connectors are defect and are contacted to vehicle ground Permanent power supply KL30 missing TCU has an internal defect	Shift to neutral OP mode : TCU shutdown	Check fuse Check cables from gearbox to TCU Check connectors from gearbox to TCU Replace TCU	


Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
D6	<p>Error at valve power supply VPS2 TCU switched on VPS2 and measured VPS2 is off or TCU switched off VPS2 and measured VPS2 is still on Cable or connectors are defect and are contacted to battery voltage Cable or connectors are defect and are contacted to vehicle ground Permanent power supply KL30 missing TCU has an internal defect</p>	<p>Shift to neutral OP mode : TCU shutdown</p>	<p>Check fuse Check cables from gearbox to TCU Check connectors from gearbox to TCU Replace TCU</p>	

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
E1	S.C. battery voltage at speedometer output	-	-	Not used
E2	S.C. to ground or O.C at speedometer output	-	-	Not used
E3	S.C. to battery voltage at display output TCU sends data to the display and measures always a high voltage level on the connector Cable or connectors are defective and are contacted to battery voltage Display has an internal defect	No reaction OP mode : Normal	Check the cable from TCU to the display Check the connectors at the display Change display	
E4	S.C. to ground at display output TCU sends data to the display and measures always a high voltage level on the connector Cable or connectors are defective and are contacted to battery voltage Display has an internal defect	No reaction OP mode : Normal	Check the cable from TCU to the display Check the connectors at the display Change display	
E5	Communication failure on DeviceNet	Shift to neutral OP mode : TCU shutdown	Check Omron master Check wire of DeviceNet-Bus Check cable to Omron master	
E5	DISPID1 timeout Timeout of CAN-message DISPID1 from display controller Interference on CAN-Bus CAN wire/connector is defective Can wire/connector is defective and has contact to vehicle ground or battery voltage	TCU select parameter set with ID0 OP mode : Limp home	Check display controller Check wire of CAN-Bus Check cable display controller	

Fault code (Hex)	Meaning of the fault code possible reason for fault detection	Reaction of the TCU	Possible steps to repair	Remarks
F1	General EEPROM fault TCU can't read non volatile memory TCU is defective	No reaction OP mode : Normal	Replace TCU	Often shown together with fault code F2
F2	Configuration lost TCU has lost the correct configuration and can't control the transmission Interference during saving data on non volatile memory TCU is brand new or from another vehicle	Transmission stay neutral OP mode : TCU shutdown	Reprogram the correct configuration for the vehicle (e.g. with cluster controller,...)	
F3	Application error Something of this application is wrong	Transmission stay neutral OP mode : TCU shutdown	Replace TCU	This fault occurs only if an test engineer did something wrong in the application of the vehicle
F5	Clutch failure AEB was not able to adjust clutch filling parameters One of the AEB-Values is out of limit	Transmission stay neutral OP mode : TCU shutdown	Check clutch	TCU shows also the affected clutch on the display
F6	Clutch adjustment data lost TCU was not able to read correct clutch adjustment parameters Interference during saving data on non volatile memory TCU is brand new	No reaction, Default values : 0 for AEB Offsets used OP mode : Normal	Execute AEB	

(8) Measuring of resistance at actuator/sensor and cable


① Actuator

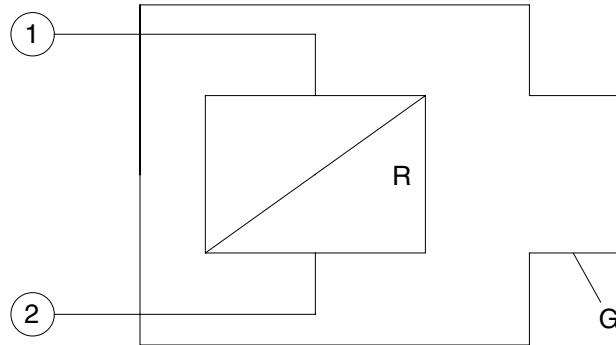

76043PT19

Open circuit	$R_{12} = R_{1G} = R_{2G} = \infty$
Short cut to ground	$R_{12} = R$; $R_{1G} = 0, R_{2G} = R$ or $R_{1G} = R, R_{2G} = 0$ (For S.C. to ground, G is connected to vehicle ground)
Short cut to battery	$R_{12} = R$; $R_{1G} = 0, R_{2G} = R$ or $R_{1G} = R, R_{2G} = 0$ (For S.C. to battery, G is connected to battery voltage)

② Cable

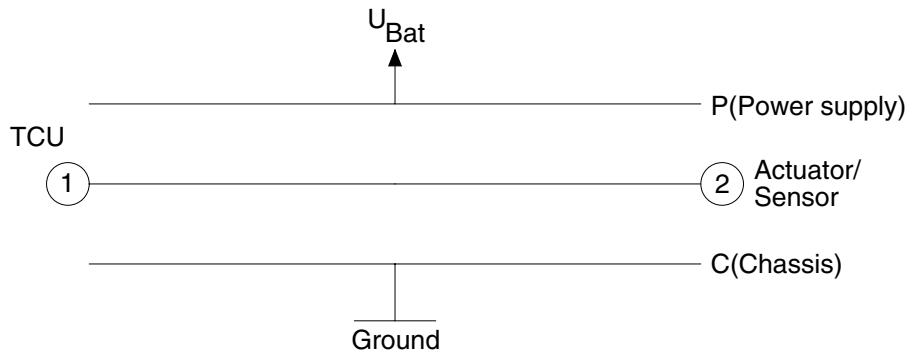


76043PT20

Open circuit	$R_{12} = R_{1P} = R_{1C} = R_{2P} = R_{2C} = \infty$
Short cut to ground	$R_{12} = 0$; $R_{1C} = R_{2C} = 0, R_{1P} = R_{2P} = \infty$
Short cut to battery	$R_{12} = 0$; $R_{1C} = R_{2C} = 0, R_{1P} = R_{2P} = 0$

7) ELECTRIC CONTROL UNIT

(1) Complete system

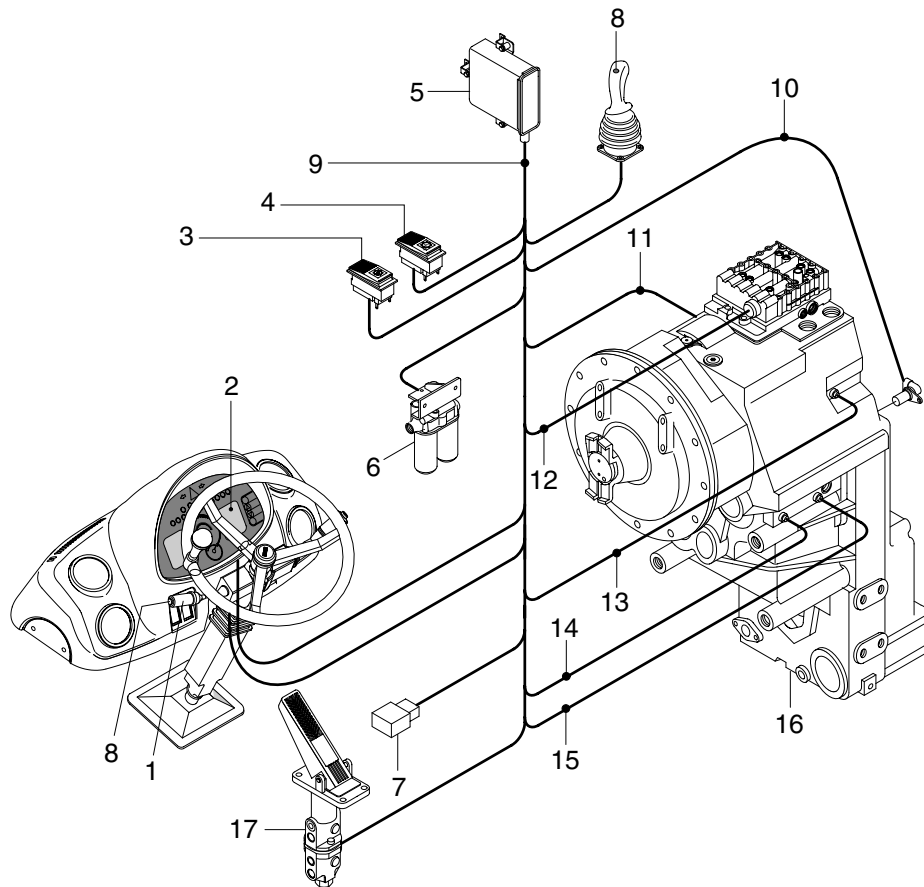

7807APT03

- 1 Gear selector(DW-3)
- 2 Display
- 3 Clutch cut off switch
- 4 Full automatic switch
- 5 Control unit(EST-37)
- 6 Filter
- 7 Power supply connection
- 8 Kickdown switch
- 9 Wiring
- 10 Cable to speed sensor output and speedometer
- 11 Cable to temperature measuring point behind the converter
- 12 Cable to plug connection on the electrohydraulic control unit
- 13 Cable to inductive transmitter speed engine
- 14 Cable to inductive transmitter speed turbine
- 15 Cable to inductive transmitter speed central gear train
- 16 Transmission
- 17 Brake pressure sensor / Load sensor

(2) Description of the basic functions

The powershift transmission will be equipped with the electronic transmission control unit(EST-37), developed for it.

The system is processing the desire of the driver according to the following criteria.

- Gear determination depending on controller position, driving speed and load condition.
- Protection from operating error as far as necessary, is possible via electronic protection.
- Protection from overspeeds(On the basis of engine and turbine speed).
- Automatic reversing(Driving speed-dependent).
- Pressure cut off possible.
- Change-over possibility for Auto/manual mode.
- Downshifting functions possible.

(3) Gearshifts

The control unit(EST-37) shifts the required speeds fully-automatically under consideration of the following criteria.

- Gear selector position
- Driving speed
- Load level

At the same time, the following speeds are picked up by the control unit(EST-37).

- n Engine
- n Turbine
- n Central gear train
- n Output

- Neutral position

Neutral position is selected through the gear selector.

After the ignition is turned on, the electronics remains in the waiting state; By the position **neutral** of the gear selector, respectively by pressing on the key **neutral**, the control unit(EST-37) becomes ready for operation.

Now, a speed can be engaged.

- Speed engagement

In principle, the speed, adapted to the driving speed(At standing, or rolling machine), will be engaged. The engagement is realized in dependence on load and rotational speed.

- Upshifting under load

Upshifting under load will be then realized if the machine can still accelerate by it.

- Downshifting under load

Downshifting under load will be realized if more traction force is needed.

- Upshifting in coasting condition

In the coasting condition, the upshifting will be suppressed if the speed of the machine on a slope shall not be further increased.

- Downshifting in coasting condition

Downshiftings in the coasting condition will be realized if the machine shall be retarded.

- Reversing

At speeds below the reversing limit, direct reversing can be carried out at any time in the speeds 1F 1R and 2F 2R(As a rule, this is the maximum driving speed of the 2nd speed).

Reversings in the speeds 3 and 4 are realized dependent on the driving speed.

- Above the programmed reversing limit, the machine is braked down by downshifts of the electronic control unit(EST-37) to the permitted driving speed, and only then, the reversing into the correspondingly preselected speed will be carried out.
- Below the permitted driving speed, the reversing is carried out immediately.

(4) Specific kickdown function

By means of the kickdown-button, integrated in the gear selector, it is at any time possible to select in the speeds 2F and 2R(i.e. position 2 of the gear selector, at automatic mode also in the 2nd speed of the automatic range) the 1st speed by a short touch. This kickdown state can be cancelled by :

1. Pressing the kickdown-button again
2. Realization of a reversal operation
3. Change of the gear selector position by the following modification
Gear selector(DW-3) - (Rotation) of the driving position 1...4.


The kickdown function will be always terminated by shifting to neutral.

(5) Clutch cut off

Especially at wheel loaders, the clutch cut off can be activated through a switch signal. It is interrupting the power flow in the transmission as long as this signal is active. Besides, this function can be used for the transmission-neutral shifting at applied hand brake or as **emergency-stop**(In this case, a restarting is only possible through the gear selector-neutral position).

2) LIMITED SLIP DEFFERENTIAL(FRONT AND REAR)


(1) Structure

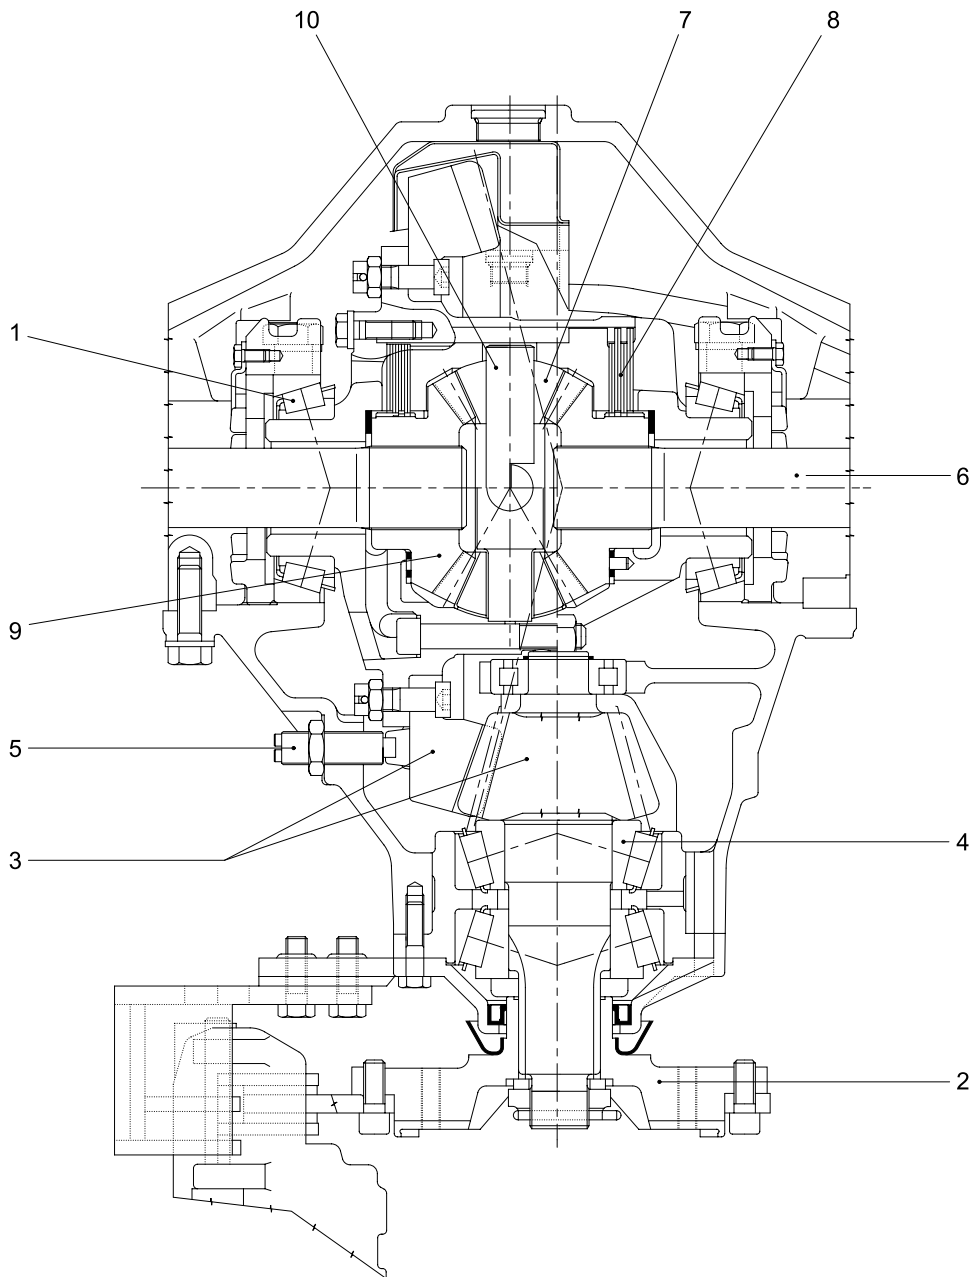

7803APT21

- | | | | |
|---|----------------------|----|--------------|
| 1 | Roller bearing | 6 | Axle shaft |
| 2 | Input flange | 7 | Pinion gear |
| 3 | Bevel gear set | 8 | Clutch |
| 4 | Differential housing | 9 | Side gear |
| 5 | Adjusting screw | 10 | Pinion shaft |

(2) Operation

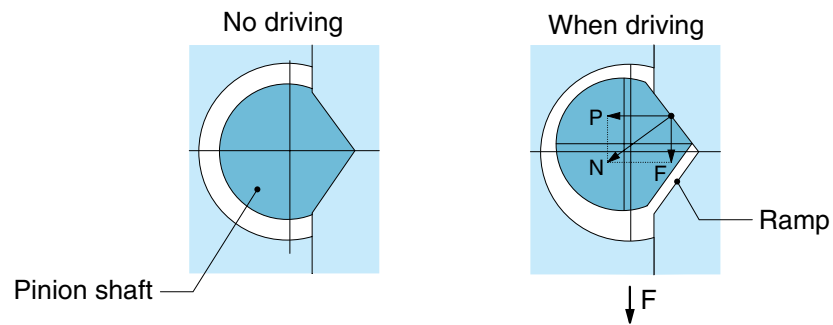

7803ASPT16

When the differential case is rotated, pinion shaft is moved up on the ramp by the resistance force of tires as the figure, and then force P is generated. This force P becomes the engaging force of clutch.

- ① When travelling straight(equal resistance from road surface to left and right tires). Under this condition, both clutches are engaged and the left and right side gears are driven with the same force.
- ② When travelling on soft ground(Resistance from road surface to right tire is smaller). At rotating speed of right tire becomes faster than left due to the smaller resistance of right tire, right clutch is engaged and torque of faster rotating right axle shaft is added to left axle shaft through differentiating gear case.


3) DIFFERENTIAL

(1) Description

When the machine makes a turn, the outside wheel must rotate faster than the inside wheel. A differential is a device which continuously transmits power to the right and left wheels while allowing them to turn at different speeds, during a turn.


The power from the drive shaft passes through bevel pinion(1) and is transmitted to the bevel gear(2). The bevel gear changes the direction of the motive force by 90 degree, and at the same time reduces the speed.

It then transmits the motive force through the differential(3) to the axle gear shaft(4).

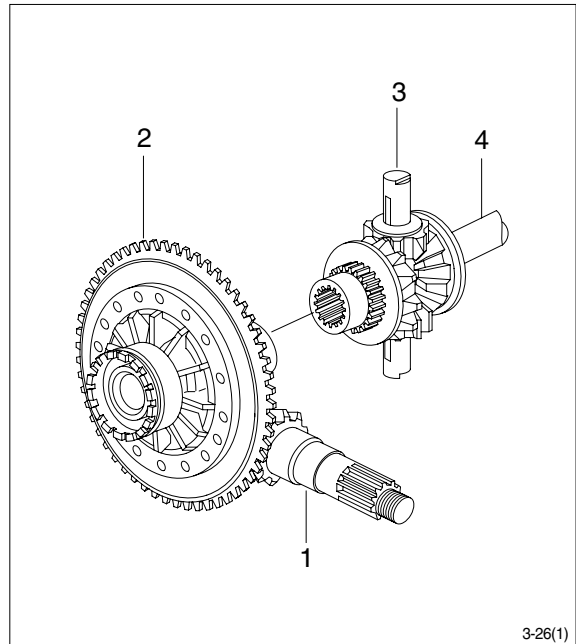

(2) When driving straight forward


When the machine is being driven straight forward and the right and left wheels are rotating at the same speed, so the pinion gear inside the differential assembly do not rotate. The motive force of the carrier is sent through the pinion gear and the side gear, therefore the power is equally transmitted to the left and right axle gear shaft.

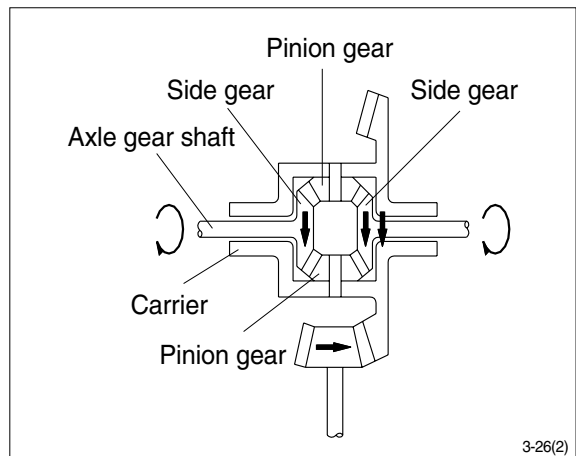

(3) When turning

When turning, the rotating speed of the left and right wheels is different, so the pinion gear and side gear inside the differential assembly rotate in accordance with the difference between the rotating speed of the left and right wheels.


The power of the carrier is then transmitted to the axle gear shafts.

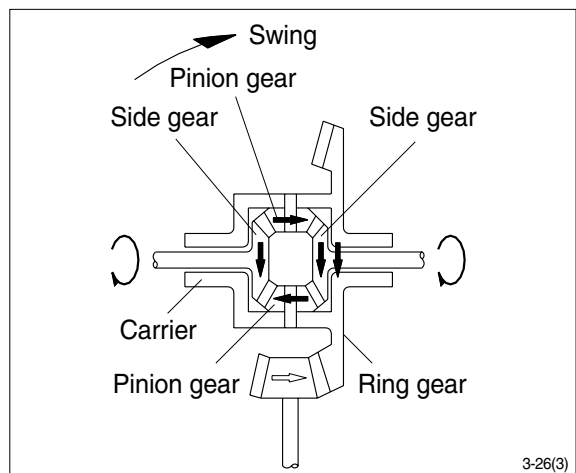

4) TORQUE PROPORTIONING DIFFERENTIAL


(1) Function

 - ① Because of the nature of their work, 4-wheel-drive loaders have to work in places where the road surface is bad. In such places, if the tires slip, the ability to work as a loader is reduced, and also the life of the tire is reduced. The torque proportioning differential is installed to overcome this problem. In structure it resembles the differential of an automobile, but the differential pinion gear has an odd number of teeth. Because of the difference in the resistance from the road surface, the position of meshing of the pinion gear and side gear changes, and this changes the traction of the left and right tires.



(2) Operation


- ① **When traveling straight**(Equal resistance from road surface to left and right tires)
Under this condition, the distances involving the engaging points between right and left side gears and pinion-a and b-are equal and the pinion is balanced as $FL \times a = FR \times b$. Thus, $FL = FR$, and the right and left side gears are driven with the same force.

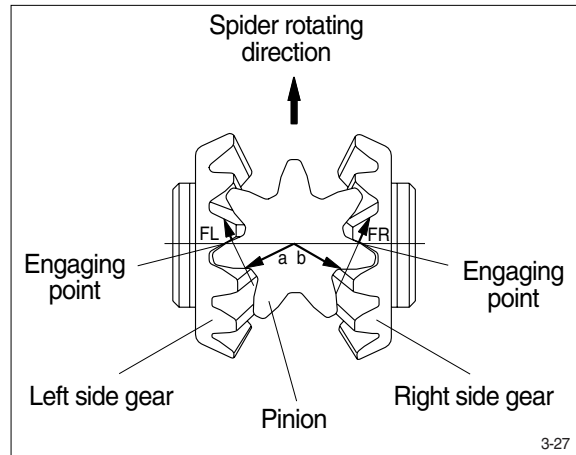


② **When traveling on soft ground**
(Resistance from road surface to left and right tires is different)

If the road resistance to the left wheel is smaller, the left side gear tends to rotate forward, and this rotation changes the engaging points between the side gears and pinion. As a result, the distances involving the engaging points becomes $a > b$. The pinion now is balanced as $FL \times a = FR \times b$, where $FL > FR$. The right side gear is driven with a greater force than the left side gear. The torque can be increased by up to about 30% for either side gear.

The pinion therefore does not run idle and driving power is transmitted to both side gears until the difference between road resistance to the right and left wheels reaches about 30%.

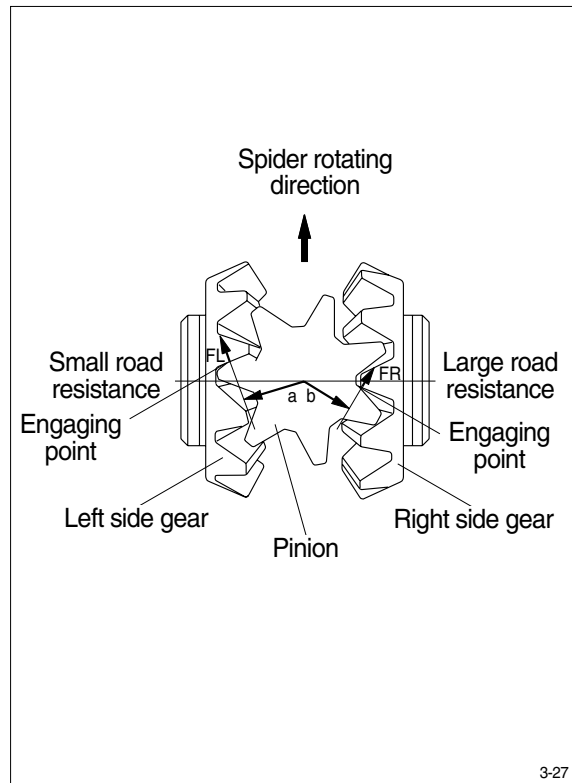

5) FINAL DRIVE(Front & rear)

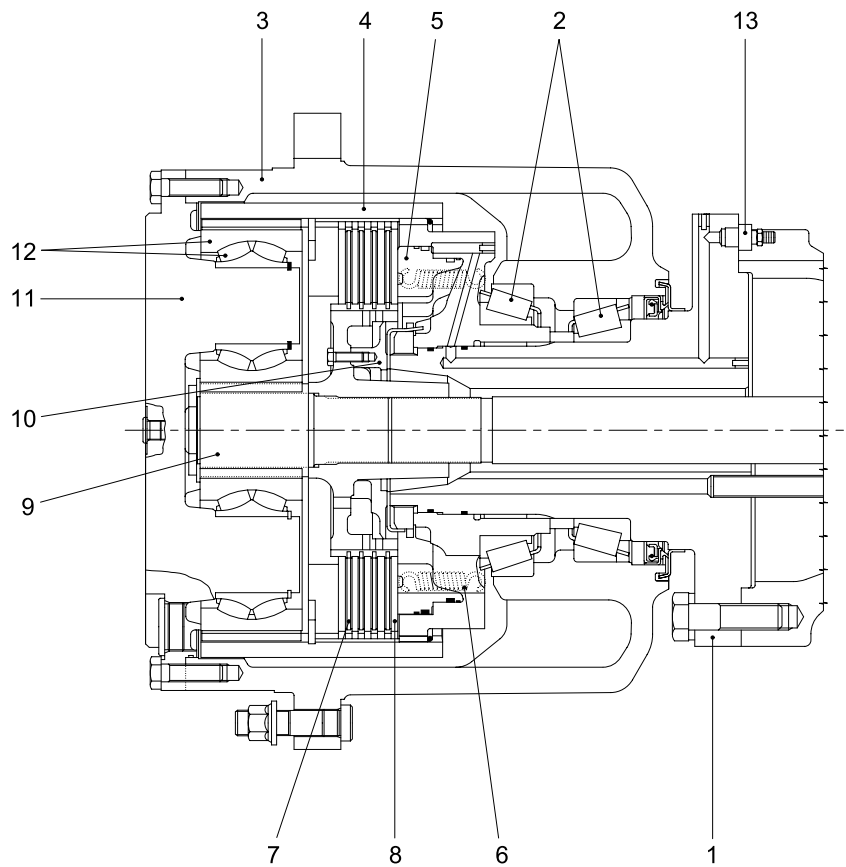

7803APT22


- | | | | |
|---|-------------------|----|-------------------|
| 1 | Hub carrier assy | 8 | Outer clutch disc |
| 2 | Roller bearing | 9 | Sun gear shaft |
| 3 | Hub | 10 | Sun gear |
| 4 | Ring gear | 11 | Planetary carrier |
| 5 | Piston | 12 | Planetary gear |
| 6 | Tension spring | 13 | Vent valve |
| 7 | Inner clutch disc | 14 | Axle shaft |

(1) To gain a large drive force, the final drive uses a planetary gear system to reduce the speed and send drive force to the tires.

(2) The power transmitted from the differential through axle shaft(14) to sun gear(10) is transmitted to planetary gear(12). The planetary gear rotates around the inside of a fixed ring gear(4) and in this way transmits rotation at a reduced speed to the planetary carrier(11).

This power is then sent to the wheels which are installed to the planetary carriers.

6. TIRE AND WHEEL

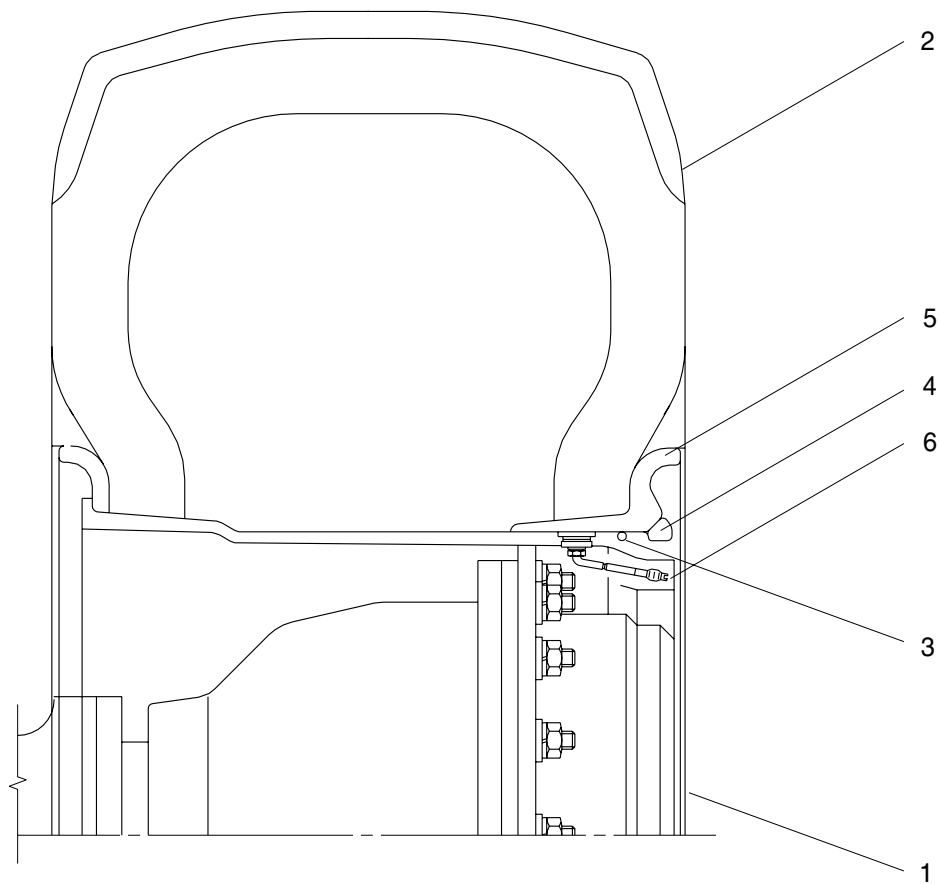

3-30

- | | | |
|-------------|-------------|------------------|
| 1 Wheel rim | 3 O-ring | 5 Side ring |
| 2 Tire | 4 Lock ring | 6 Valve assembly |

- 1) The tire acts to absorb the shock from the ground surface to the machine, and at the same time they must rotate in contact with the ground to gain the power which drives the machine.
- 2) Various types of tires are available to suit the purpose. Therefore it is very important to select the correct tires for the type of work and bucket capacity.