

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1	Precaution	8-1
Group 2	Tightening Torque	8-4
Group 3	Pump Device	8-7
Group 4	Main Control Valve	8-29
Group 5	Swing Device	8-43
Group 6	Travel Device	8-64
Group 7	RCV Lever	8-102
Group 8	Turning Joint	8-117
Group 9	Boom, Arm and Bucket Cylinder	8-122
Group 10	Undercarriage	8-139
Group 11	Work Equipment	8-151