


GROUP 6 MECHATRONICS SYSTEM BY HYPER DAT

1. ALL ACTUATORS SPEED ARE SLOW


- Before using the HYPER DAT make sure you understand the user's guide of HYPER DAT.
 - Before mounting or dismounting the HYPER DAT, always turn the starting switch OFF.
 - Before starting switch turn ON or OFF, check all related connectors are properly inserted.
- ※ Confirm the engine speed is normal. If not, fix the engine speed to each mode specification.

Spec : H-mode 2250 +50rpm
L-mode 2000 +50rpm

S-mode 2250 +50rpm
F-mode 1650 +50rpm

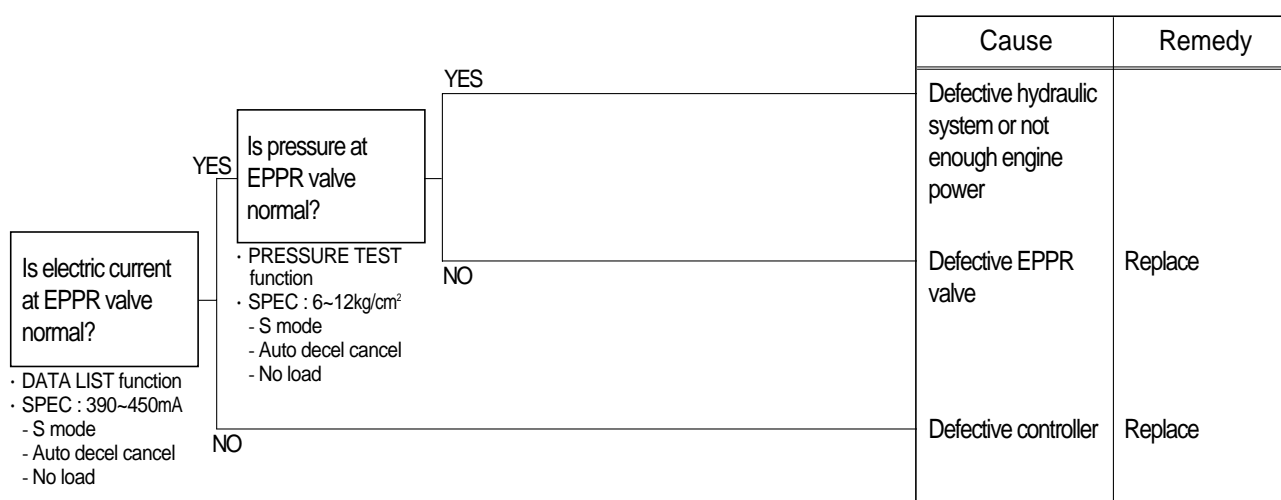


Wiring diagram

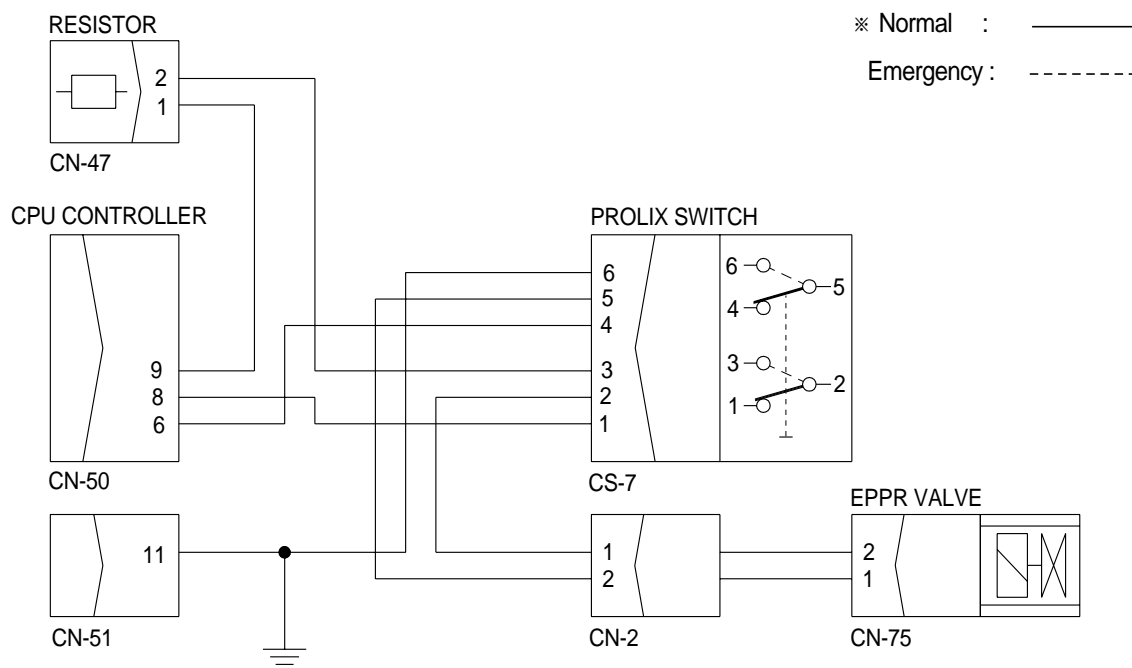


2. CLUSTER LAMPS ARE OFF IMMEDIATELY AFTER KEY SWITCH OFF

- Before using the HYPER DAT make sure you understand the user's guide of HYPER DAT.
- Before mounting or dismounting the HYPER DAT, always turn the starting switch OFF.
- Before starting switch turn ON or OFF, check all related connectors are properly inserted.

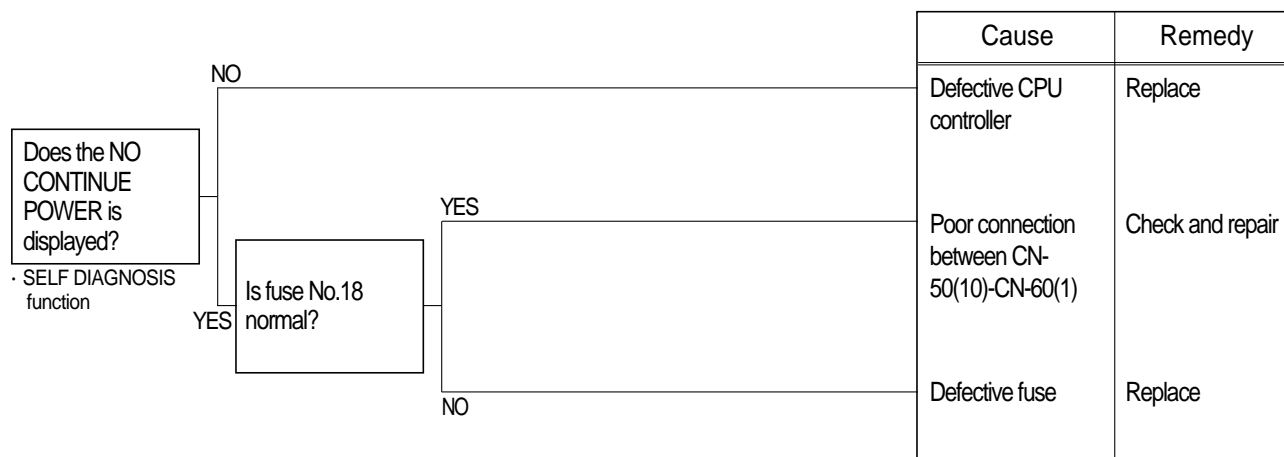


Wiring diagram

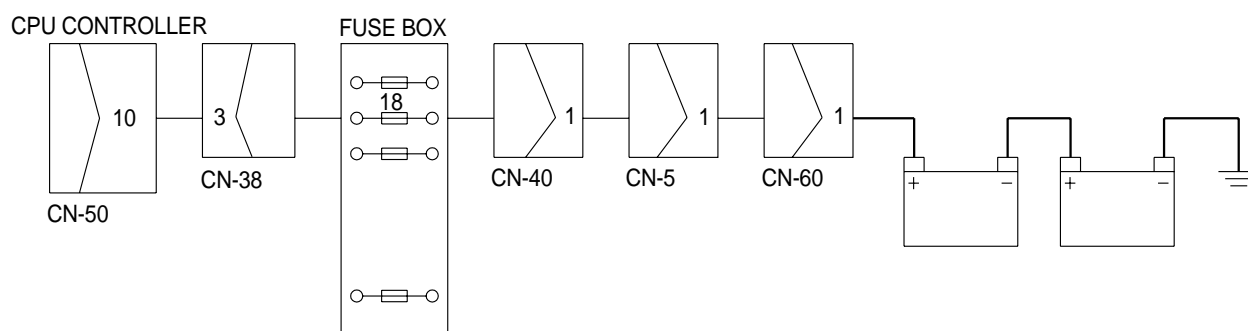


3. CLUSTER LAMPS ARE STILL ON AFTER STARTING KEY OFF

- Before using the HYPER DAT make sure you understand the user's guide of HYPER DAT.
- Before mounting or dismounting the HYPER DAT, always turn the starting switch OFF.
- Before starting switch turn ON or OFF, check all related connectors are properly inserted.

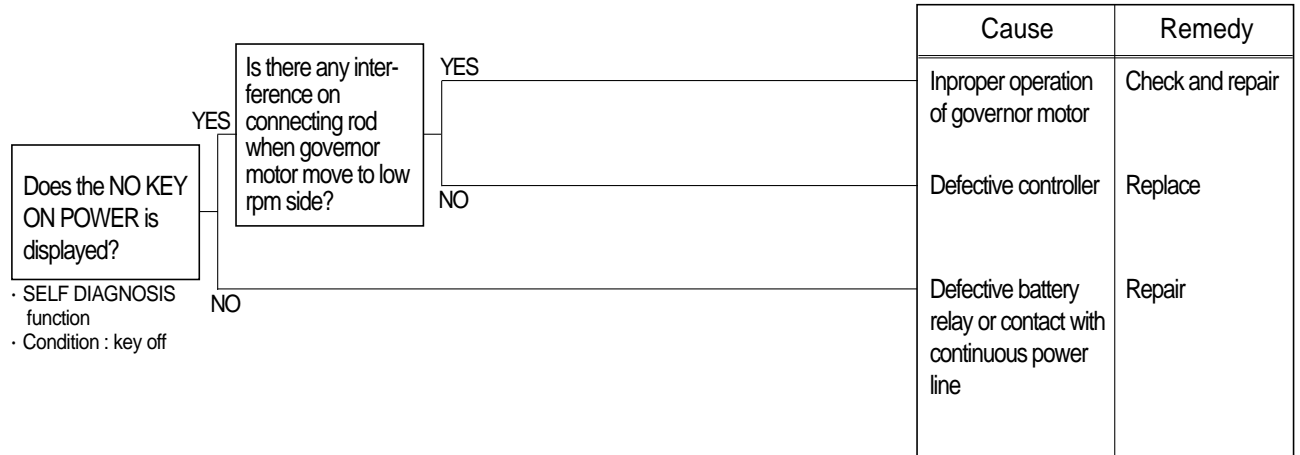


Wiring diagram

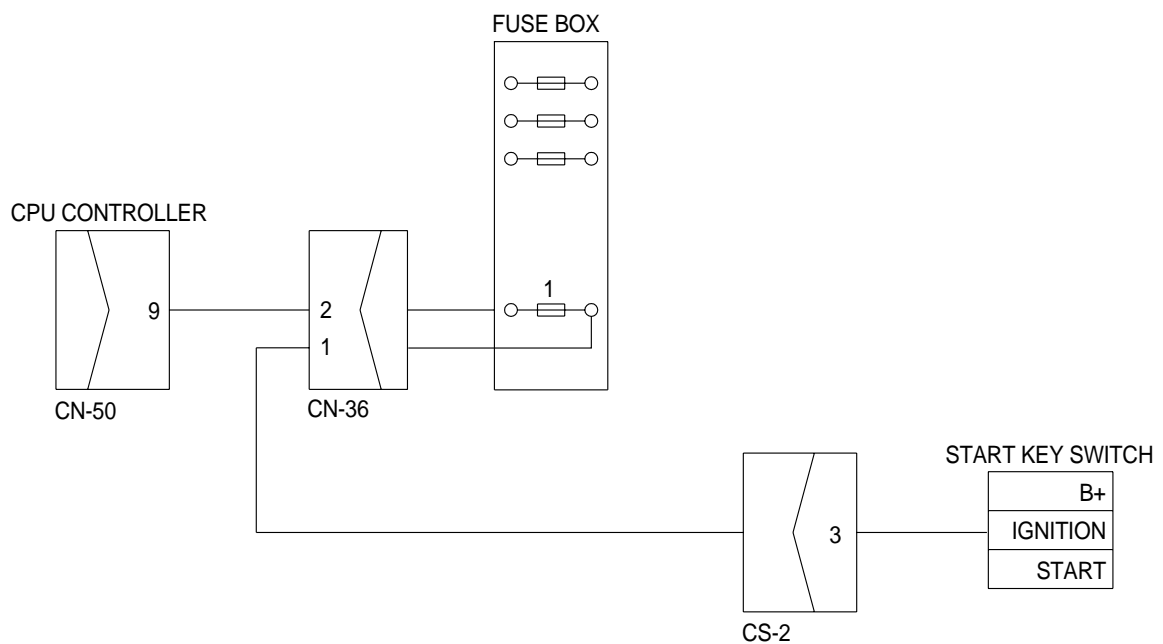


4. CLUSTER LAMPS ARE NOT CHANGING OR FUNCTION IS ABNORMAL WHEN THE RELATED SWITCH ARE PUSHED

- Before using the HYPER DAT make sure you understand the user's guide of HYPER DAT.
- Before mounting or dismounting the HYPER DAT, always turn the starting switch OFF.
- Before starting switch turn ON or OFF, check all related connectors are properly inserted.

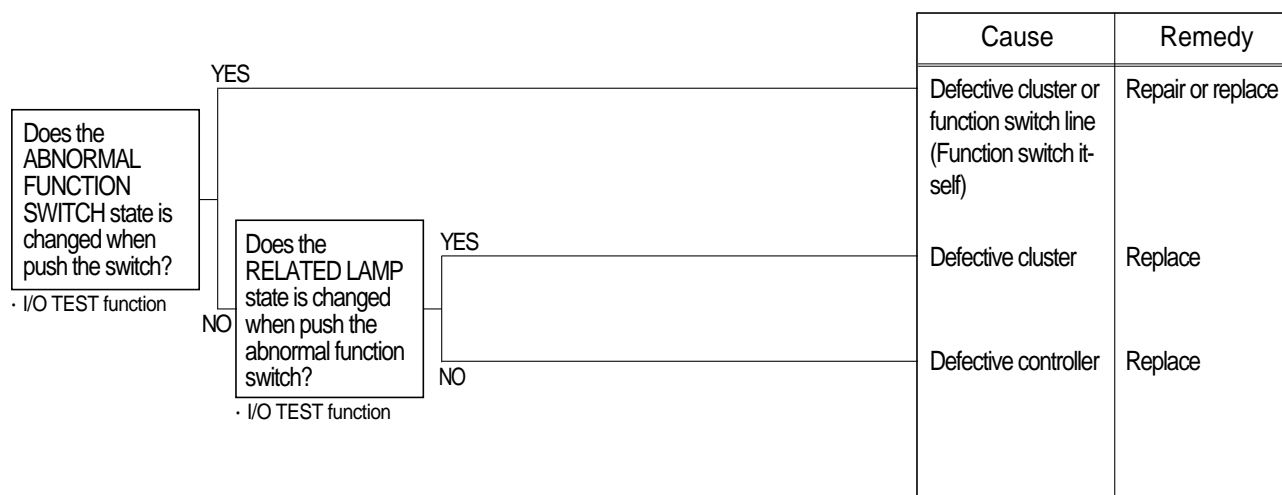


Wiring diagram

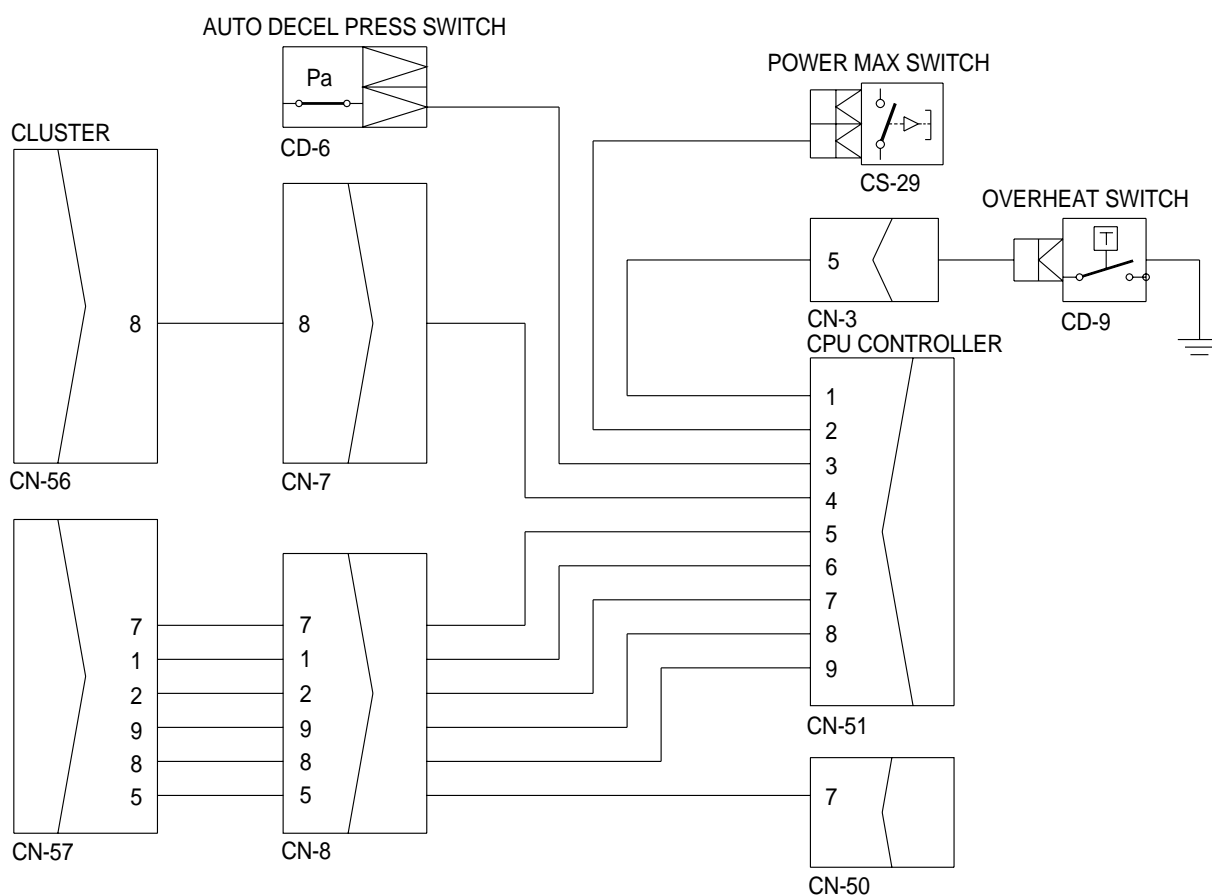


5. AUTO DECEL SYSTEM DOES NOT WORK

- Before using the HYPER DAT make sure you understand the user's guide of HYPER DAT.
- Before mounting or dismounting the HYPER DAT, always turn the starting switch OFF.
- Before starting switch turn ON or OFF, check all related connectors are properly inserted.

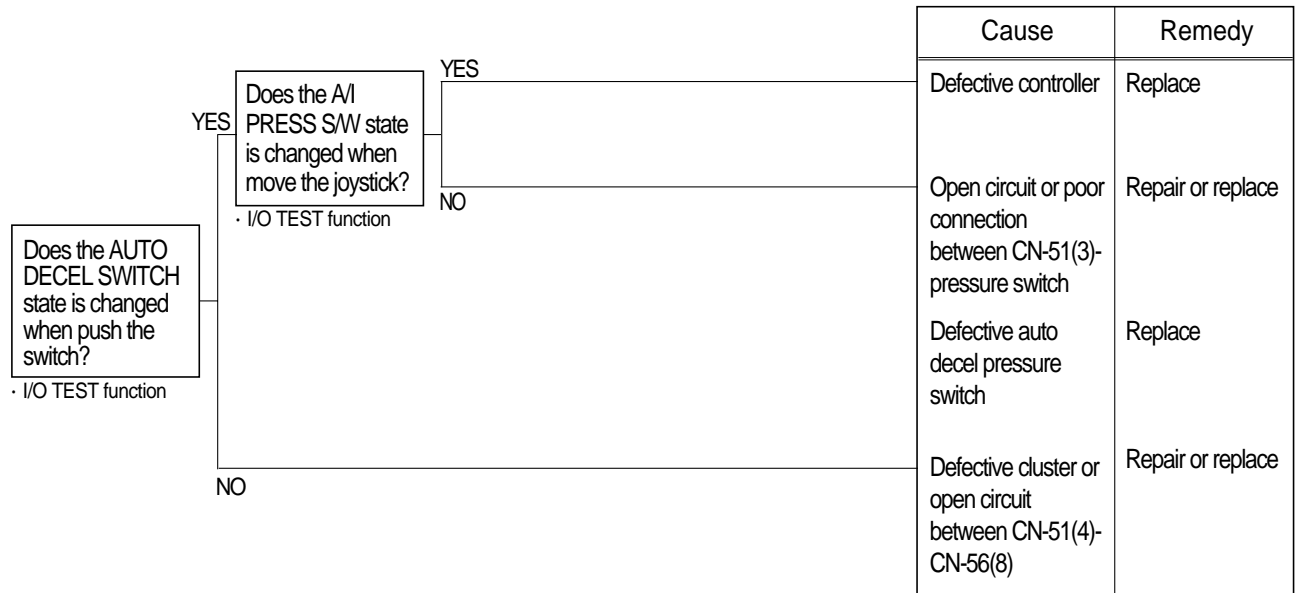


Wiring diagram

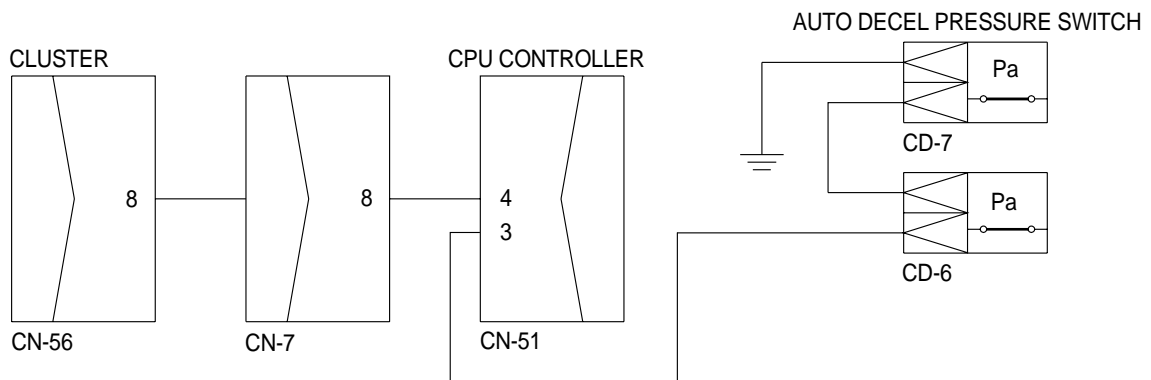


6. ENGINE SPEED IS NOT CHANGING WHEN CHANGE THE MODE

- Before using the HYPER DAT make sure you understand the user's guide of HYPER DAT.
- Before mounting or dismounting the HYPER DAT, always turn the starting switch OFF.
- Before starting switch turn ON or OFF, check all related connectors are properly inserted.

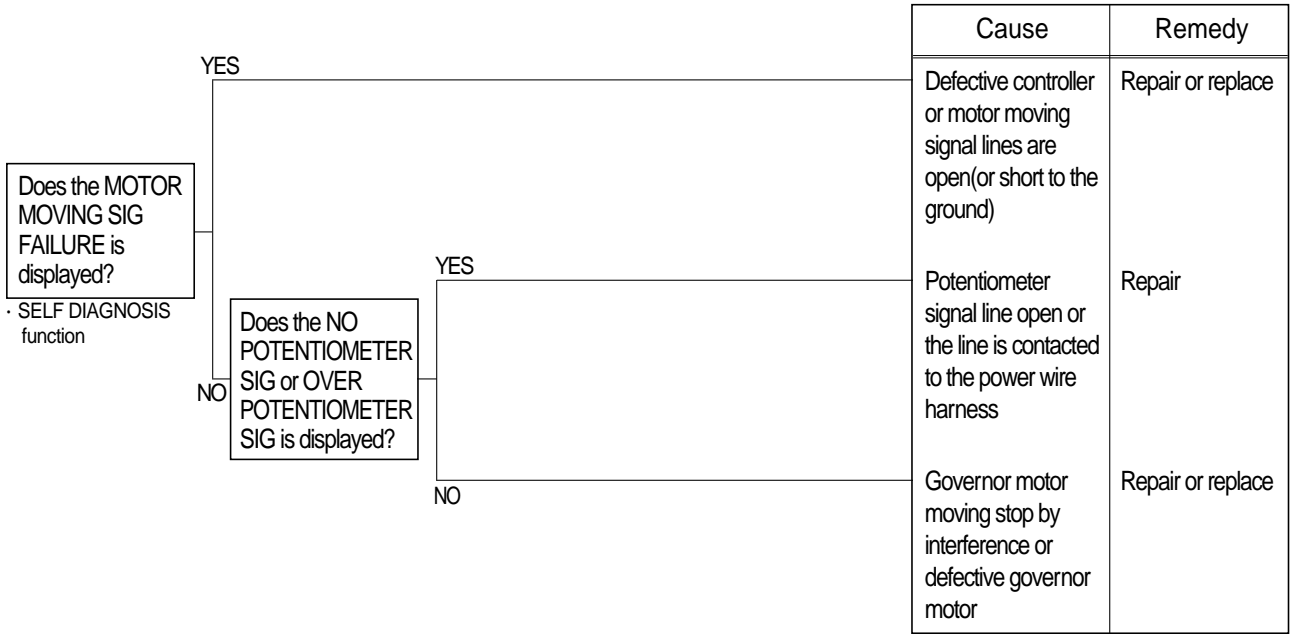


Wiring diagram

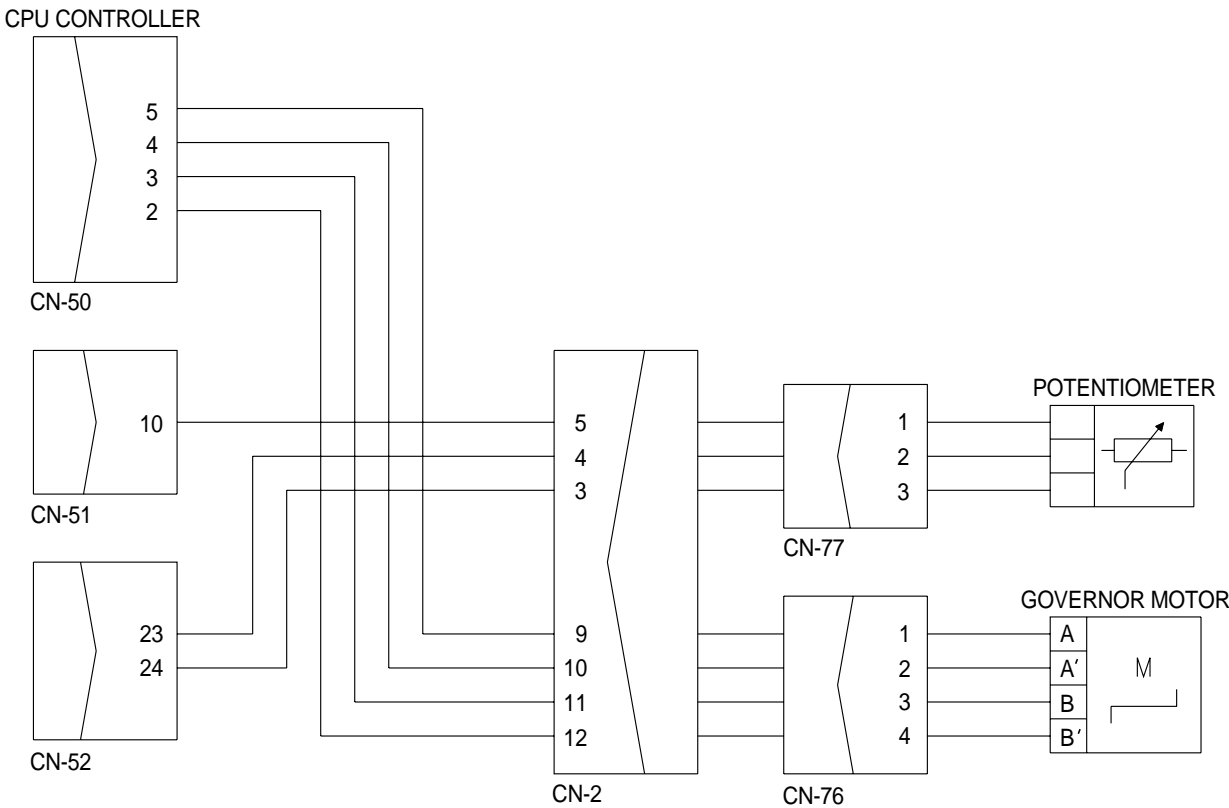


7. MALFUNCTION OF POWER MAX

- Before using the HYPER DAT make sure you understand the user's guide of HYPER DAT.
- Before mounting or dismounting the HYPER DAT, always turn the starting switch OFF.
- Before starting switch turn ON or OFF, check all related connectors are properly inserted.

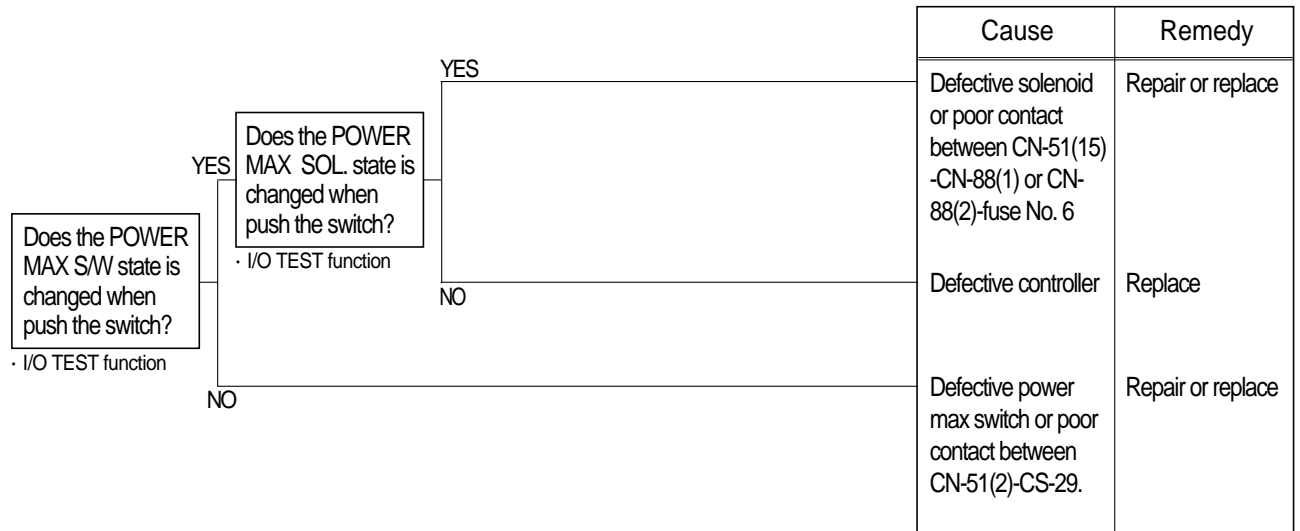

Wiring diagram

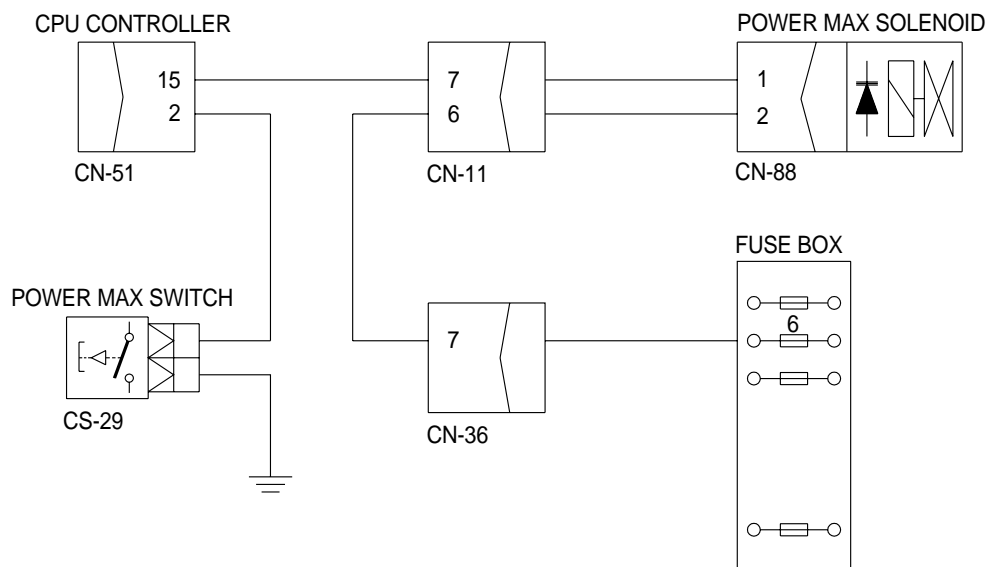

- Before using the HYPER DAT make sure you understand the user's guide of HYPER DAT.
- Before mounting or dismounting the HYPER DAT, always turn the starting switch OFF.
- Before starting switch turn ON or OFF, check all related connectors are properly inserted.

