


SECTION 4 ELECTRICAL SYSTEM


GROUP 1 COMPONENT LOCATION

1. LOCATION 1

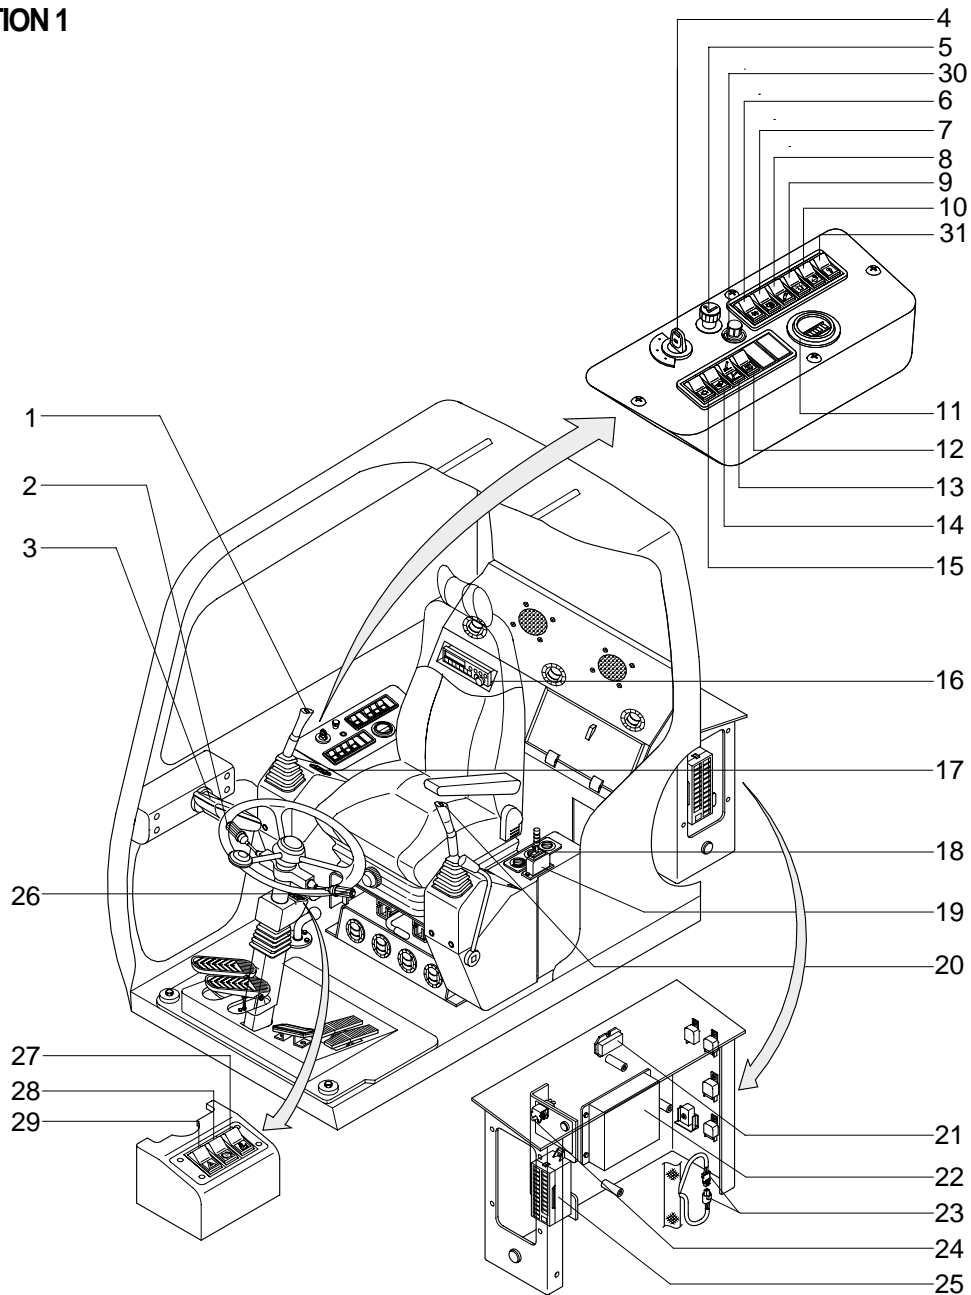

1	Horn switch	12	Arm half switch	23	Emergency engine starting connector
2	RH multifunction switch	13	Outrigger & dozer selector switch	24	Prolix switch
3	Cluster	14	Work light switch	25	Fuse box
4	Starting switch	15	Main light switch	26	LH multifunction switch
5	Cigar lighter	16	Cassette & radio	27	RAM lock switch
6	Aircon switch	17	Warning indicator	28	Parking braker switch
7	Cold start switch(Optional)	18	Aircon heater switch	29	Hazard switch
8	Breaker switch(Optional)	19	Dozer & outrigger lever	30	Swing speed switch
9	Beacon switch(Optional)	20	Power boost switch	31	Overload switch
10	Quick coupling switch	21	Resistor		
11	Service meter	22	CPU controller		

2. LOCATION 2

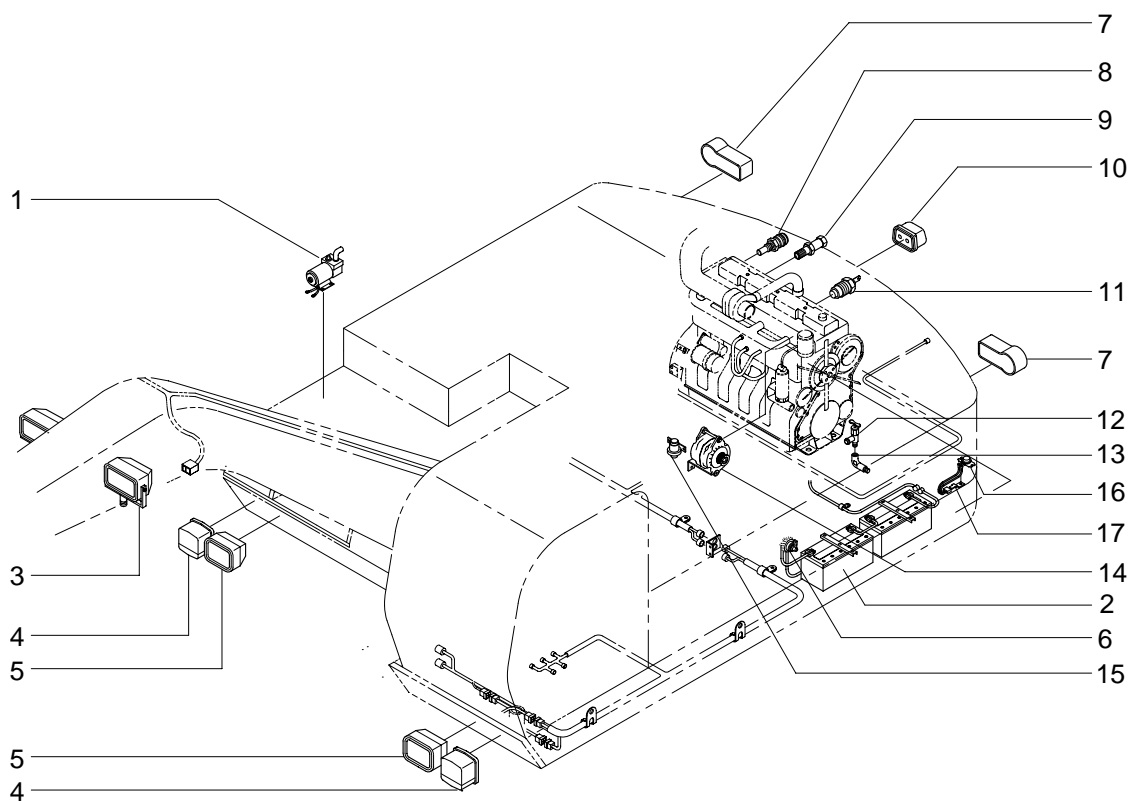

- | | | |
|--------------------------|-------------------------------|--------------------|
| 1 Fuel filter pump | 7 Rear combination lamp | 13 Heater adapter |
| 2 Battery | 8 Temperature sendor | 14 Alternator |
| 3 Work light | 9 Engine speed sensor | 15 Start relay |
| 4 Front compination lamp | 10 Number plate lamp | 16 Battery relay |
| 5 Head lamp | 11 Engine oil pressure switch | 17 Connector plate |
| 6 Master switch | 12 Heater valve | |