

## SECTION 7 DISASSEMBLY AND ASSEMBLY

Group 1	Precaution .....	7-1
Group 2	Tightening Torque .....	7-4
Group 3	Pump Device .....	7-7
Group 4	Main Control Valve .....	7-38
Group 5	Swing Device .....	7-53
Group 6	Travel Device .....	7-74
Group 7	Gear box .....	7-98
Group 8	Steering valve .....	7-126
Group 9	Front axle .....	7-147
Group 10	Rear axle .....	7-238
Group 11	RCV Lever .....	7-310
Group 12	Turning Joint .....	7-324
Group 13	Boom, Arm and Bucket Cylinder .....	7-329
Group 14	Work Equipment .....	7-348