

SECTION 8 DISASSEMBLY AND ASSEMBLY

Group 1	Precaution	8-1
Group 2	Tightening Torque	8-4
Group 3	Pump Device	8-7
Group 4	Main Control Valve	8-25
Group 5	Swing Device	8-37
Group 6	Travel Device	8-58
Group 7	RCV Lever	8-83
Group 8	Turning Joint	8-98
Group 9	Boom, Arm and Bucket Cylinder	8-103
Group 10	Undercarriage	8-121
Group 11	Work Equipment	8-133