

GROUP 9 BOOM, ARM AND BUCKET CYLINDER

1. REMOVAL AND INSTALL

1) BUCKET CYLINDER

(1) Removal

Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.


Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.

⚠ Loosen the breather slowly to release the pressure inside the hydraulic tank.

Escaping fluid under pressure can penetrate the skin causing serious injury.


Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.

Set block between bucket cylinder and arm.

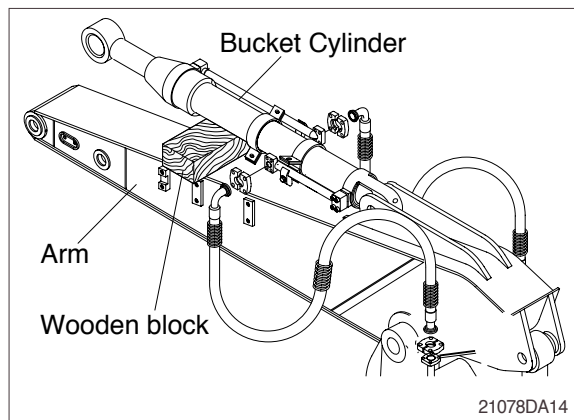


Remove nuts(3), bolt(2) and pull out pin (1).

Tie the rod with wire to prevent it from coming out.

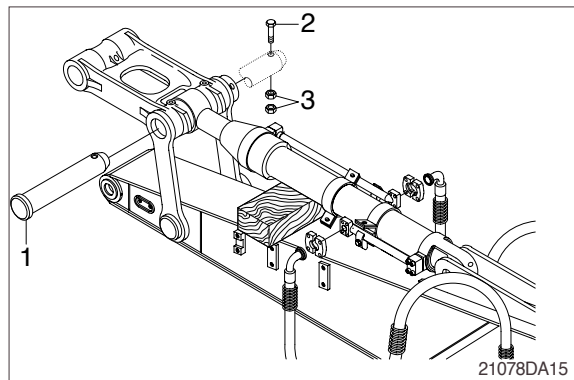


Disconnect bucket cylinder hoses(4) and put plugs(5) on cylinder pipe.

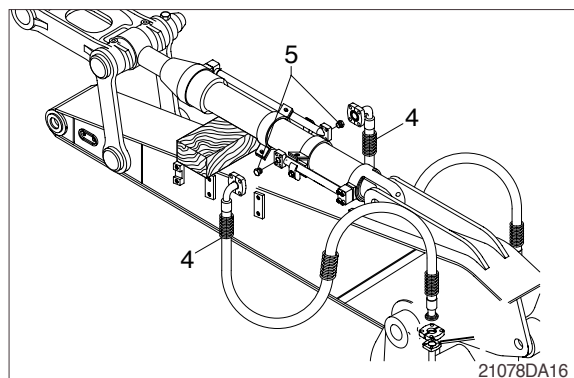

Sling bucket cylinder assembly, and remove bolt(6), plate(7) then pull out pin (5).

Remove bucket cylinder assembly(8).

· Weight : 290kg(640lb)

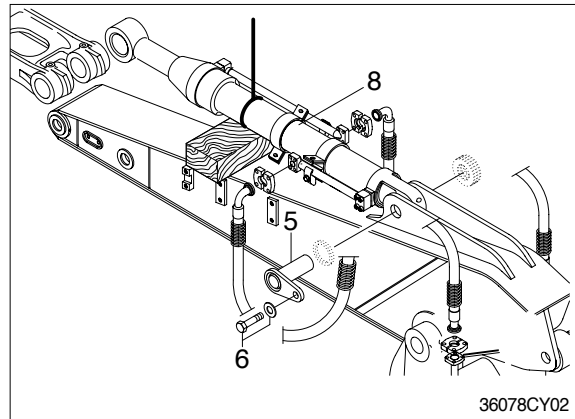

(2) Install

Carry out installation in the reverse order to removal.

- ▲ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.

Bleed the air from the bucket cylinder.

Confirm the hydraulic oil level and check the hydraulic oil leak or not.

2) ARM CYLINDER

(1) Removal

Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.


Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.

▲ Loosen the breather slowly to release the pressure inside the hydraulic tank.

Escaping fluid under pressure can penetrate the skin causing serious injury.


Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.

Set block between arm cylinder and boom.

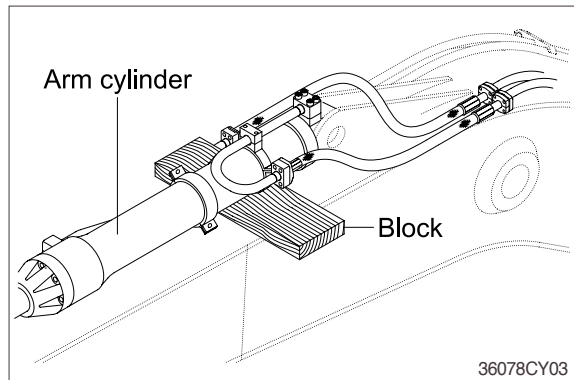


Remove bolt(2) and pull out pin(1).

Tie the rod with wire to prevent it from coming out.

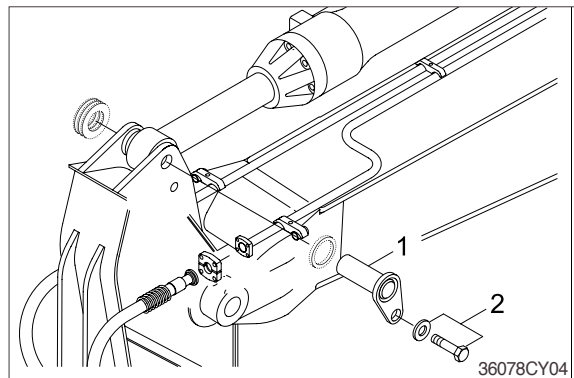


Disconnect arm cylinder hoses(4) and put plugs on cylinder pipe.

Disconnect greasing pipings(5).

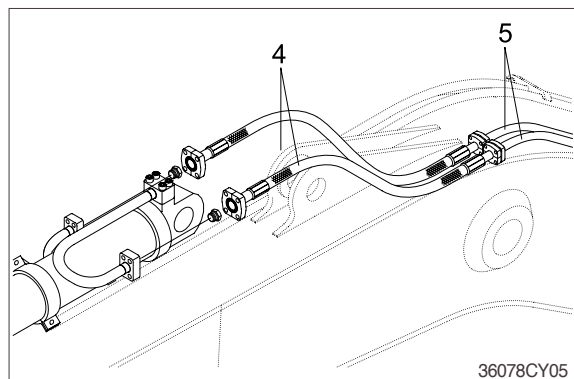

Sling arm assembly(9), and remove bolt (7), plate(8) then pull out pin(6).
Remove arm cylinder assembly(9).
· Weight : 460kg(1014lb)

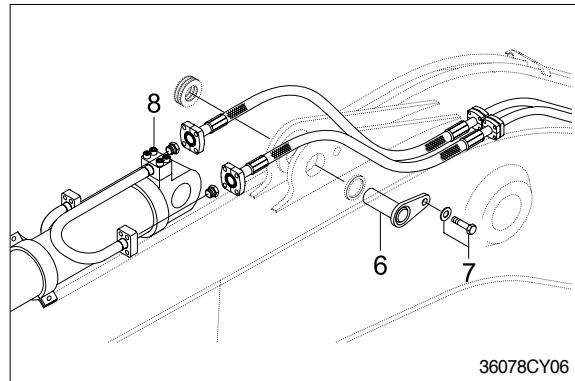

(2) Install

Carry out installation in the reverse order to removal.

- ⚠ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.

Bleed the air from the arm cylinder.

Confirm the hydraulic oil level and check the hydraulic oil leak or not.

3) BOOM CYLINDER

(1) Removal

Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.

Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.


⚠ Loosen the breather slowly to release the pressure inside the hydraulic tank.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.


Disconnect greasing hoses(1).

Sling boom cylinder assembly.

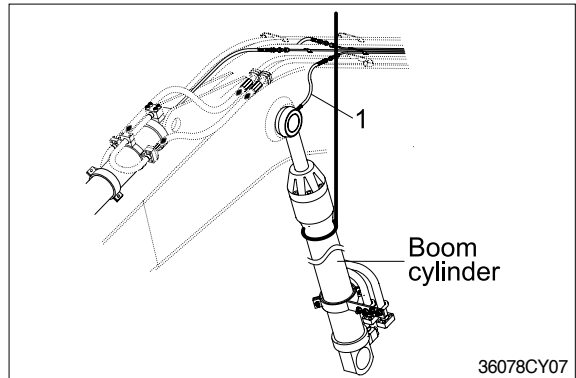


Remove bolt(4), stop plate(5) and pull out pin(2).


Tie the rod with wire to prevent it from coming out.

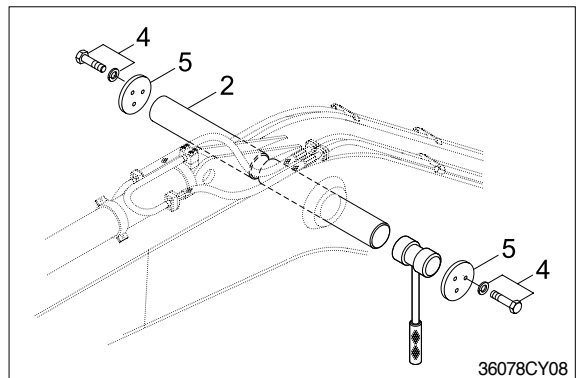


Lower the boom cylinder assembly(6) on a stand.

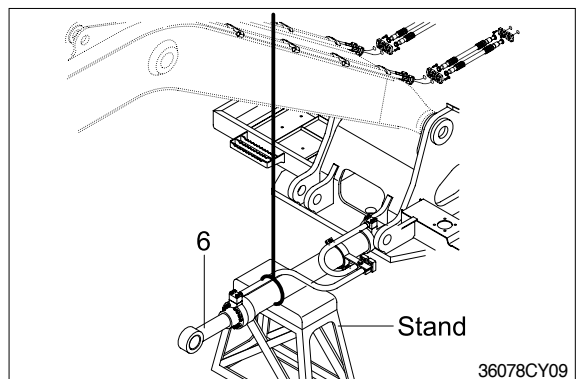

Disconnect boom cylinder hoses(7), and put plugs on cylinder pipe.

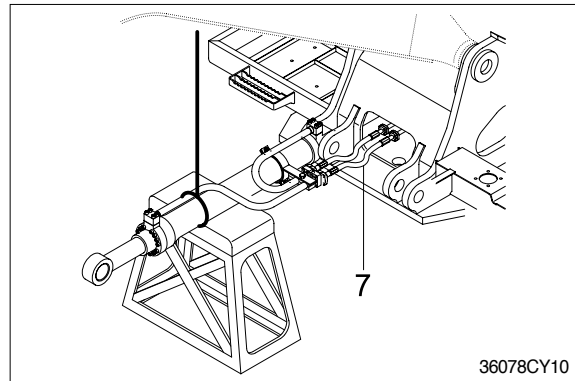

Remove bolt(9) and pull out pin(8).
Remove boom cylinder assembly(6).
· Weight : 338kg(745lb)

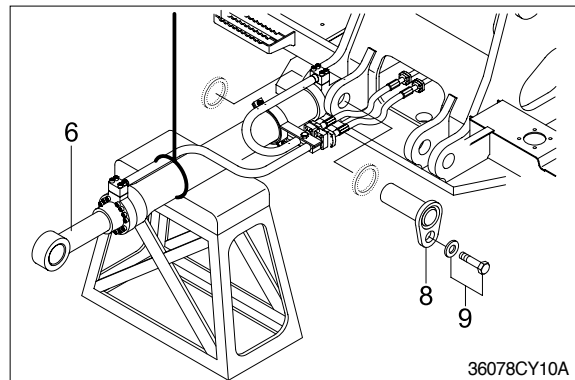

(2) Install

Carry out installation in the reverse order to removal.

- ▲ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.


Bleed the air from the boom cylinder.

Confirm the hydraulic oil level and check the hydraulic oil leak or not.


2. DISASSEMBLY AND ASSEMBLY

1) STRUCTURE

(1) Bucket cylinder

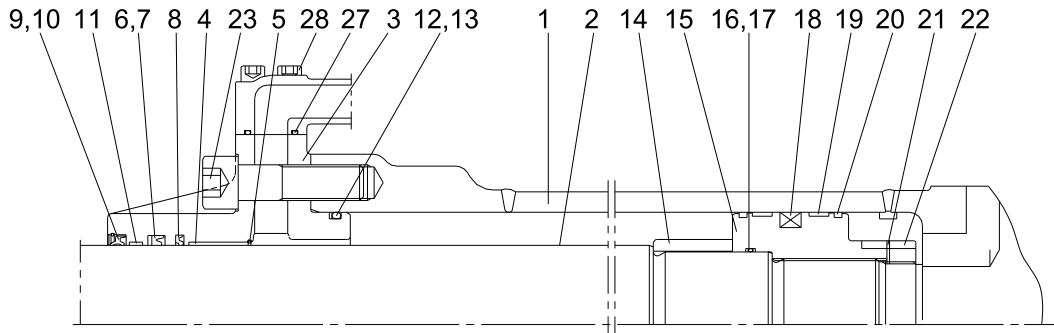


Internal detail

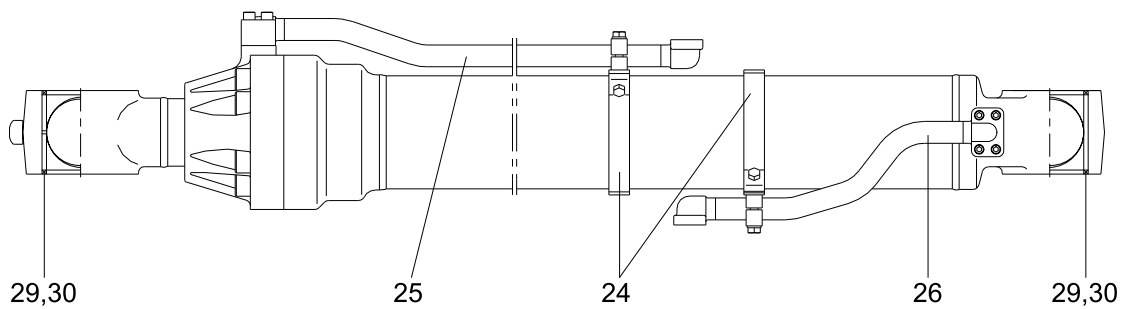

36078CY11

1	Tube assembly	11	Wear ring	21	Lock washer
2	Rod assembly	12	O-ring	22	Lock nut
3	Gland	13	Back up ring	23	Hexagon socket head bolt
4	Du bushing	14	Cushion ring	24	Band assembly
5	Snap ring	15	Piston	25	Pipe assembly(R)
6	Rod seal	16	O-ring	26	Pipe assembly(B)
7	Back up ring	17	Back up ring	27	O-ring
8	Buffer ring	18	Piston seal	28	Hexagon socket head bolt
9	Dust wiper	19	Wear ring	29	Pin bushing
10	Snap ring	20	Dust ring	30	Dust seal


(2) Arm cylinder

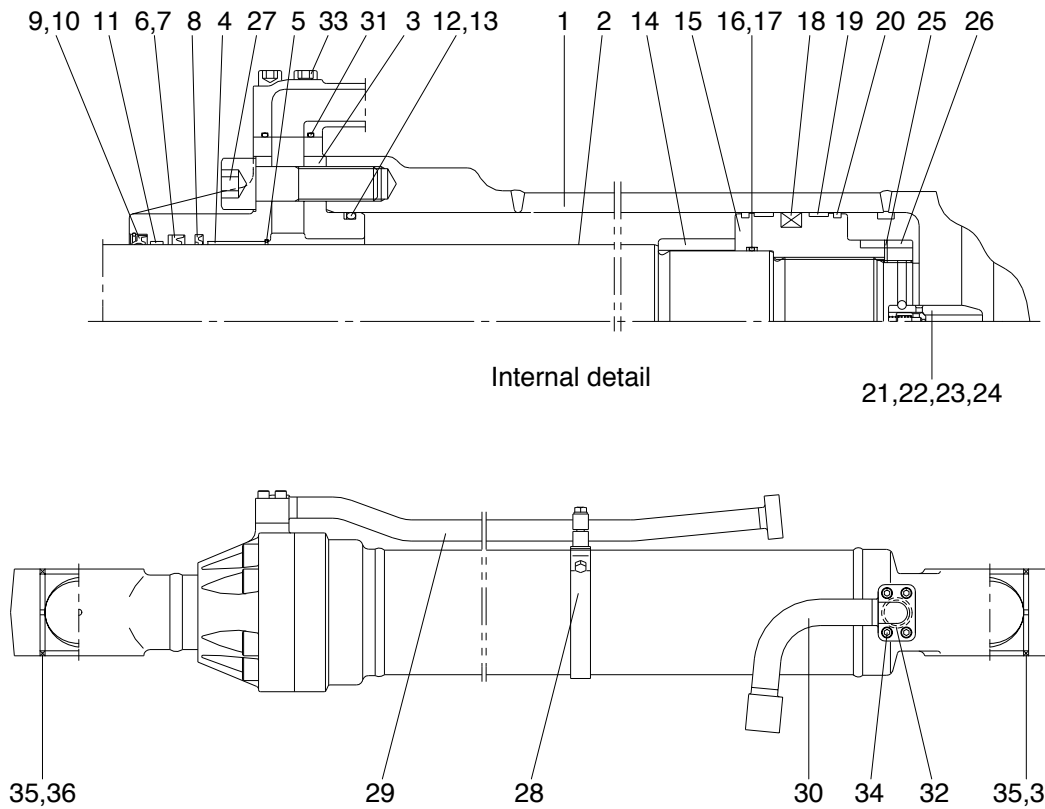


36078CY12

1	Tube assembly	13	Back up ring	25	Lock washer
2	Rod assembly	14	Cushion ring	26	Lock nut
3	Gland	15	Piston	27	Hexagon socket head bolt
4	Du bushing	16	O-ring	28	Band assembly
5	Snap ring	17	Back up ring	29	Pipe assembly(R)
6	Rod seal	18	Piston seal	30	Pipe assembly(B)
7	Back up ring	19	Wear ring	31	O-ring
8	Buffer ring	20	Dust ring	32	O-ring
9	Dust wiper	21	Cushion spear	33	Hexagon socket head bolt
10	Snap ring	22	Check valve	34	Hexagon socket head bolt
11	Wear ring	23	Coil spring	35	Pin bushing
12	O-ring	24	Stop ring	36	Dust seal

(3) Boom cylinder

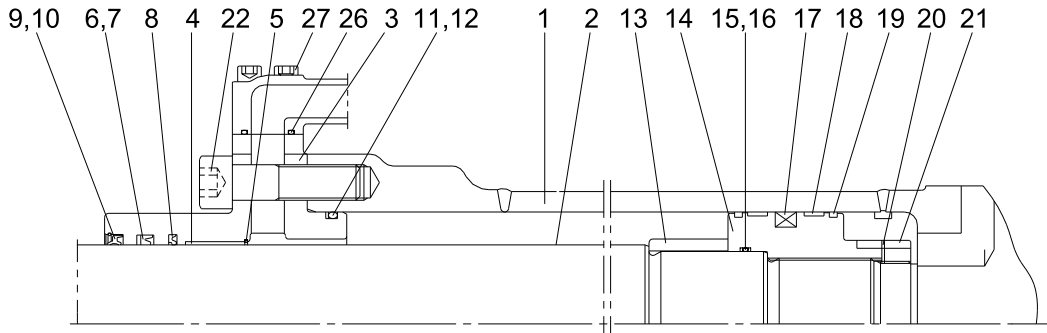

Internal detail

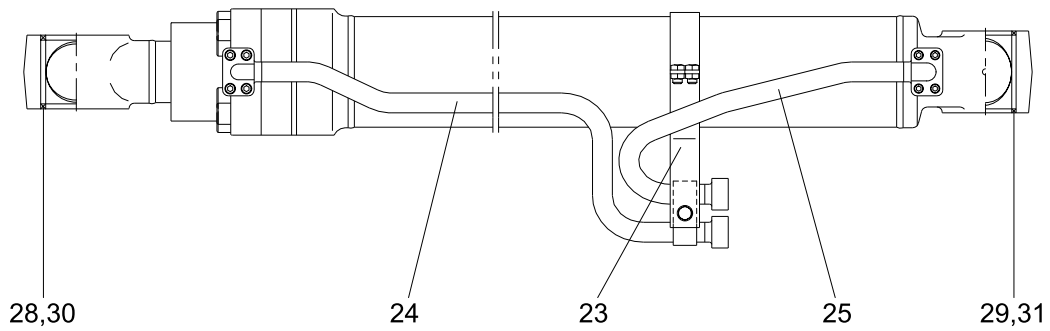


36078CY13

1	Tube assembly	12	Back up ring	22	Hexagon socket head bolt
2	Rod assembly	13	Cushion ring	23	Band assembly
3	Gland	14	Piston	24	Pipe assembly(R)
4	Du bushing	15	O-ring	25	Pipe assembly(B)
5	Snap ring	16	Back up ring	26	O-ring
6	Rod seal	17	Piston seal	27	Hexagon socket head bolt
7	Back up ring	18	Wear ring	28	Pin bushing(R)
8	Buffer ring	19	Dust ring	29	Pin bushing(B)
9	Dust wiper	20	Lock washer	30	Dust seal
10	Snap ring	21	Lock nut	31	Dust seal
11	O-ring				

2) TOOLS AND TIGHTENING TORQUE

 (1) Tools

Allen wrench	10	
	19	
Spanner	19	
(-) Driver	Small and large sizes	
Torque wrench	Capable of tightening with the specified torques	

(2) Tightening torque

Part name		Item	Size	Torque	
				kgf · m	lbf · ft
Socket head bolt	Bucket cylinder	23	M24	79 ± 8	571 ± 57.9
	Boom cylinder	22	M20	46 ± 5	333 ± 36.2
	Arm cylinder	27	M27	116 ± 12	839 ± 86.8
Socket head bolt	Bucket cylinder	28	M12	9.4 ± 1	68.0 ± 7.2
	Boom cylinder	27	M12	9.4 ± 1	68.0 ± 7.2
	Arm cylinder	33	M12	9.4 ± 1	68.0 ± 7.2
		34	M12	9.4 ± 1	68.0 ± 7.2
Lock nut	Bucket cylinder	22	M75	100 ± 10	723 ± 72.3
	Boom cylinder	21	M75	100 ± 10	723 ± 72.3
	Arm cylinder	26	M90	100 ± 10	723 ± 72.3
Piston	Bucket cylinder	15	-	150 ± 15	1085 ± 109
	Boom cylinder	14	-	150 ± 15	1085 ± 109
	Arm cylinder	15	-	150 ± 15	1085 ± 109


3) DISASSEMBLY

(1) Remove cylinder head and rod assembly

Hold the clevis section of the tube in a vise.


Use mouth pieces so as not to damage the machined surface of the cylinder tube. Do not make use of the outside piping as a locking means.

Pull out rod assembly(2) about 200mm (7.1in). Because the rod assembly is rather heavy, finish extending it with air pressure after the oil draining operation.

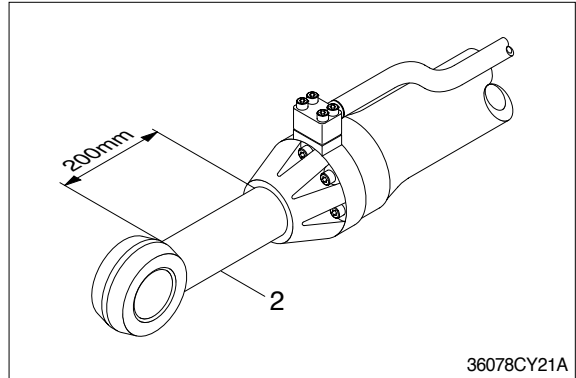


Loosen and remove socket bolts(23) of the cylinder head in sequence.

Cover the extracted rod assembly(2) with rag to prevent it from being accidentally damaged during operation.

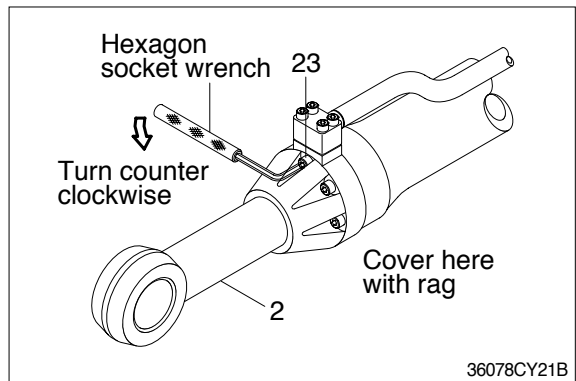


Draw out cylinder head and rod assembly together from the tube assembly(1).

Since the rod assembly is heavy in this case, lift the tip of the rod assembly(2) with a crane or some means and draw it out. However, when rod assembly(2) has been drawn out to approximately two thirds of its length, lift it in its center to draw it completely.

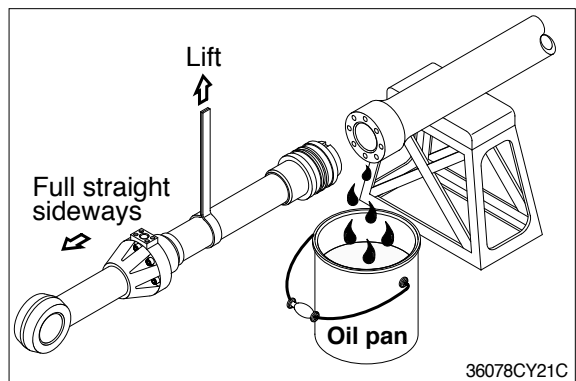


Note that the plated surface of rod assembly(2) is to be lifted. For this reason, do not use a wire sling and others that may damage it, but use a strong cloth belt or a rope.

Place the removed rod assembly on a wooden V-block that is set level. Cover a V-block with soft rag.

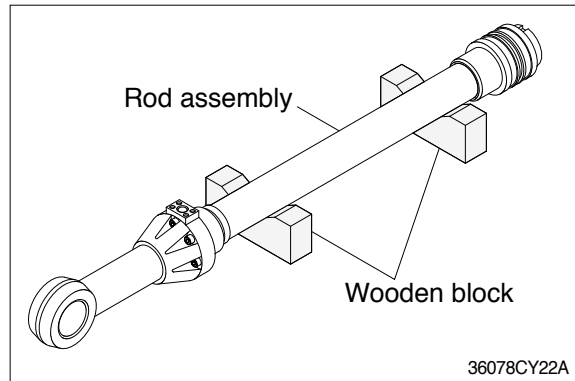


(2) Remove piston and cylinder head

Remove lock nut(22).
 Since lock nut(22) and lock washer(21) is tightened to a high torque, use a hydraulic and power wrench that utilizes a hydraulic cylinder, to remove the lock nut(22) and lock washer (21).
 Remove piston assembly(15), back up ring(17), O-ring(16) and cushion ring(14).

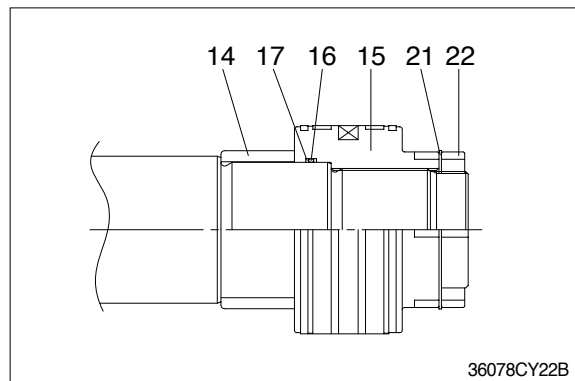

Remove the cylinder head assembly from rod assembly(2).
 If it is too heavy to move, move it by striking the flanged part of cylinder head with a plastic hammer.
 Pull it straight with cylinder head assembly lifted with a crane.
 Exercise care so as not to damage the lip of rod bushing(4) and packing (6,7,8,9) by the threads of rod assembly(2).

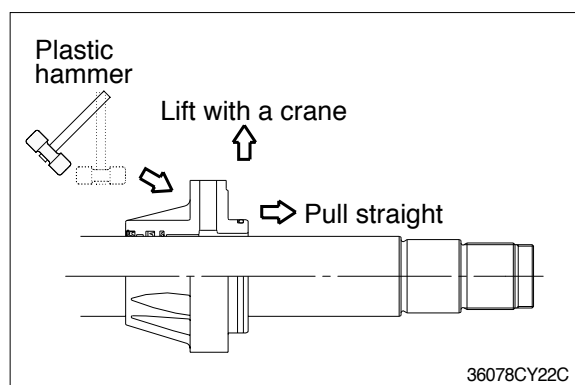


(3) Disassemble the piston assembly

Remove wear ring(19).

Remove dust ring(20) and piston seal (18).

Exercise care in this operation not to damage the grooves.

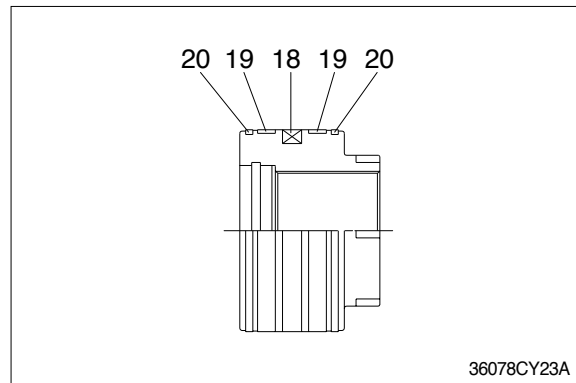

(4) Disassemble cylinder head assembly


Remove back up ring(13) and O-ring (12).

Remove snap ring(10), dust wiper(9) and wear ring(11).

Remove back up ring(7), rod seal(6) and buffer ring(8).

Exercise care in this operation not to damage the grooves.

Do not remove seal and ring, if does not damaged.

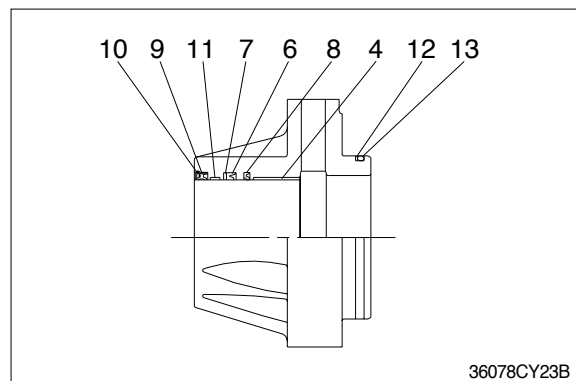


4) ASSEMBLY

(1) Assemble cylinder head assembly

Check for scratches or rough surfaces if found smooth with an oil stone.


Coat the inner face of gland(3) with hydraulic oil.

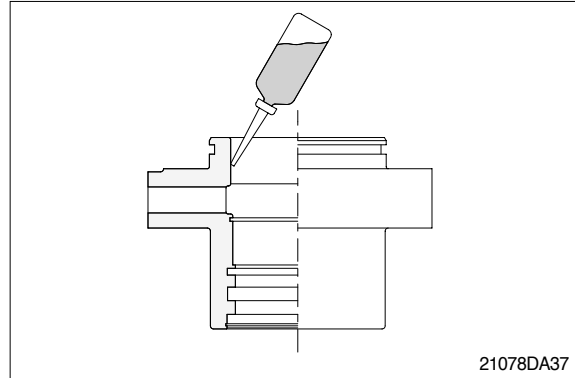

Coat dust wiper(9) with grease and fit dust wiper(9) to the bottom of the hole of dust seal.

At this time, press a pad metal to the metal ring of dust seal.


Fit snap ring(10) to the stop face.

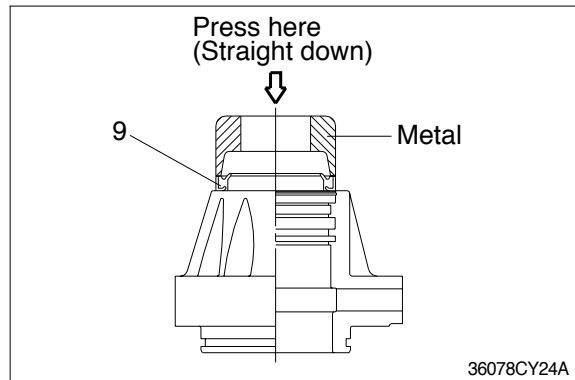


Fit wear ring(11), back up ring(7), rod seal(6) and buffer ring(8) to corresponding grooves, in that order.

Coat each packing with hydraulic oil before fitting it.


Insert the backup ring until one side of it is inserted into groove.

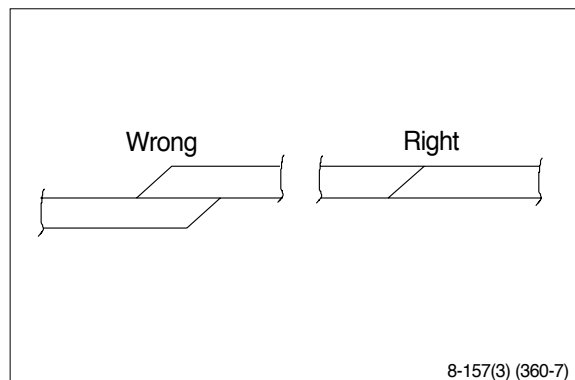

Rod seal(6) has its own fitting direction. Therefore, confirm it before fitting them. Fitting rod seal(6) upside down may damage its lip. Therefore check the correct direction that is shown in fig.

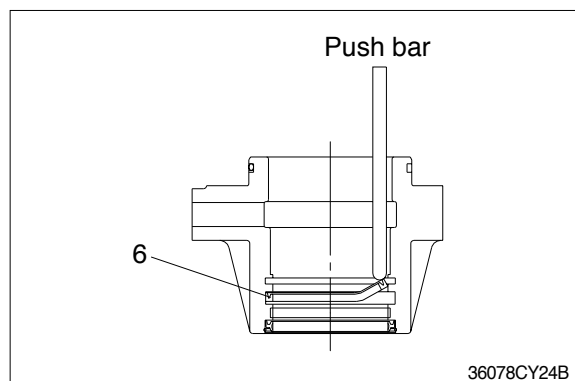


Fit back up ring(13) to gland(3).
 Put the backup ring in the warm water of 30~50,C.
 Fit O-ring(12) to gland(3).

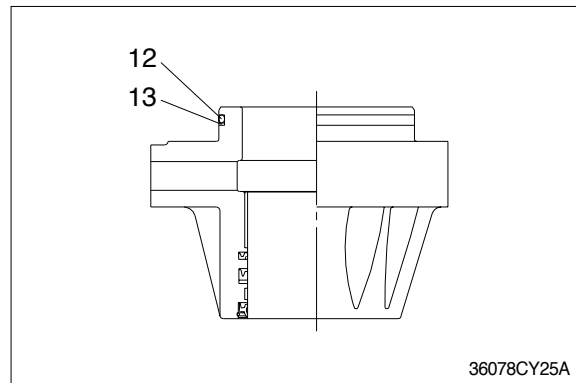


(2) Assemble piston assembly


Check for scratches or rough surfaces.
 If found smooth with an oil stone.
 Coat the outer face of piston(15) with hydraulic oil.

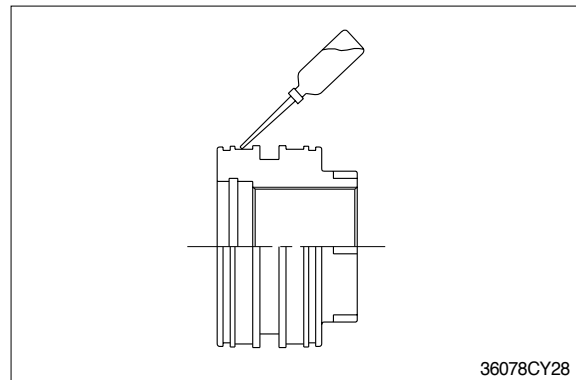

Fit piston seal(18) to piston.
 Put the piston seal in the warm water of 60~100,C for more than 5 minutes.
 After assembling the piston seal, press its outer diameter to fit in.

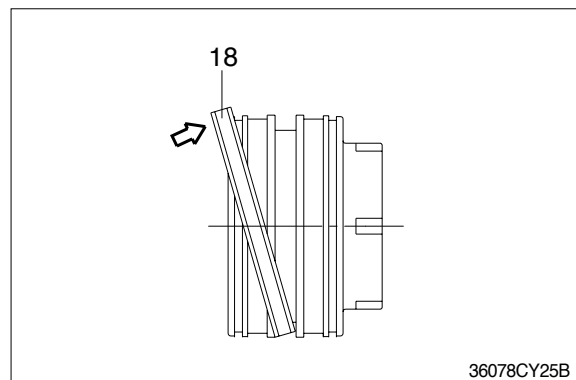


Fit wear ring(19) and dust ring(20) to piston(15).
 Fit back up ring(17) and O-ring(16) to piston(15).

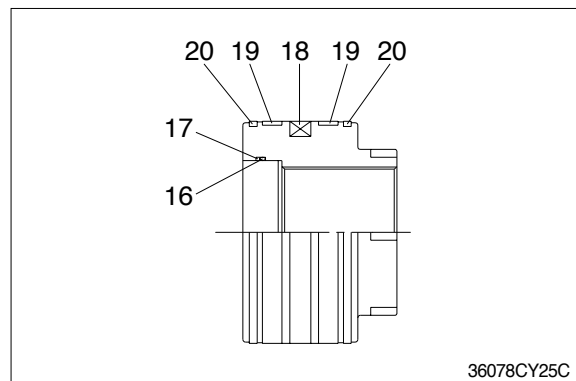


(3) Install piston and cylinder head


Fix the rod assembly to the work bench.
 Apply hydraulic oil to the outer surface of rod assembly(2), the inner surface of piston and cylinder head.
 Insert cylinder head assembly to rod assembly.

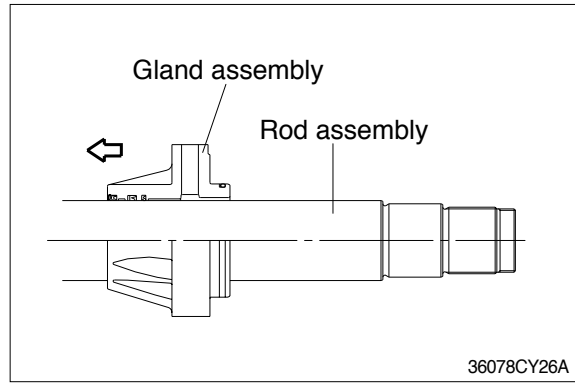

Insert cushion ring(14) to rod assembly.
 Note that cushion ring(14) has a direction in which it should be fitted.

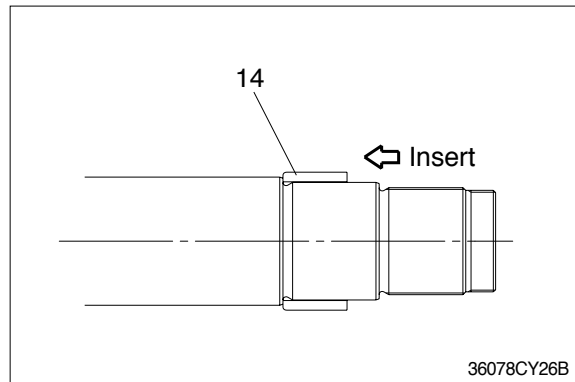


Fit piston assembly to rod assembly.
 · Tightening torque : $150 \pm 15 \text{ kgf} \cdot \text{m}$
 ($1085 \pm 109 \text{ lbf} \cdot \text{ft}$)

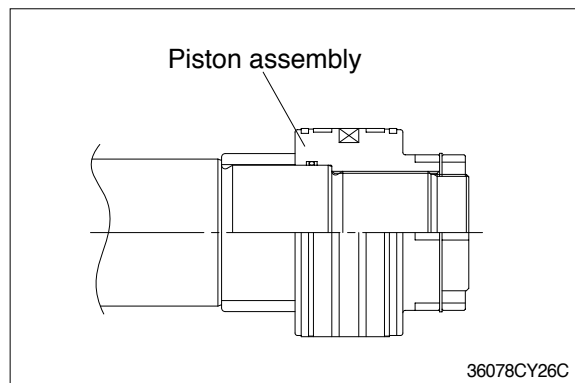

Fit lock nut(22) to piston.
 · Tightening torque :

Item		kgf · m	lbf · ft
Bucket	22	100 ± 10	723 ± 72.3
Boom	21	100 ± 10	723 ± 72.3
Arm	26	100 ± 10	723 ± 72.3

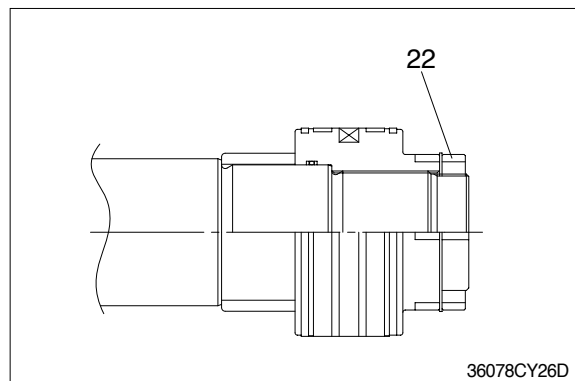

(4) Overall assemble

Place a V-block on a rigid work bench.
Mount the tube assembly(1) on it and fix the assembly by passing a bar through the clevis pin hole to lock the assembly.
Insert the rod assembly in to the tube assembly, while lifting and moving the rod assembly with a crane.
Be careful not to damage piston seal by thread of tube assembly.
Match the bolt holes in the cylinder head flange to the tapped holes in the tube assembly and tighten socket bolts to a specified torque.
Refer to the table of tightening torque.

