


## 2. CLUSTER

The cluster consists of gauges and lamps as shown below, to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection.

- Gauges : Indicate operating status of the machine.
- Warning lamp : Indicate abnormality of the machine (red).
- Pilot lamp : Indicate operating status of the machine.

- ※ **The monitor installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.**
- ※ **When the monitor provides a warning, immediately check the problem and perform the required action.**

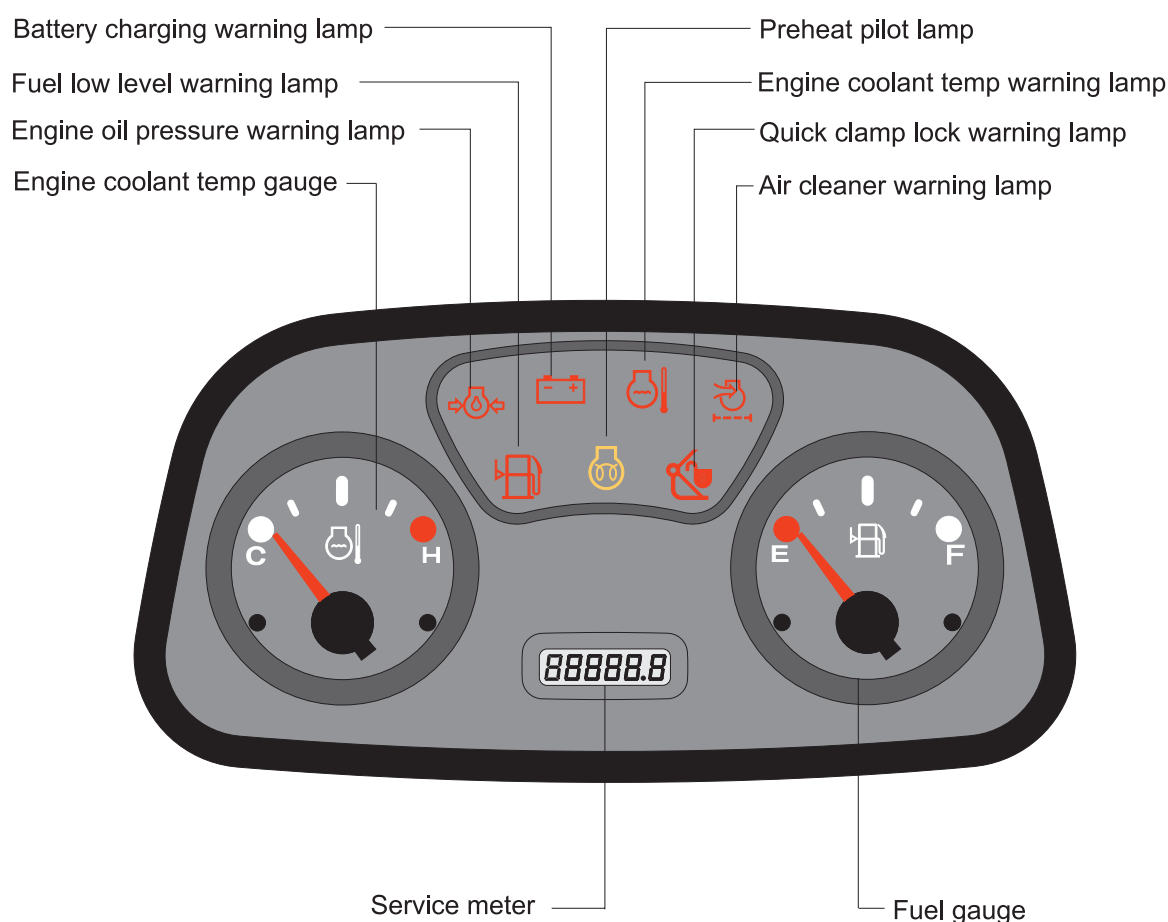

R35Z73CD01

- ※ **When the quick clamp switch turn ON, the buzzer sound and the quick clamp warning lamp lights ON.**  
The quick clamp switch turn OFF, the buzzer stop and the quick clamp warning lamp lights OFF.


## 1) GAUGES AND DISPLAYS



### (1) Service meter




- ① This meter shows the total operation hours of the machine.
- ② Always ensure the operating condition of the meter during the machine operation.  
Inspect and service the machine based on hours as indicated in chapter 6, maintenance.

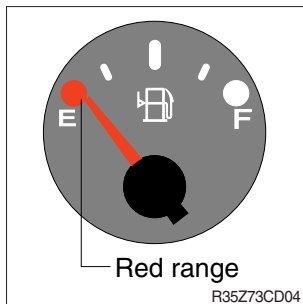
### (2) Fuel gauge



- ① This gauge indicates the amount of fuel in the fuel tank.
- ② Fill the fuel when the red range or warning lamp  ON.  
\* **If the gauge illuminates the red range or warning lamp  ON even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.**

### (3) Engine coolant temperature gauge

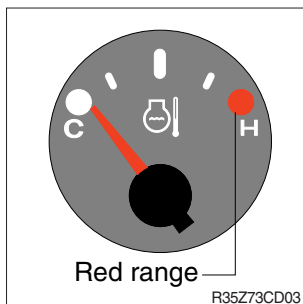

- ① This indicates the temperature of coolant.  
· Red range : Above 105°C (221°F)
- ② When the red range pointed or warning lamp  ON, engine do not abruptly stop but run it at medium speed to allow it to cool gradually, then stop it.  
Check the radiator and engine.  
\* **If the engine is stopped without cooled down running, the temperature of engine parts will rise suddenly, this could cause severe engine trouble.**


## 2) WARNING AND PILOT LAMPS

### (1) Fuel low level warning lamp




- ① This lamp blinks when the level of fuel is below 2.0 l (0.5 U.S. gal).
- ② Fill the fuel immediately when the lamp blinks.

### (2) Engine coolant temperature warning lamp

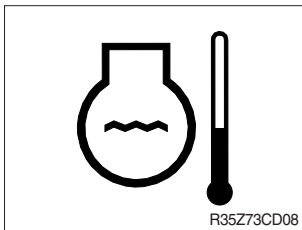


- ① This lamp blinks when the temperature of coolant is over the normal temperature 110°C (230°F) .
- ② Check the cooling system when the lamp blinks.

### (3) Engine oil pressure warning lamp

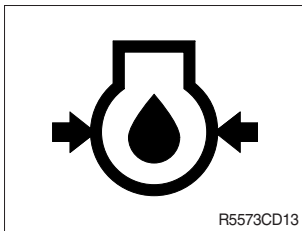


- ① This lamp blinks after starting the engine because of the low oil pressure.
- ② If the lamp blinks during engine operation, shut OFF engine immediately. Check oil level.

### (4) Air cleaner warning lamp

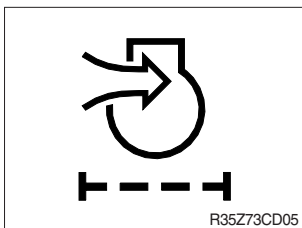


- ① This lamp blinks when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.

### (5) Battery charging warning lamp

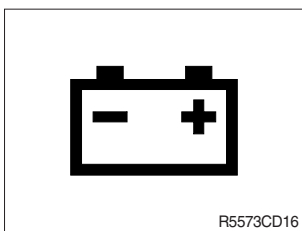


- ① This lamp blinks when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.

**(6) Preheat pilot lamp**

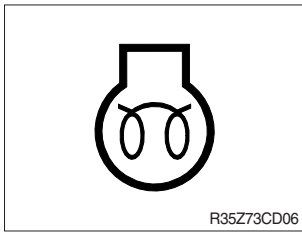

- ① When the start switch turn to HEAT position, pilot lamp comes ON.
- ② Refer to "4-2) STARTING ENGINE" for details.

**(7) Quick clamp lock warning lamp**

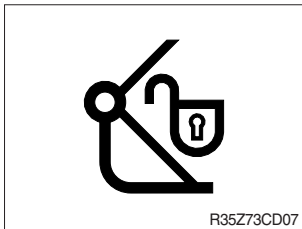

- ① When the quick clamp switch turned ON, this lamp turn ON and the buzzer sounds.
- ② This lamp turned OFF and the buzzer stop when the quick clamp switch turned OFF.