


11. RCV LEVER OPERATING PATTERN

1) PATTERN CHANGE VALVE NOT INSTALL (standard)

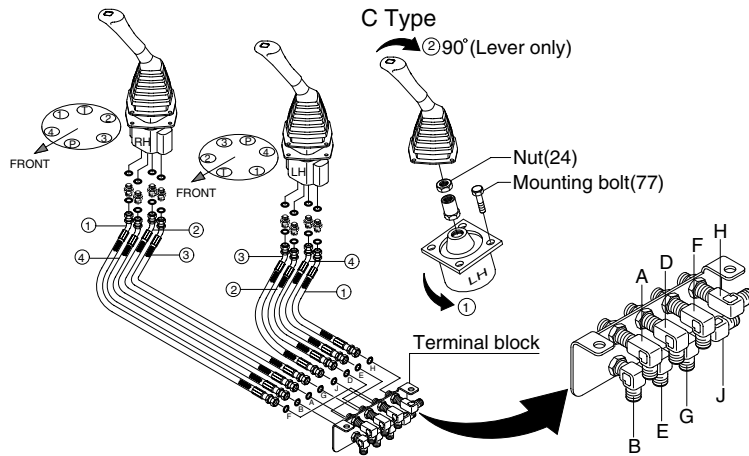

※ Whenever a change is made to the machine control pattern also exchange the pattern label on the left side of upper frame to match the new pattern.

1694OP28

Pattern	Operation		Control function	Hose connection (port)				
	Left RCV lever	Right RCV lever		RCV lever	Change of Terminal block			
					From	To		
ISO Type			Left	1 Arm out	②	D	-	
				2 Arm in	④	E	-	
				3 Swing right	③	J	-	
				4 Swing left	①	H	-	
	Hyundai			Right	5 Boom lower	④	B	-
					6 Boom raise	②	A	-
					7 Bucket out	①	F	-
					8 Bucket in	③	G	-
A Type			Left	1 Boom lower	②	D	B	
				2 Boom raise	④	E	A	
				3 Swing right	③	J	-	
				4 Swing left	①	H	-	
	A Type			Right	5 Arm out	④	B	D
					6 Arm in	②	A	E
					7 Bucket out	①	F	-
					8 Bucket in	③	G	-
B Type			Left	1 Boom lower	②	D	B	
				2 Boom raise	④	E	A	
				3 Bucket in	③	J	G	
				4 Bucket out	①	H	F	
	B Type			Right	5 Arm out	④	B	D
					6 Arm in	②	A	E
					7 Swing right	①	F	J
					8 Swing left	③	G	H
C Type			Left	① Loosen the RCV lever mounting bolt (77) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut (24) and rotates only lever 90° clockwise.				
			Right	Same as ISO type				

2) PATTERN CHANGE VALVE INSTALL (option)

- ※ If the machine is equipped with the pattern change valve, the machine operation pattern can be easily changed.
- ※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

Operation	ISO type	A type
Left RCV lever		
Right RCV lever		

(1) The machine control pattern can be easily changed from the "ISO type" to "A type" by changing the position of the lever.

▲ **Before starting the machine, check the lever position of pattern change valve and actual operating of attachment.**

(2) Change of operating pattern

- ① Loosen the bolt (11).
- ② Move lever from the "ISO type" to "A type" position.
- ③ After the lever is set, tighten the bolt in order to secure the lever.

