

2. CLUSTER

1) MONITOR PANEL

The monitor panel consists of LCD and lamps as shown below, to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection.



- LCD : Indicate operating status of the machine.
 - Warning lamp : Indicate abnormality of the machine(Red).
 - Pilot lamp : Indicate operating status of the machine(Amber).
- ※ The monitor installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.
- ※ When the monitor provides a warning immediately check the problem, and perform the required action.



1107A3CD02

- ※ The warning lamp lights ON and the buzzer sounds when the machine has a problem. In this case, press the buzzer stop switch and buzzer stop, but the warning lamp lights until the problem is cleared.

2) LCD main operation display

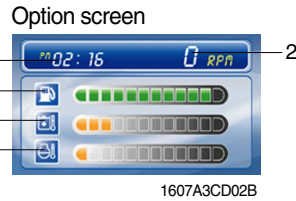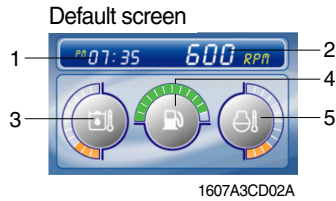

- 1 Time display
- 2 RPM display
- 3 Hydraulic oil temperature gauge
- 4 Fuel level gauge
- 5 Engine coolant temperature gauge

(1) Time display



- ① This displays the current time.


※ Refer to the page 3-7 to set time for details.

(2) RPM display



- ① This displays the engine rpm.

(3) Hydraulic oil temperature gauge

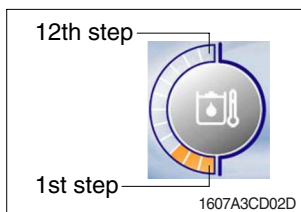

- ① This gauge indicates the temperature of hydraulic oil in 12 step gauge.


- 1st step : Below 30°C(86°F)
- 2nd~10th step : 30-105 °C(86-221°F)
- 11th~12th step : Above 105°C(221°F)

- ② The gauge between 2nd and 10th steps illuminates when operating.

- ③ Keep idling engine at low speed until the gauge between 2nd and 10th steps illuminates, before operation of machine.

- ④ When the gauge of 11th and 12th steps illuminates, reduce the load on the system. If the gauge stays in the 11th~12th steps, stop the machine and check the cause of the problem.

(4) Fuel level gauge

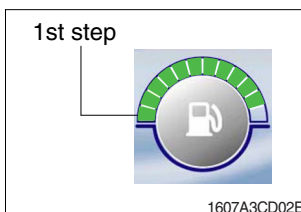


- ① This gauge indicates the amount of fuel in the fuel tank.

- ② Fill the fuel when the 1st step or fuel icon blinks in red.

※ If the gauge illuminates the 1st step or fuel icon blinks in red even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

(5) Engine coolant temperature gauge

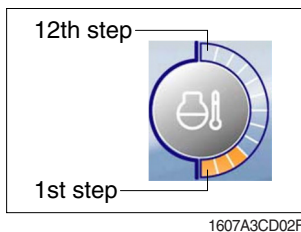

- ① This gauge indicates the temperature of coolant in 12 step gauge.

- 1st step : Below 30°C(86°F)
- 2nd~10th step : 30-105 °C(86-221°F)
- 11th~12th step : Above 105°C(221°F)

- ② The gauge between 2nd and 10th steps illuminates when operating.

- ③ Keep idling engine at low speed until the gauge between 2nd and 10th steps illuminates, before operation of machine.

- ④ When the gauge of 11th and 12th steps illuminates, turn OFF the engine, check the radiator and engine.

3) Warning of main operation screen

(1) Warning display

① Engine coolant temperature



- This lamp blinks and the buzzer sounds when the temperature of coolant is over the normal temperature 105°C (221°F) .
- Check the cooling system when the lamp blinks.

② Fuel level



- This lamp blinks and the buzzer sounds when the level of fuel is below 28 l (7.4U.S. gal).
- Fill the fuel immediately when the lamp blinks.

③ Hydraulic oil temperature



- This warning lamp operates and the buzzer sounds when the temperature of hydraulic oil is over 105 °C (221 °F) .
- Check the hydraulic oil level when the lamp blinks.
- Check for debris between oil cooler and radiator.

④ All gauge



- This lamp blinks and the buzzer sounds when the all gauge is abnormal.
- Check the each system when the lamp blinks.

⑤ Communication error




- Communication problem between MCU controller and cluster makes the lamp blinks and the buzzer sounds.
- Check if any fuse for MCU burnt off.
If not check the communication line between them.






(2) Pop-up icon display

| No | Switch | Selected mode | Display |
|----|-------------------|--------------------------|---------|
| 1 | Power mode switch | High power work mode | |
| | | Standard power work mode | |
| | | Light power work mode | |

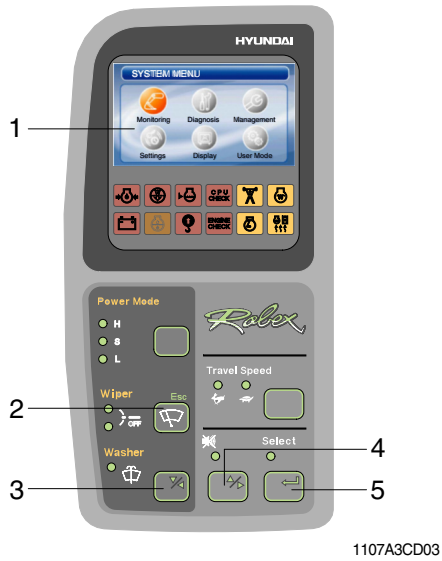
| No | Switch | Selected mode | Display |
|----|-----------------------------|---------------|---------|
| 2 | Travel speed control switch | Low speed | |
| | | High speed | |




4) LCD



- 1  : LCD
- 2  : Esc
: Escape,
Return to the previous menu
- 3  : Down/Left Direction
- 4  : Up/Right Direction
- 5  : Select(Enter)
Activate the currently chosen item

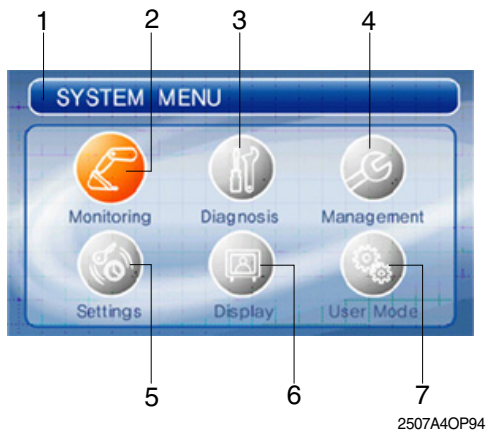
(1) Main menu



- 1  : Menu information
- 2  : Monitoring
- Equipment, Switch, Output
- 3  : Diagnosis
- Current error, Recorded error
- 4  : Maintenance
- 5  : Settings
- Time set, Dual mode
- System lock(Reserved)
- 6  : Display
- Operation skin, Brightness, Language
- 7  : User mode(null)


(2) Display map

① Monitoring

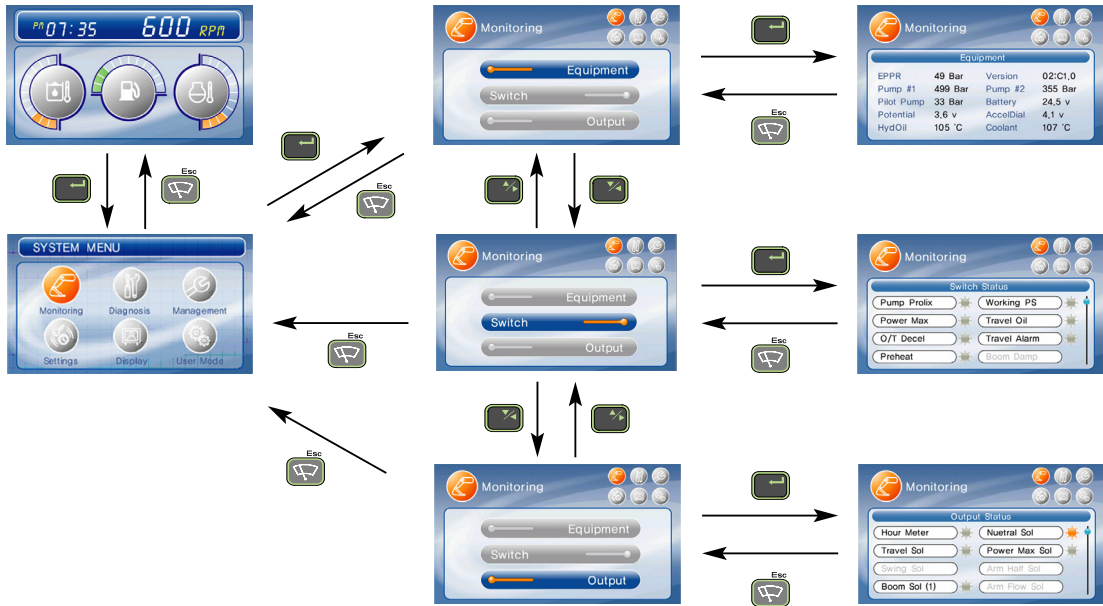


② Diagnosis

a. Protocol type 1

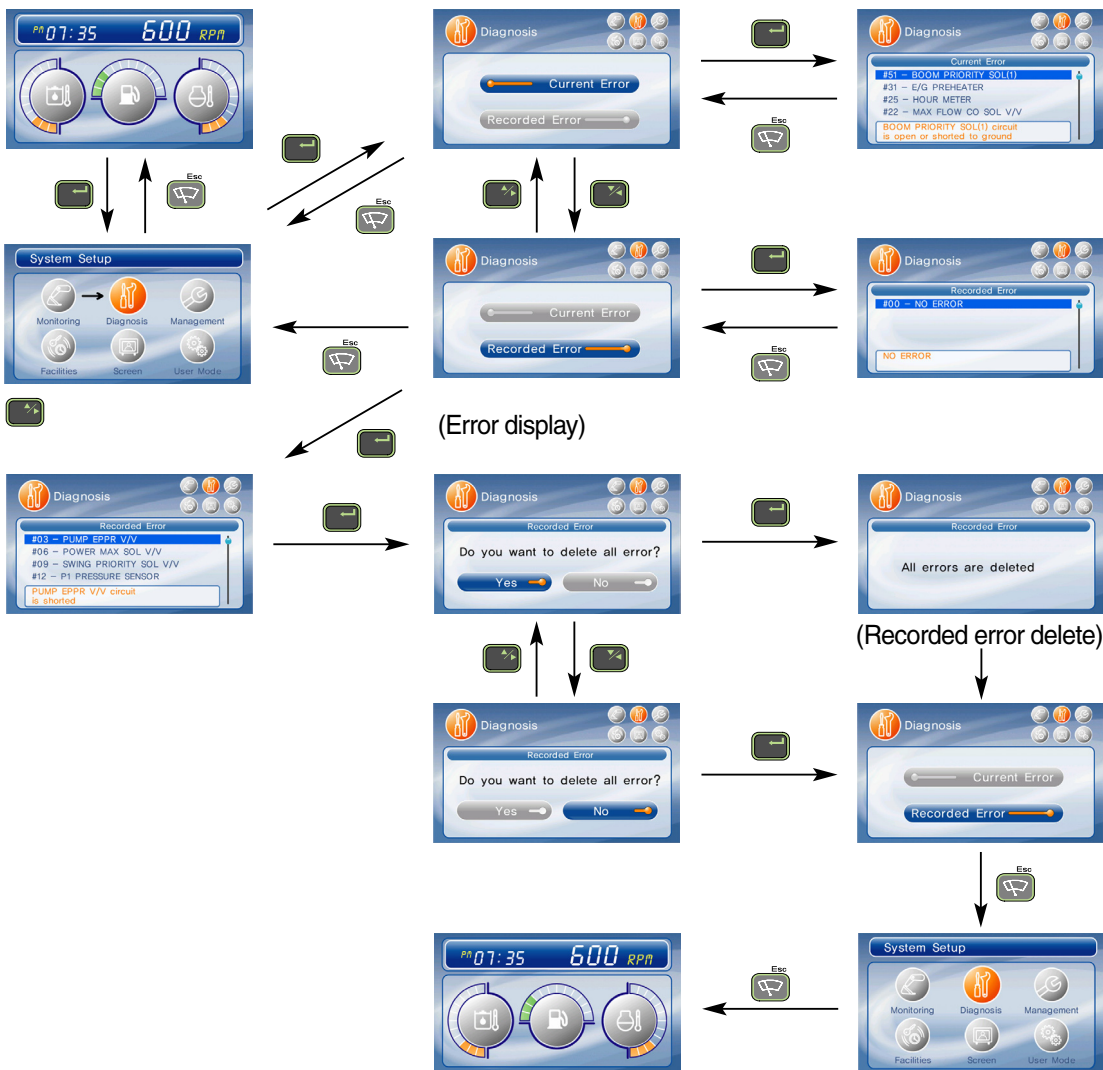


b. Protocol type 2

- If there are more than 2 error codes, each one can be displayed by pressing or switch respectively.
- 3 error codes (①SPN200200, ②FMI06, ③SPN6789, ④FMI04, ⑤345) display.

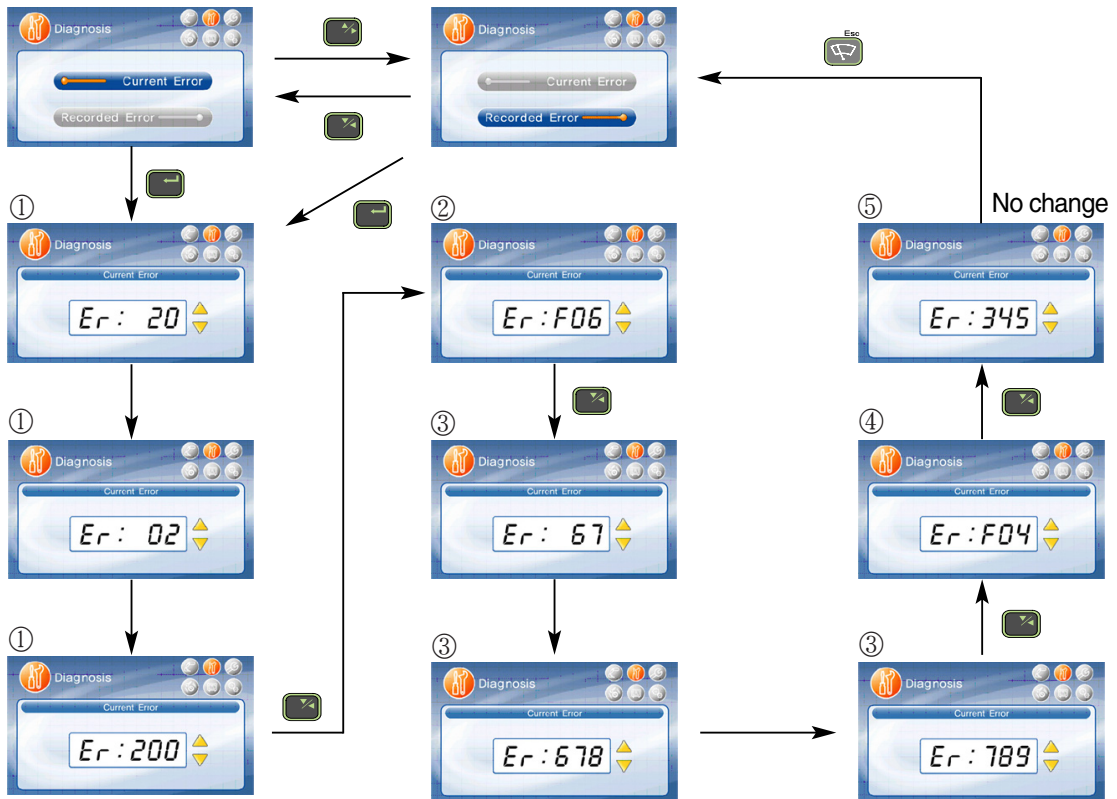


③ Maintenance

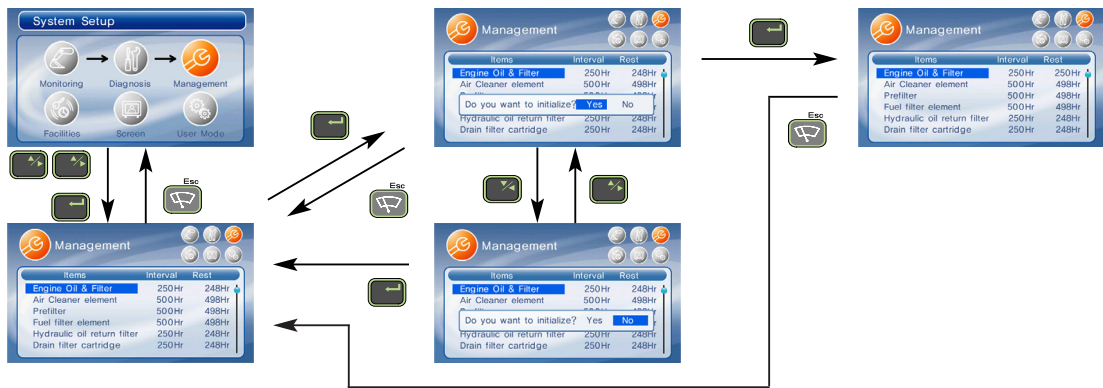

④ Setting

a. Time set

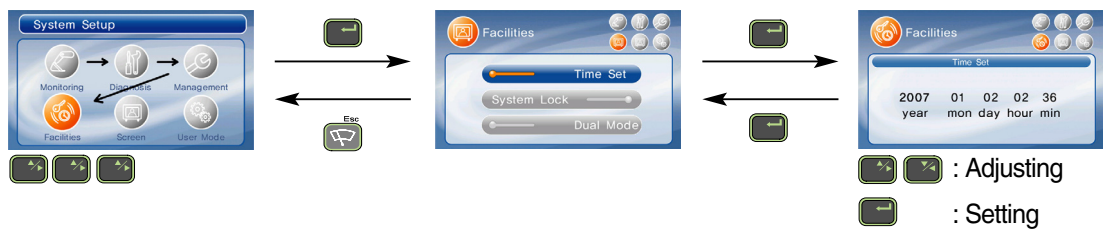


b. System lock - Reserved

c. Dual mode
- Changing the MCU mode




⑤ Display


a. Operation skin

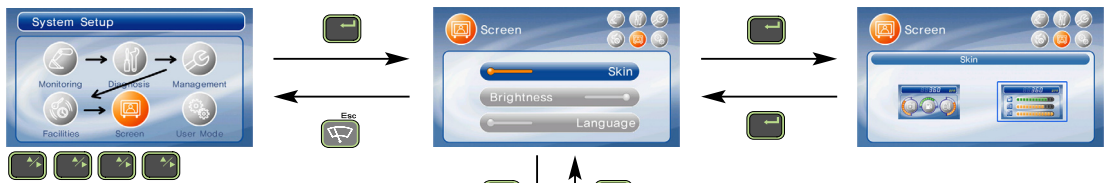

b. Brightness

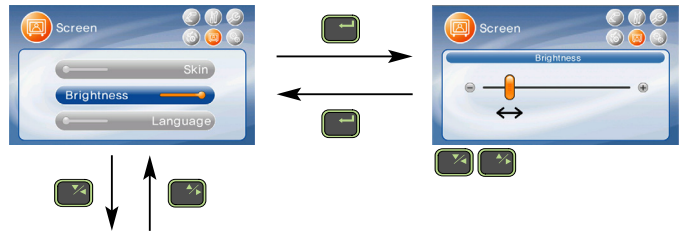


c. Language

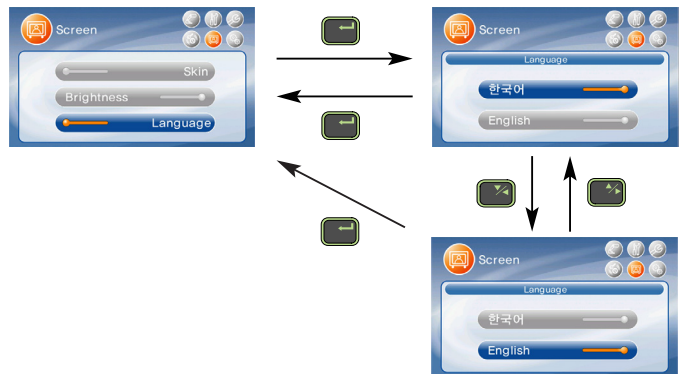

5) Warning and pilot lamp


(1) Engine oil pressure warning lamp

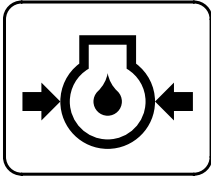

21073CD07

- ① This lamp blinks and the buzzer sounds after starting the engine because of the low oil pressure.
- ② If the lamp blinks during engine operation, shut OFF engine immediately. Check oil level.


(2) Air cleaner warning lamp

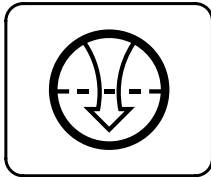

21073CD08

- ① This lamp blinks and the buzzer sounds when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.


(3) MCU controller check warning lamp

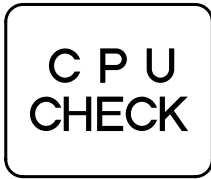

21073CD10

- ① If any fault code is received from MCU controller, this lamp blinks and the buzzer sounds.
- ② Check the communication line between MCU controller and cluster.


(4) Battery charging warning lamp

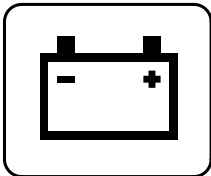

21073CD13

- ① This lamp blinks and the buzzer sounds when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.


(5) Overload warning lamp

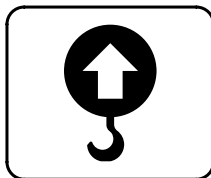

21073CD15

- ① When the machine is overload, the overload warning lamp blinks during the overload switch is ON.


(6) Decel pilot lamp

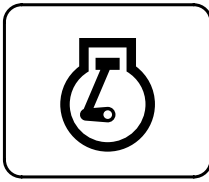

21073CD17

- ① Operating auto decel or one touch decel makes the lamp ON.
- ② The lamp will be ON when pushing one touch decel switch on the LH RCV lever.


(7) Warming up pilot lamp

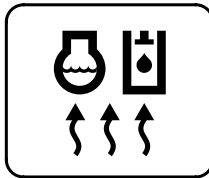

21073CD18

- ① This lamp is turned ON when the coolant temperature is below 30°C (86 °F).
- ② The automatic warming up is cancelled when the engine coolant temperature is above 30 °C, or when 10 minutes have passed since starting.


(8) Preheat pilot lamp

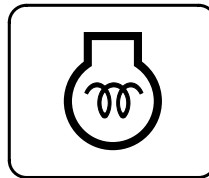

21073CD12


- ① Turning the start key switch ON position starts preheating in cold weather.
- ② Start the engine as this lamp is OFF.

6) SWITCH PANEL

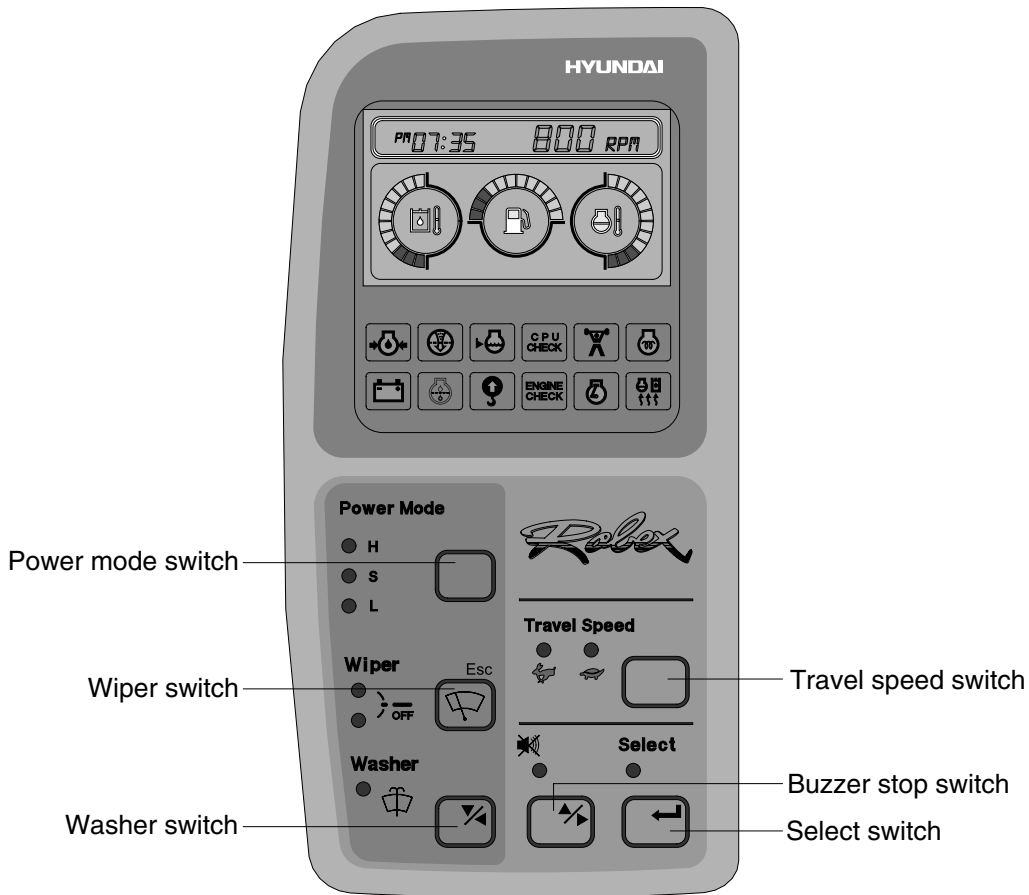

1107A3CD19

(1) Power mode switch

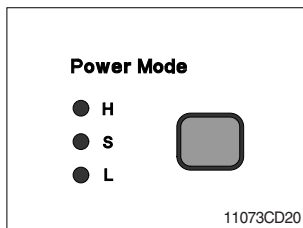


① This switch is to select the machine power mode, which shifts from high power work to standard power work and light power work in a row by pressing the switch.

- H : High power work mode
- S : Standard power work mode
- L : Light power work mode

※ Refer to the page 4-6 for details.

(2) Wiper mode switch

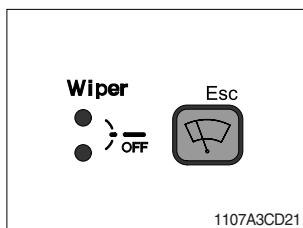


① This switch is used to operate wiper.

- Press the switch once to operate wiper.
- Press the switch once more to intermittently operate wiper low speed.
- Press the switch once more to turn off wiper.

※ Wiper motor doesn't operate with front sliding door open.


※ If wiper does not operate with the start switch in the ON position, turn the switch off immediately. Check the cause. If the switch remains ON, it can result in motor failure.

(3) Washer switch

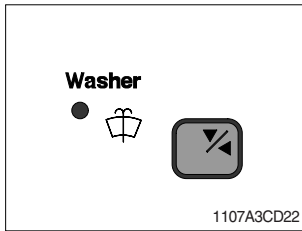


- ① The washer liquid is sprayed and the wiper is operated only while pressing this switch.
- ② The indicator lamp is turned ON when operating this switch.

(4) Travel speed control switch

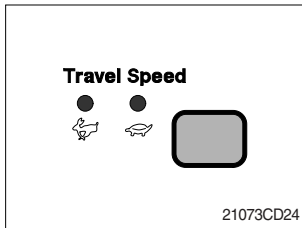


- ① This switch is to control the travel speed which is changed to high speed(Rabbit mark) by pressing the switch and low speed(Turtle mark) by pressing it again.

(5) Buzzer stop switch

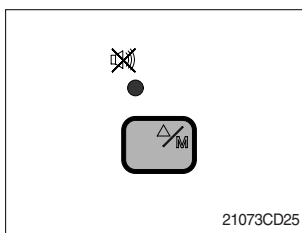

- ① When the starting switch is turned ON first, normally the alarm buzzer sounds for 2 seconds during lamp check operation.
- ② The red lamp lights ON and the buzzer sounds when the machine has a problem.
In this case, press this switch and buzzer stops, but the red lamp lights until the problem is cleared.

(6) Select switch

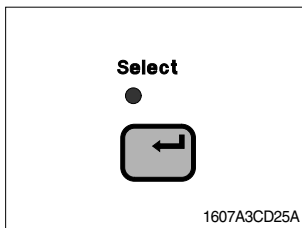

- ① This switch is used to enter main menu and sub menu for LCD.
※ **Refer to the page 3-5 for details.**