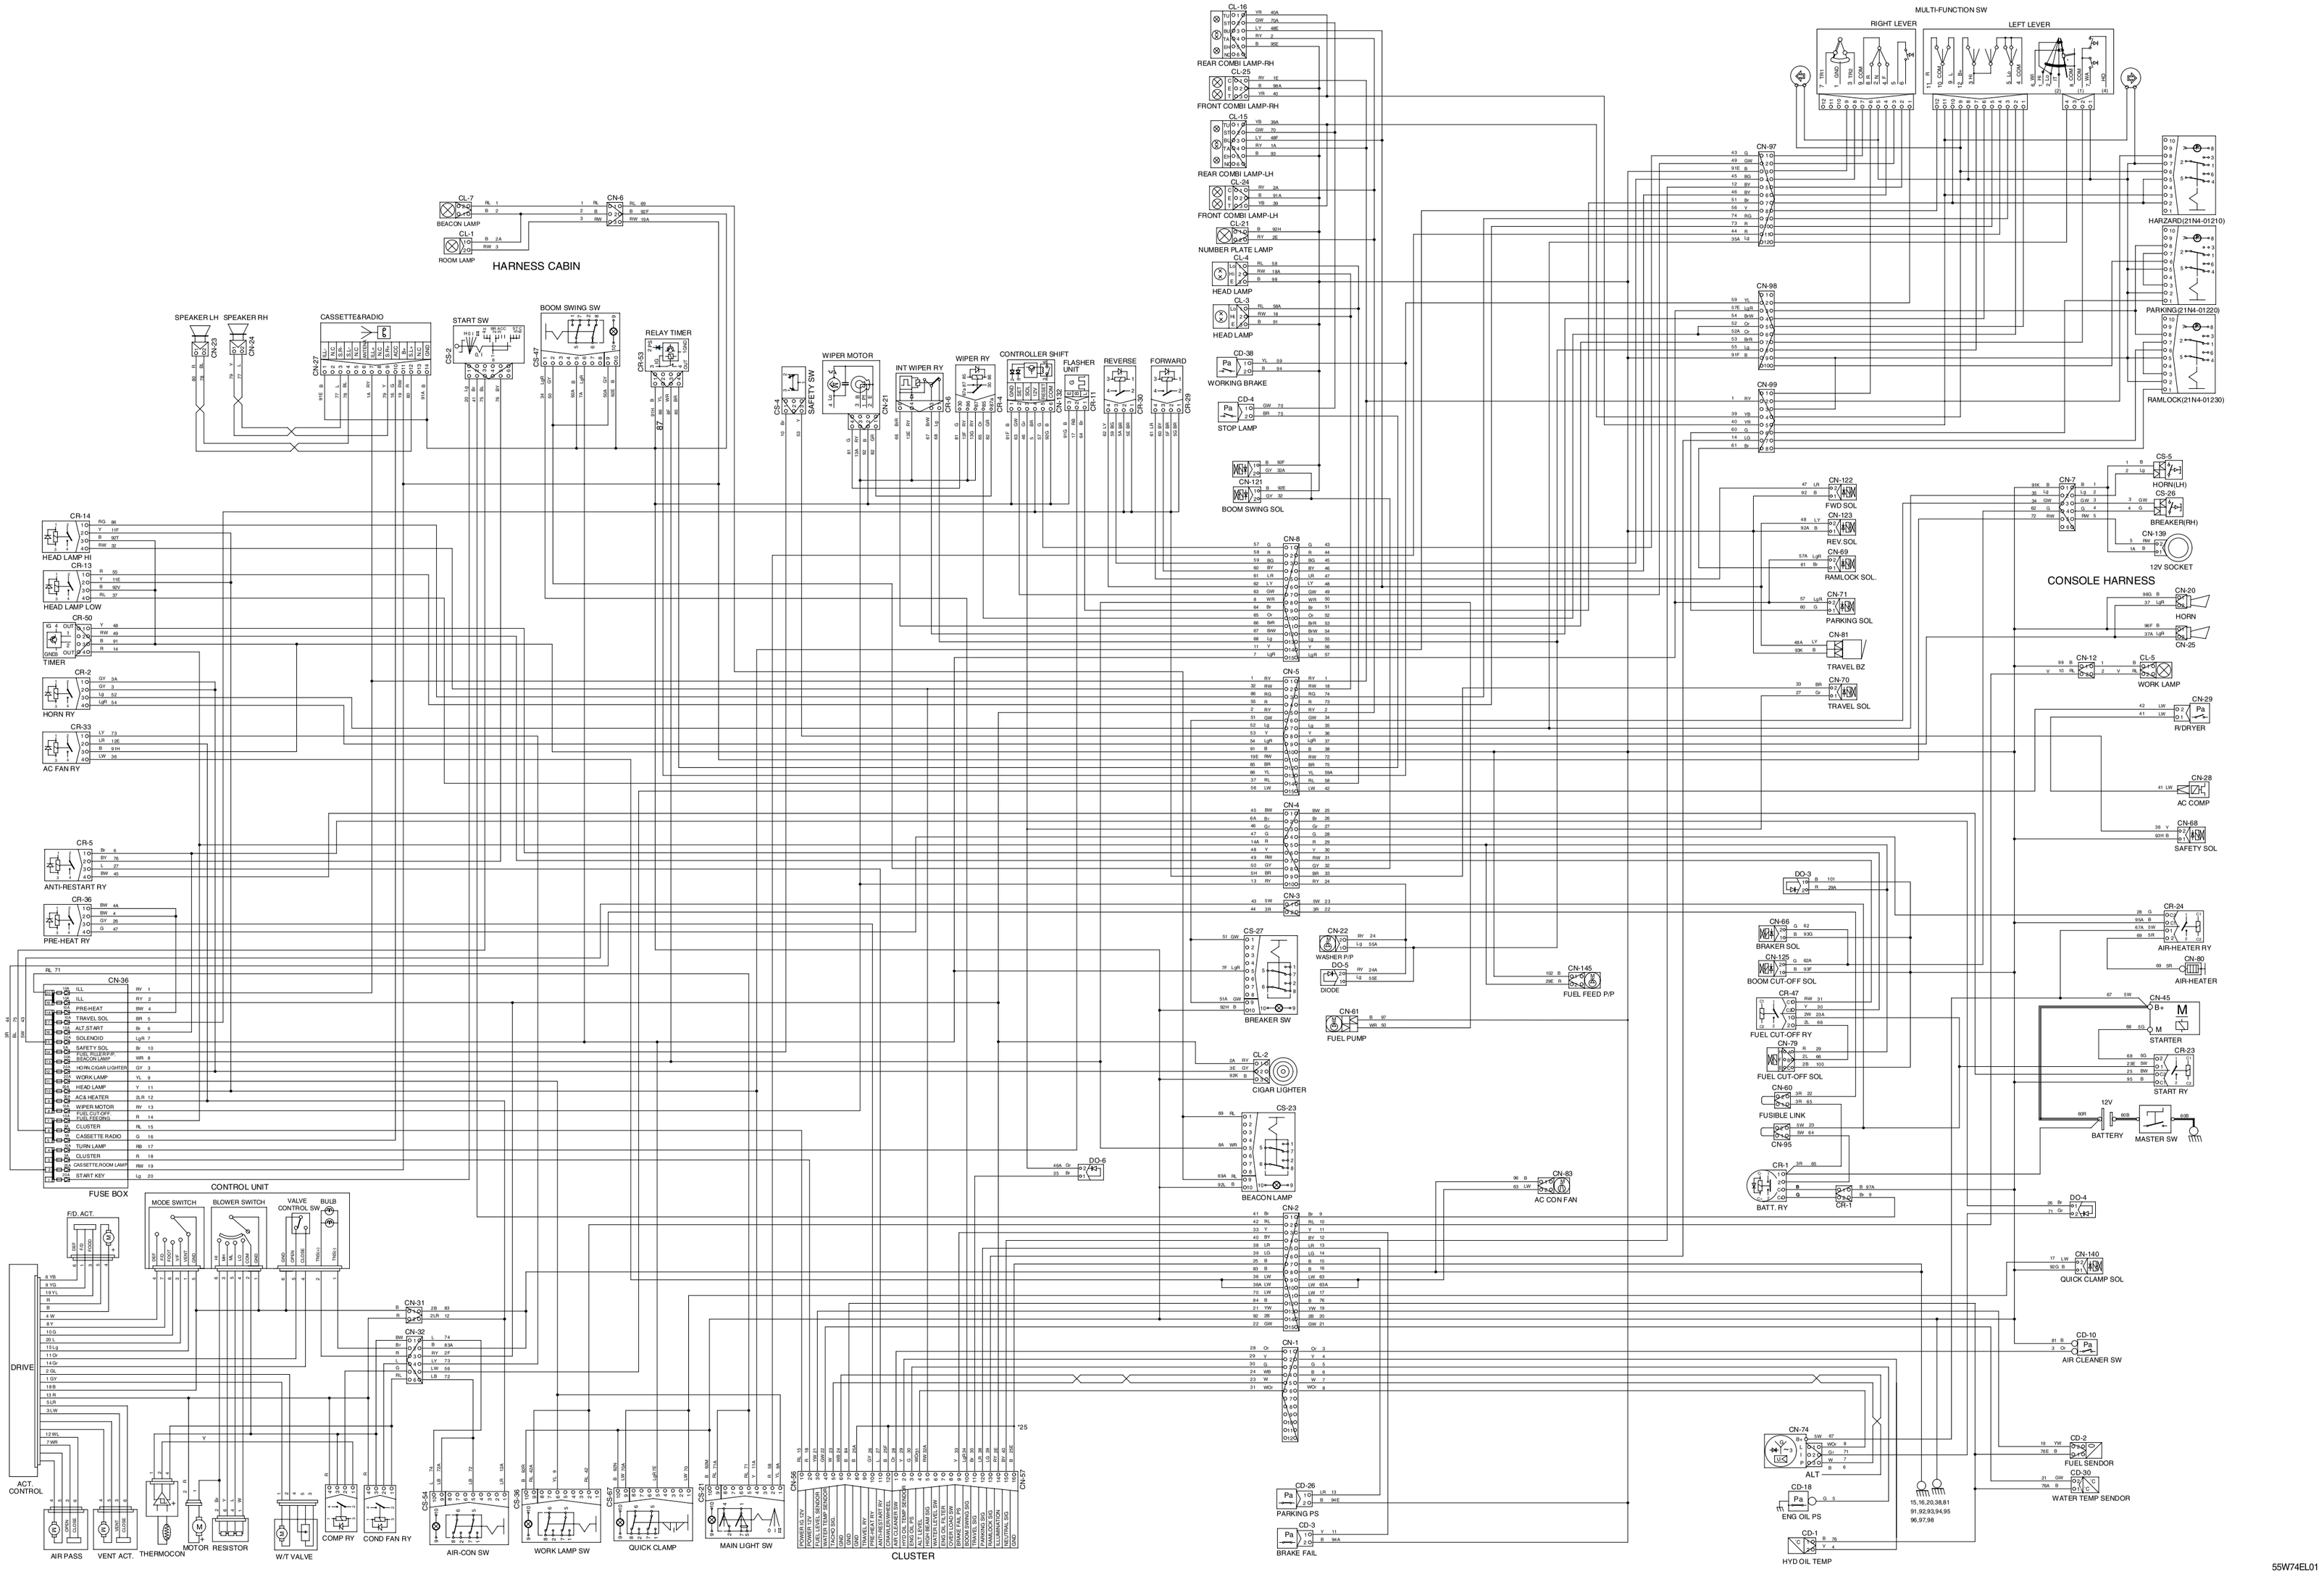
HARNESS CABIN
BEACON LAMP
ROOM LAMP
SPEAKER LH
SPEAKER RH
CASSETTE&RADIO
START SW
BOOM SWING SW
RELAY TIMER
WIPER MOTOR
INT WIPER RY
WIPER RY
CONTROLLER SHIFT
FLASHER UNIT
REVERSE
FORWARD
SAFETY SW
REAR COMBI LAMP-RH
FRONT COMBI LAMP-RH
REAR COMBI LAMP-LH
FRONT COMBI LAMP-LH
NUMBER PLATE LAMP
HEAD LAMP
WORKING BRAKE
STOP LAMP
BOOM SWING SOL
MULTI-FUNCTION SW
RIGHT LEVER
LEFT LEVER
HARZARD(21N4-01210)
PARKING(21N4-01220)
RAMLOCK(21N4-01230)
FWD SOL
REV SOL
RAMLOCK SOL.
PARKING SOL
TRAVEL BZ
TRAVEL SOL
CONSOLE HARNESS
HORN(LH)
BREAKER(RH)
12V SOCKET
HORN
WORK LAMP
R/DRYER
AC COMP
SAFETY SOL
AIR-HEATER RY
AIR-HEATER
STARTER
START RY
BATTERY
MASTER SW
QUICK CLAMP SOL
AIR CLEANER SW
FUEL SENDOR
WATER TEMP SENDOR
HEAD LAMP HI
HEAD LAMP LOW
TIMER
HORN RY
AC FAN RY
ANTI-RESTART RY
PRE-HEAT RY
FUSE BOX
CONTROL UNIT
MODE SWITCH
BLOWER SWITCH
VALVE CONTROL SW
BULB
F/D. ACT.
DRIVE
ACT. CONTROL
AIR PASS
VENT ACT.
THERMOCON
MOTOR
RESISTOR
W/T VALVE
COMP RY
COND FAN RY
AIR-CON SW
WORK LAMP SW
QUICK CLAMP
MAIN LIGHT SW
CLUSTER
BREAKER SW
FUEL PUMP
CIGAR LIGHTER
BEACON LAMP
WASHER P/P
DIODE
FUEL FEED P/P
BRAKER SOL
BOOM CUT-OFF SOL
FUEL CUT-OFF RY
FUEL CUT-OFF SOL
FUSIBLE LINK
BATT. RY
AC CON FAN
ALT
ENG OIL PS
HYD OIL TEMP
PARKING PS
BRAKE FAIL
55W74EL01