


2. CLUSTER

The cluster consists of gauges and lamps as shown below, to warn the operator in case of abnormal machine operation or conditions for the appropriate operation and inspection.

- Gauges : Indicate operating status of the machine.
 - Warning lamp : Indicate abnormality of the machine(Red).
 - Pilot lamp : Indicate operating status of the machine.
- ※ **The monitor installed on this machine does not entirely guarantee the condition of the machine. Daily inspection should be performed according to chapter 6, Maintenance.**
- ※ **When the monitor provides a warning, immediately check the problem and perform the required action.**

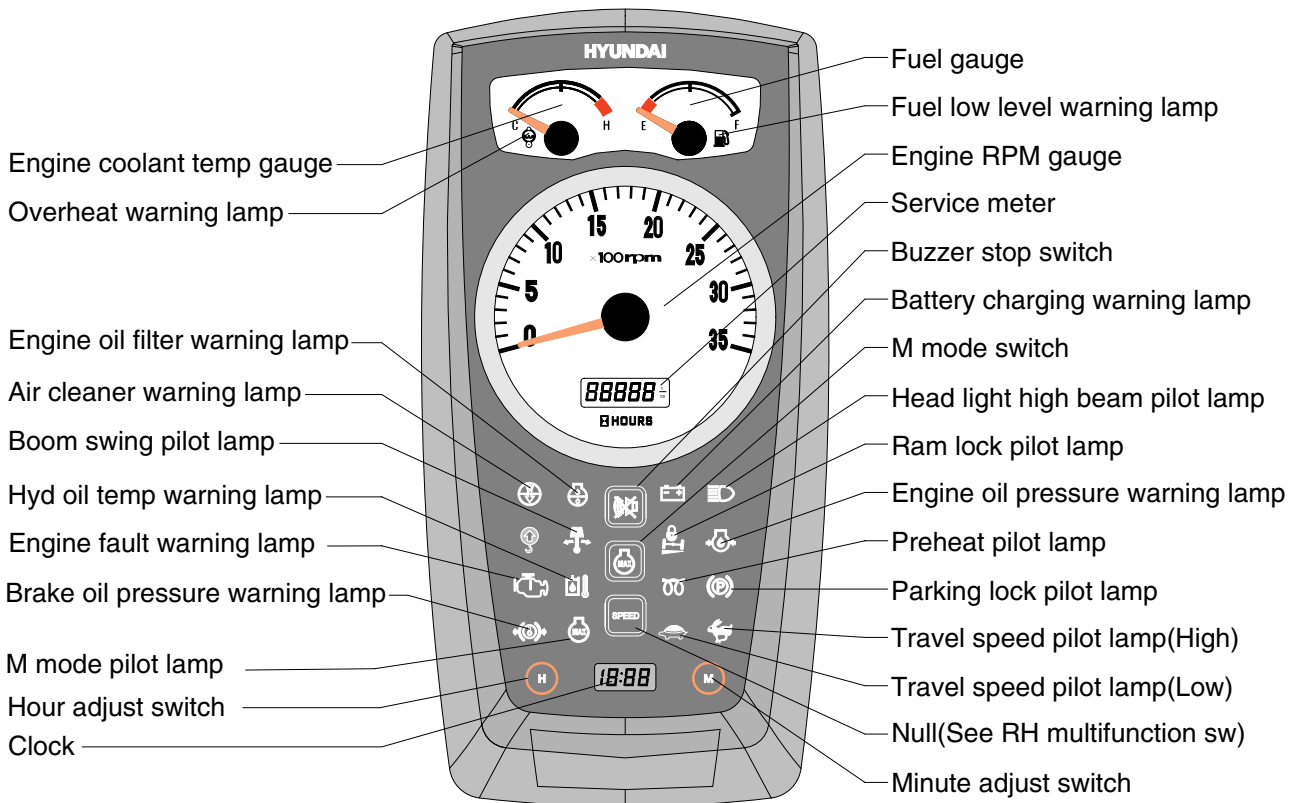

55W7A3CD02

- ※ **The warning lamp lights ON and the buzzer sounds when the machine has a problem. In this case, press the buzzer stop switch and buzzer stop, but the warning lamp lights until the problem is cleared.**


1) GAUGES AND DISPLAYS

(1) Service meter




- ① This meter shows the total operation hours of the machine.
- ② Always ensure the operating condition of the meter during the machine operation.
Inspect and service the machine based on hours as indicated in chapter 6, **maintenance**.

(2) Fuel gauge

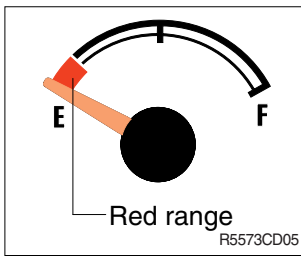


- ① This gauge indicates the amount of fuel in the fuel tank.
- ② Fill the fuel when the indicator is in the red range or warning lamp ON.
* If the gauge indicate the red range or warning lamp ON. Even though the machine is on the normal condition, check the electric device as that can be caused by the poor connection of electricity or sensor.

(3) Engine coolant temperature gauge

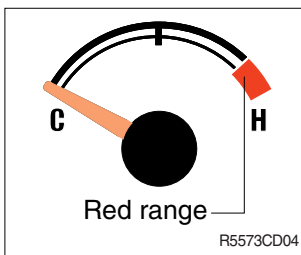

- ① This indicates the temperature of coolant.
 - Red range : Above 105°C(221°F)
- ② When the indicator is in the red range or warning lamp ON, engine do not abruptly stop but run it at medium speed to allow it to cool gradually, then stop it.
Check the radiator and engine.
* If the engine is stopped without cooled down running, the temperature of engine parts will rise suddenly, this could cause severe engine trouble.

(4) Engine rpm gauge

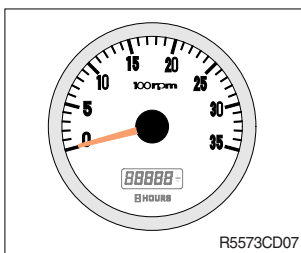

- ① This gauge displays the number of engine revolutions per minute.


(5) Clock



- ① This displays the current time.
- ② Refer to the hour/minute adjust switch for adjusting time.


2) WARNING AND PILOT LAMPS

(1) Fuel low level warning lamp

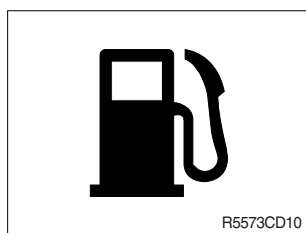


- ① This lamp blinks and the buzzer sounds when the level of fuel is below 13 l (3.4U.S. gal).
- ② Fill the fuel immediately when the lamp blinks.

(2) Hydraulic oil temperature warning lamp

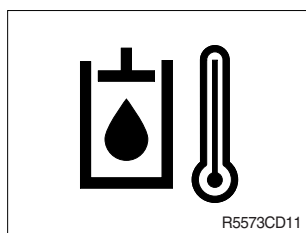


- ① This warning lamp blinks and the buzzer sounds when the temperature of hydraulic oil is over 105 °C (221 °F) .
- ② Check the hydraulic oil level when the lamp blinks.
- ③ Check for debris between oil cooler and radiator.

(3) Overheat warning lamp

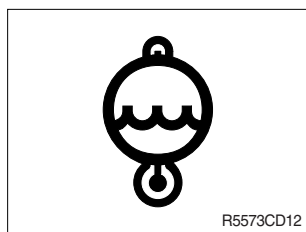


- ① This lamp blinks and the buzzer sounds when the temperature of coolant is over the normal temperature 110°C (230°F) .
- ② Check the cooling system when the lamp blinks.

(4) Engine oil pressure warning lamp

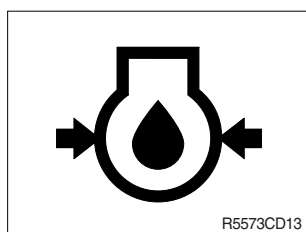


- ① This lamp blinks and the buzzer sounds after starting the engine because of the low oil pressure.
- ② If the lamp blinks during engine operation, shut OFF engine immediately. Check oil level.

(5) Air cleaner warning lamp

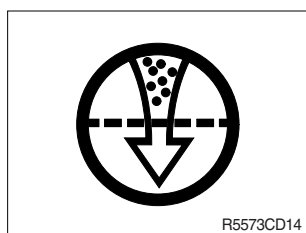


- ① This lamp blinks and the buzzer sounds when the filter of air cleaner is clogged.
- ② Check the filter and clean or replace it.

(6) Battery charging warning lamp

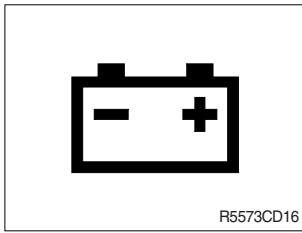


- ① This lamp blinks and the buzzer sounds when the starting switch is ON, it is turned OFF after starting the engine.
- ② Check the battery charging circuit when this lamp blinks during engine operation.

(7) Engine fault warning lamp

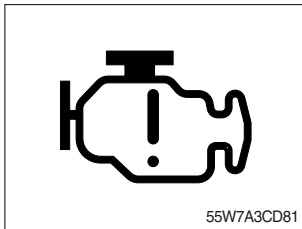


- ① This lamp is ON and the buzzer sounds when the ECM on the engine is abnormal.
 - ② Check the ECM of the engine.
- ※ Please contact Hyundai service center in your area.

(8) Preheat pilot lamp

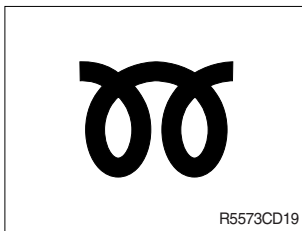


- ① When engine preheating switch is turned ON, pilot lamp comes ON.
- ② Refer to the preheating switch for details.

(9) Travel speed pilot lamp(High)

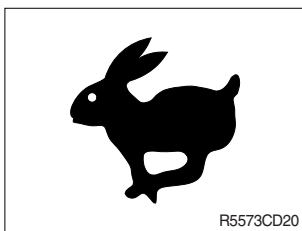


- ① When this lamp turned ON, the machine travel high speed.
- ② Refer to the travel speed control switch for details.

(10) Travel speed pilot lamp(Low)

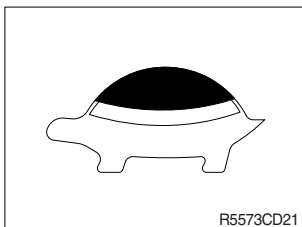


- ① When this lamp turned ON, the machine travel low speed.
- ② Refer to the travel speed control switch for details.

(11) Brake oil pressure warning lamp

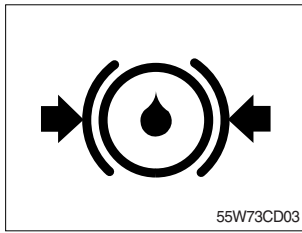


- ① The lamp lights ON when the oil pressure of service brake drops below the normal range.
- ② When the lamp is ON, stop the engine and check for its cause.
- ※ **Do not operate until any problems are corrected.**

(12) Parking lock pilot lamp

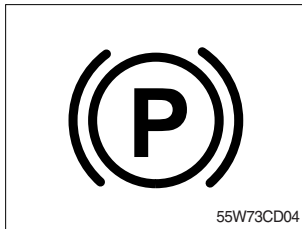


- ① When the parking brake is actuated, the lamp lights ON.
- ※ **Check the lamp is OFF before driving.**

(13) Ram lock pilot lamp

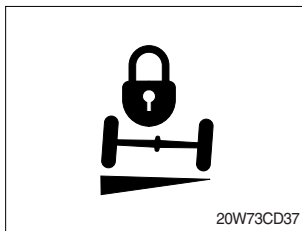

- ① This pilot lamp lights ON when ram lock switch is rear position.
- ② Also, the pilot lamp lights ON when the parking switch is ON or service brake is applied.

(14) Head light high beam pilot lamp

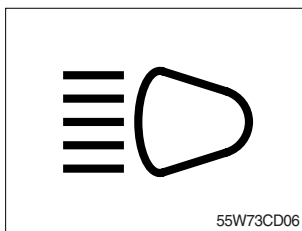

- ① This lamp is ON when the head light switch is high beam position or passing function.
- ② When passing other machines ahead, this lamp must be used for a few seconds to give other machines warning for a few seconds.


(15) M mode pilot lamp



- ① This lamp is ON when the M mode switch is pressed.


3) SWITCHES

(1) Buzzer stop switch

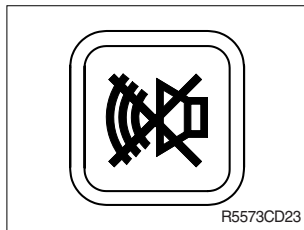


- ① When the starting switch is turned ON first, normally the alarm buzzer sounds for 6 seconds during lamp check operation.
- ② The red lamp lights ON and the buzzer sounds when the machine has a problem.
In this case, press this switch and buzzer stops, but the red lamp lights until the problem is cleared.

(2) M mode switch

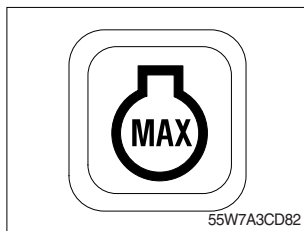


- ① This switch is used to maximum power.
- ② When this switch is pressed, the M mode pilot lamp is ON or OFF.

(3) Hour adjust switch

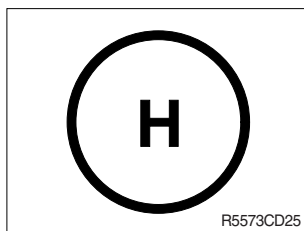

- ① This switch is used to adjust hour.
- ② The switch is pressed, hour is increased.

(4) Minute adjust switch

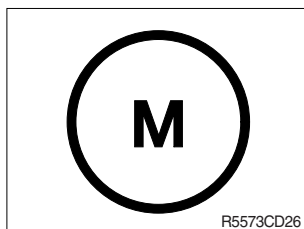

- ① This switch is used to adjust minute.
- ② The switch is pressed, minute is increased.