


# 11. RCV LEVER OPERATING PATTERN

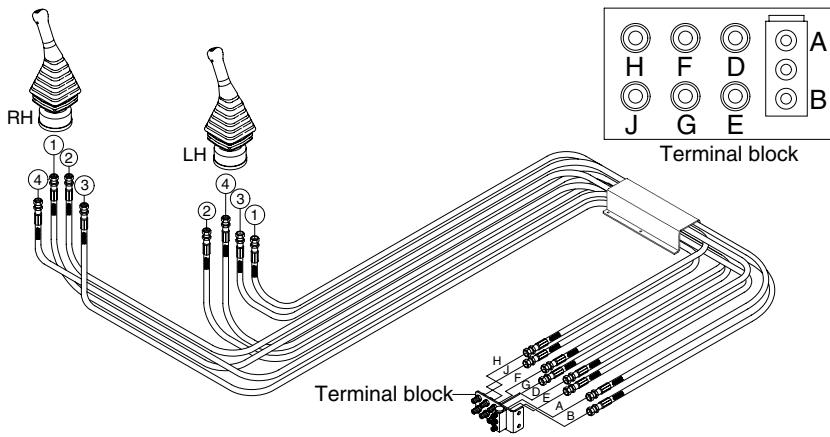


※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

5594OP12

Pattern	Operation		Control function	Hose connection (port)				
	Left	Right		RCV lever	Change of Terminal block			
					From	To		
ISO Type			Left	1 Arm out	②	D	-	
				2 Arm in	④	E	-	
				3 Swing right	③	B	-	
				4 Swing left	①	A	-	
	Hyundai			Right	5 Boom lower	④	G	-
					6 Boom raise	②	F	-
					7 Bucket out	①	H	-
					8 Bucket in	③	J	-
A Type			Left	1 Boom lower	②	D	J	
				2 Boom raise	④	E	H	
				3 Swing right	③	B	-	
				4 Swing left	①	A	-	
	Hyundai			Right	5 Arm out	④	G	D
					6 Arm in	②	F	E
					7 Bucket out	①	H	-
					8 Bucket in	③	J	-
B Type			Left	1 Boom lower	②	D	J	
				2 Boom raise	④	E	H	
				3 Bucket in	③	B	F	
				4 Bucket out	①	A	G	
	Hyundai			Right	5 Arm out	④	D	D
					6 Arm in	②	F	E
					7 Swing right	①	H	B
					8 Swing left	③	J	A
C Type			Left	1 Swing right	②	D	J	
				2 Swing left	④	E	H	
				3 Arm in	③	B	F	
				4 Arm out	①	A	G	
	Hyundai			Right	Same as ISO type			

## RCV LEVER OPERATING PATTERN(option, A type)

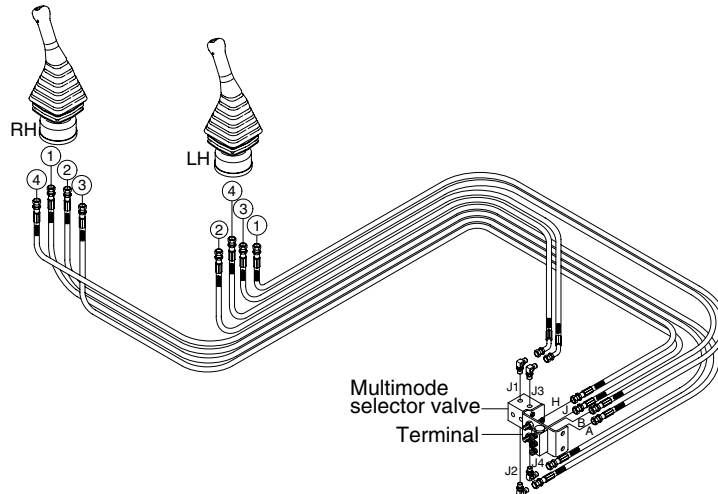


5594OP14

Pattern	Operation		Control function	Hose connection (port)		
	Left	Right		RCV lever	MCV port	
A type			Left	1 Boom lower	②	J1
				2 Boom raise	④	J3
				3 Bucket out	③	B
				4 Bucket in	①	A
			Right	5 Arm out	④	J2
				6 Arm in	②	J4
				7 Swing right	①	H
				8 Swing left	③	J

1) The machine control pattern can easily be changed from the "ISO" type to the "A" type by changing the position of the lever.


**⚠ Before starting the machine, check the lever position of multimode selector valve and actual operating of attachment.**

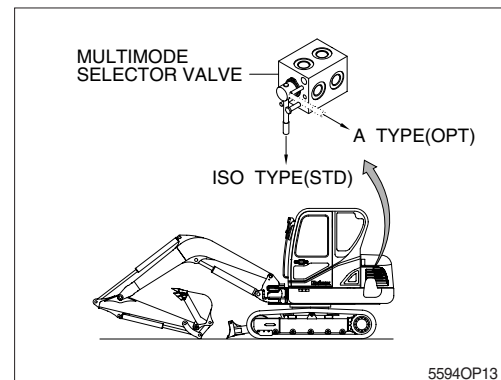

5594OP13

### 2) Change of operating pattern (ISO → A type)

- (1) Loosen bolt (11).
- (2) Move lever from the "ISO" type to "A" type position.
- (3) After setting the lever, tighten bolt to secure lever.

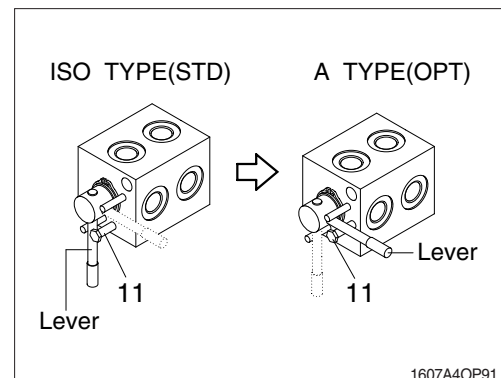

1607A4OP91