



3. SWITCHES

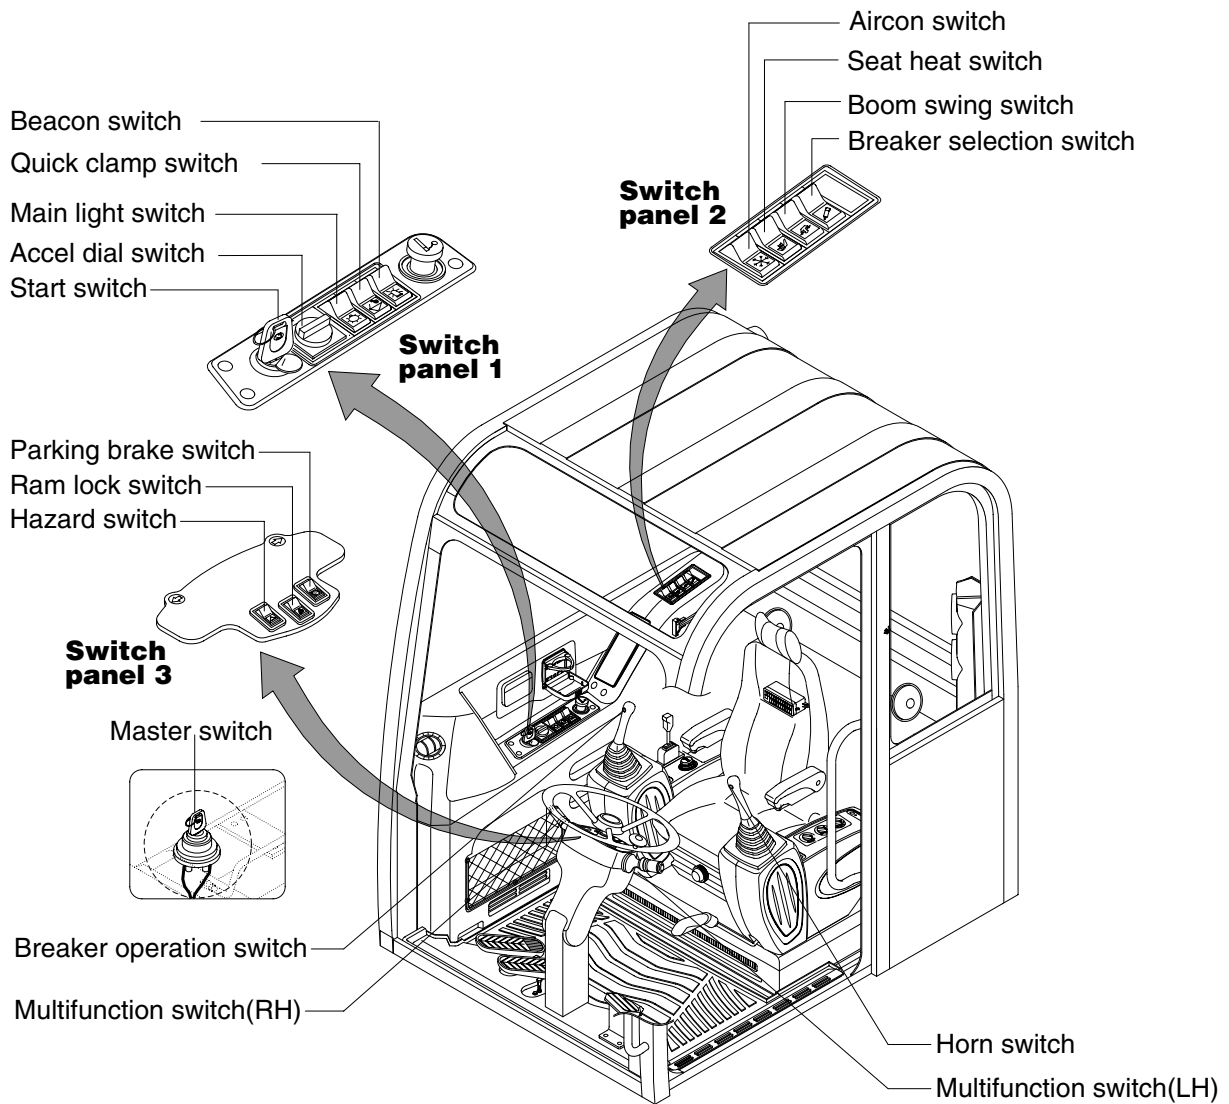

55W7A3CD30

1) STARTING SWITCH

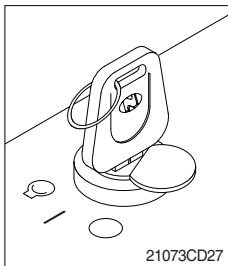


(1) There are three positions, OFF, ON and START.

- ○ (OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ◐ (START) : Use when starting the engine.

Release key immediately after starting.


※ Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.

2) ACCEL DIAL

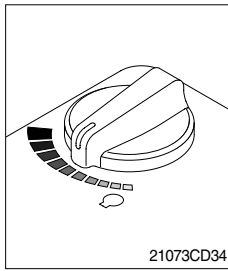


- (1) There are 10 dial setting.
- (2) Setting 1 is low idle and setting 10 is high idle.
 - By rotating the accel dial to right : Engine speed increases.
 - By rotating the accel dial to left : Engine speed decreases.

3) MAIN LIGHT SWITCH

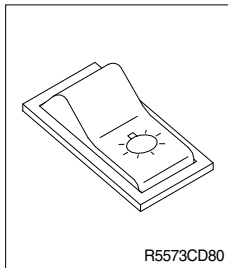


- (1) This switch use to operates the head light and work light by two step.
 - First step : Head light and cluster illumination lamp comes ON.
 - Second step : Work light comes ON. Also, the below indicator lamp comes ON.

4) AIRCON SWITCH(Optional)

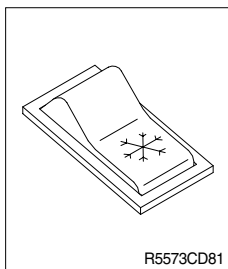


- (1) This switch use to operates the air conditioner.
- (2) Refer to the air conditioner and heater for detail operation.

5) BREAKER SELECTION SWITCH(Optional)

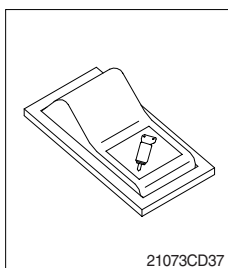


- (1) This switch is used to select breaker.
- ※ **The breaker operates only when this switch is selected.**

6) BEACON SWITCH(Optional)

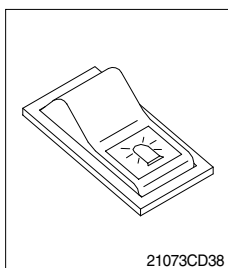

- (1) This switch turns ON the rotary light on the cab.
- (2) The below indicator lamp is turned ON when operation this switch.


7) QUICK CLAMP SWITCH(Optional)

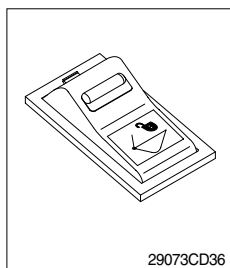

(1) This switch is used to engage or disengage the moving hook on quick clamp.

※ Refer to the page 8-6 for details.

8) MASTER SWITCH

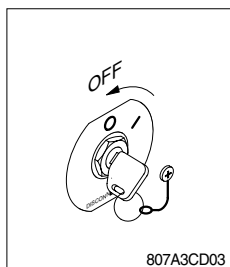


(1) This switch is used to shut off the entire electrical system.

(2) I : The battery remains connected to the electrical system.

O : The battery is disconnected to the electrical system.


※ **Never turn the master switch to O(OFF) with the engine running. It could result in engine and electrical system damage.**

9) HORN SWITCH

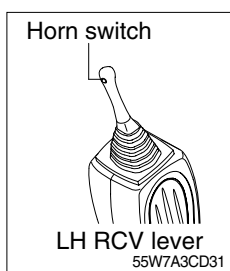


(1) This switch is at the top of left side control lever.
On pressing, the horn sounds.

10) BREAKER OPERATION SWITCH

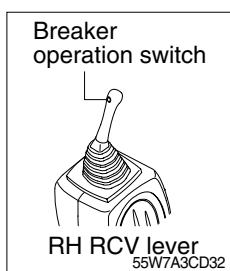

(1) On pressing this switch, the breaker operates only when the breaker selection switch on the switch panel is selected.

11) BOOM SWING SWITCH(Optional)

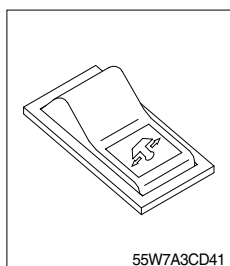


(1) This switch is used to turn boom direction of machine by control lever.

(2) The indicator lamp turned ON when selected this switch.

(3) See page 4-7(Operation of working device).

12) RH MULTI FUNCTION SWITCH

(1) Forward or reverse lever

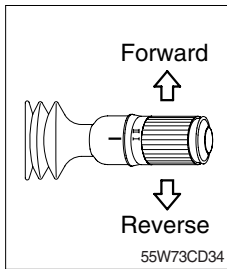

① This lever changes travel direction of machine.

- Forward : Machine moves forward
- Reverse : Machine moves backward


▲ Travel direction will be reversed if lower structure is positioned with dozer in front.

② The warning buzzer sounds when the lever is in the reverse position.

▲ If this lever is not in the neutral position, engine does not started.

▲ Be sure to stop the machine when changing the direction forward or backward while traveling.

(2) Travel speed switch

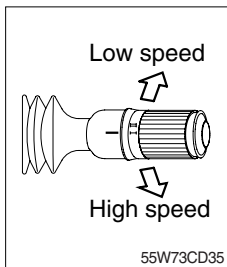


① This switch is for selecting travelling speed between high and low.

- Low speed(I) : 11.1km/hr(6.9mph)
- High speed(II) : 30km/hr(18.6mph)

▲ In case of changing the travel speed, be sure to stop the machine completely.

13) LH MULTI FUNCTION SWITCH

(1) Direction indication lamp switch

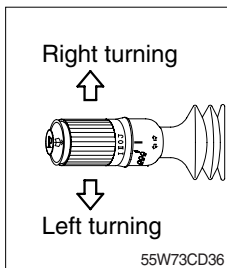


① This switch is used to warn or signal the turning direction of the machine to other machines or equipment.

② Push the lever to forward for turning right, pull the lever to backward for turning left.

③ The turning pilot lamp comes ON at the switch panel and the horn sounds.

(2) Dimmer switch

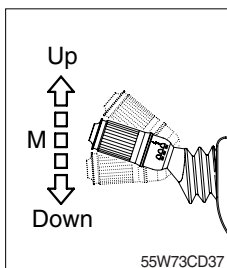


① This switch is used to turn the head lights direction.

② Switch positions.

- Up : To flash for passing
- Middle : Head lights low beam ON
- Down : Head lights high beam ON


③ If you release the switch when it's in up position, the switch will return to middle.

(3) Horn switch

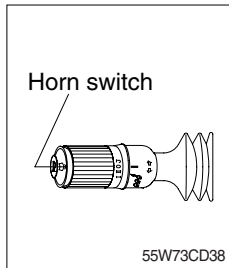


- ① This switch is at the end of left side multifunction switch. On pressing, the horn sounds.

(4) Wiper switch

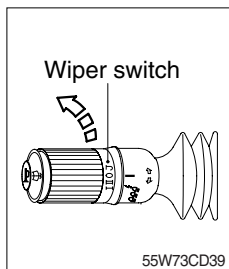


- ① When the switch is in J position, the wiper moves intermittently.
- ② When placed in I or II position, the wiper moves continuously.

(5) Washer switch

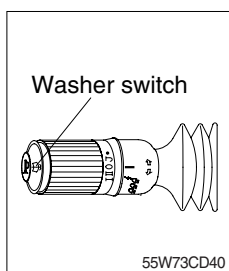


- ① If push the washer switch, washer liquid will be sprayed and the wiper will be activated 3~4 times.
- ※ Check the quantity of washer liquid in the tank. If the level of the washer liquid is LOW, add the washer liquid(In cold, winter days) or water. The capacity of the tank is 1.5 liter.

14) RAM LOCK SWITCH

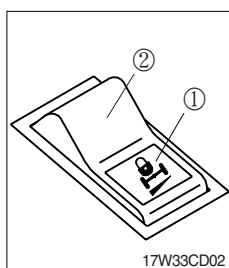


- (1) This switch activate front axle oscillation cylinder to locking position for increase of stability.
 - Push rear(①) : Set front axle to locking position for excavation work or travels even ground. Also, the ram lock warning lamp comes ON at the warning indicator.
 - Push front(②) : Front axle will be oscillate depend on ground condition when the machine travel uneven ground.

15) PARKING BRAKE SWITCH

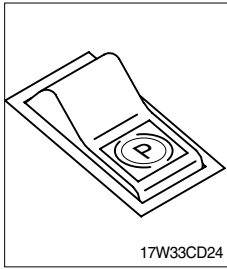

- (1) This switch is used to operate parking brake.
- (2) On pressing the switch, the below indicator lamp is turned ON and the pilot lamp comes ON at the warning indicator.


16) HAZARD SWITCH

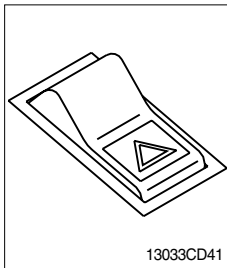

- (1) Use for parking, or roading machine.
- (2) LH and RH turn signal lamps come ON at the same time by this switch.
※ If the switch is left ON for a long time, the battery may be discharged.


17) TURNING PILOT LAMP

(1) Left turning pilot lamp

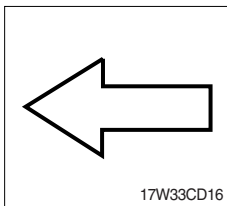


- ① This lamp flashes with sound when the LH multifunction switch is move to backward position.

(2) Right turning pilot lamp

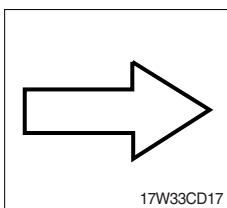

- ① This lamp flashes with sound when the LH multifunction switch is move to forward position.

18) HEATED SEAT SWITCH(Optional)

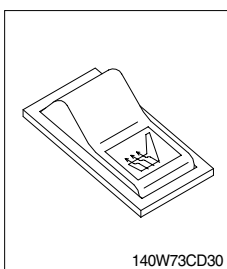

- (1) This switch is used to heat the seat.
- (2) On pressing the switch the below indicator lamp is turned ON.
 - Heater operating temperature : $28 \pm 3.5^{\circ} \text{C}$
 - Heater operating cancel temperature : $37 \pm 3^{\circ} \text{C}$